

Manuals.plus /

› Westpoint /

› Westpoint WYS-1323I Full-Size Dishwasher User Manual

## Westpoint WYS-1323I

# Westpoint WYS-1323I Full-Size Dishwasher User Manual

Model: WYS-1323I

## 1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before using your dishwasher. Keep it for future reference. This appliance is intended for household use only.

- Ensure the dishwasher is properly installed and grounded by a qualified technician.
- Do not allow children to operate, play with, or crawl inside the dishwasher.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Never touch the heating element during or immediately after use.
- Load sharp items so they are not likely to damage the door seal or interior.
- In case of a malfunction, switch off the appliance and disconnect it from the power supply before attempting any repairs. Contact authorized service personnel.

## 2. PRODUCT OVERVIEW

The Westpoint WYS-1323I is a full-size dishwasher designed for efficient and hygienic cleaning of your dishes. It features 13 place settings, 8 washing programs, and a durable stainless steel interior.



Front view of the Westpoint WYS-13231 dishwasher, showcasing its sleek stainless steel finish and integrated control panel.



Angled view of the Westpoint WYS-1323I dishwasher, highlighting its compact yet spacious design.

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking and Placement

Carefully remove all packaging materials. This is a freestanding dishwasher. Place the appliance on a flat, stable surface, ensuring it is level using the adjustable feet. Allow adequate space for door opening and closing.

### 3.2 Water Connection

Connect the water inlet hose to a cold water supply. Ensure all connections are tight to prevent leaks. The dishwasher is equipped with a water softening device to reduce water hardness, which helps protect your dishes and the appliance.



#### **WATER SOFTENING DEVICE**

This dishwasher is equipped with a water softening device, which can lower the hardness of inlet water. It helps to protect and preserve the quality of your dishes.



This image illustrates the water softening process within the dishwasher, showing dishes submerged in water. The water softening device helps reduce mineral buildup and improve cleaning performance.

### **3.3 Drain Connection**

Connect the drain hose to your household drainage system. Ensure the hose is not kinked or obstructed to allow proper water drainage.

### **3.4 Electrical Connection**

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 241 Volts and has a power consumption of 1920 Watts. Do not use extension cords or adapters.

## **4. OPERATING INSTRUCTIONS**

### **4.1 Control Panel**

The dishwasher features a touch control panel with an LED display for easy program selection and monitoring. Salt and rinse aid warning lights indicate when these consumables need refilling.



### 8 PROGRAMS

There are 8 washing programs for you to choose according to the type of utensils and the degree of soiling


The control panel displays various program icons, including Prewash, Hybrid, Super, Speed, ECO, Hygiene, Glass, and Intensive, along with a digital timer.

## 4.2 Loading the Dishwasher

Proper loading ensures optimal cleaning results. The dishwasher has an adjustable upper basket with cup racks and pot holders, and a lower basket with a cutlery basket and foldable front and rear racks for flexible loading.



Interior view of the dishwasher showing the upper and lower racks, designed for efficient loading of various dishware.

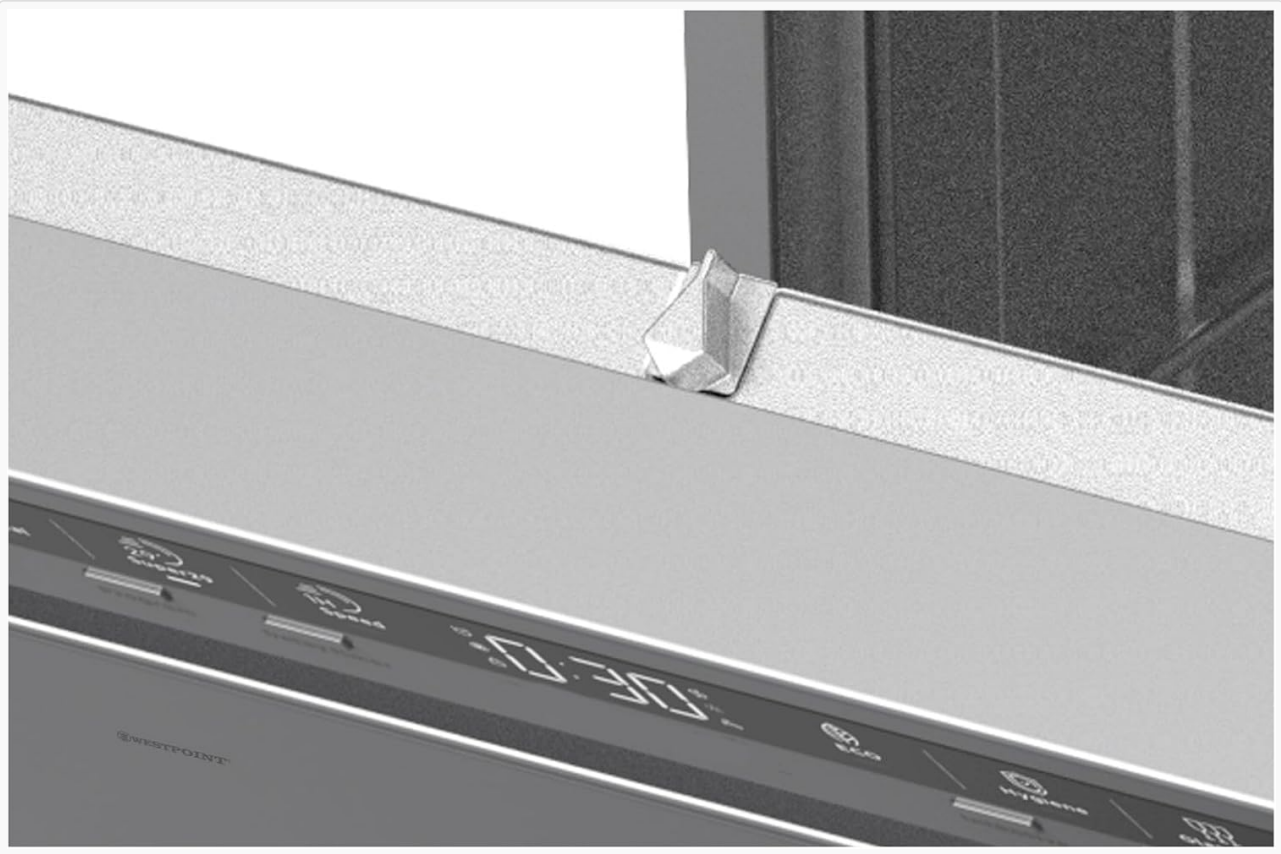

A close-up view of the upper rack's height adjustment mechanism, allowing flexibility for taller items in the lower basket.

### 4.3 Program Selection

Choose from 8 washing programs based on the type and soil level of your dishes:

- **Prewash 45°C:** For rinsing dishes that will be washed later.
- **Hybrid 60°C:** A balanced program for mixed loads.
- **Super 60°C:** For heavily soiled dishes and pots.
- **Speed 55°C:** A quick wash for lightly soiled items.
- **ECO 50°C:** Energy-efficient program for normal soil, using lower temperatures and less water.
- **Hygiene 70°C:** High-temperature wash for maximum sanitization.
- **Glass 40°C:** Gentle wash for delicate glassware.
- **Intensive 65°C:** For very heavily soiled items and dried-on food.



#### GLASS CARE

The Glass program of this dishwasher is a dedicated wash program that cleans your delicate glassware at 40 °C. Your glass bowls, glasses, and more could be cleaned efficiently



This image depicts a wine glass being gently washed, illustrating the effectiveness of the dedicated Glass program for delicate items.

## 4.4 Special Functions

- **Half Load Setting:** Allows you to wash smaller loads, saving water and energy without waiting for a full dishwasher.
- **Intensive Drying:** Rinses dishes with hot water at the end of the cycle, promoting condensation on the stainless steel interior for effective drying.
- **Delay Timer:** Allows you to postpone the start of a wash cycle.

## 5. MAINTENANCE AND CARE

### 5.1 Filter System

The dishwasher is equipped with 3 eco-friendly filters. Regularly clean the filter system to ensure optimal performance and prevent blockages. Refer to the detailed instructions in the included user manual for filter removal and cleaning procedures.



An interior view of the dishwasher, focusing on the lower rack and the filter system located at the bottom, which requires regular cleaning.

## 5.2 Cleaning the Interior and Exterior

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the door seal regularly to remove food particles.
- Run a dishwasher cleaning cycle periodically using a specialized dishwasher cleaner.

## 5.3 Winterization (if applicable)

If the dishwasher is to be left in an unheated location during winter, ensure all water is drained from the appliance to

prevent freezing and damage.

## 6. TROUBLESHOOTING

---

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press start.
Dishes are not clean	Improper loading; clogged spray arms; insufficient detergent; clogged filters.	Reload dishes correctly; clean spray arm nozzles; use appropriate detergent; clean filters.
Error message on display	Specific fault detected by the system.	Refer to the full user manual for specific error codes. Try resetting the dishwasher by turning it off and on.
Water leakage	Hose connections loose; door seal damaged; excessive suds.	Check and tighten hose connections; inspect door seal for damage; use less detergent. The dishwasher has leak protection.
Dishwasher is noisy	Dishes rattling; foreign object in pump; motor noise.	Rearrange dishes; check for foreign objects; some motor noise is normal (49 dB).

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	Westpoint
Model	WYS-1323I
Installation Type	Freestanding
Capacity	13 Place Settings
Number of Programs	8
Voltage	241 Volts
Power	1920 Watts
Product Dimensions (WxDxH)	59.8 x 59.8 x 84.5 cm
Item Weight	42 Kilograms
Material Type	Stainless Steel Metal
Control Type	Touch
Noise Level	49 dB
Special Features	Adjustable Height, Leak Protection, Delay Timer, Digital Display, Half Load
Included Components	User Manual

## 8. WARRANTY AND SUPPORT

This Westpoint WYS-1323I dishwasher comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, service requests, or to inquire about spare parts, please contact Westpoint customer support:

- **Website:** [www.westpoint.com](http://www.westpoint.com) (placeholder)
- **Email:** [support@westpoint.com](mailto:support@westpoint.com) (placeholder)
- **Phone:** +1-800-XXX-XXXX (placeholder)

When contacting support, please have your model number (WYS-1323I) and purchase date ready.