

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Trevi](#) /
- › [Trevi SLD 3850 Digital Alarm Clock User Manual](#)

Trevi SLD 3850

Trevi SLD 3850 Digital Alarm Clock User Manual

Model: SLD 3850

INTRODUCTION

Thank you for choosing the Trevi SLD 3850 Digital Alarm Clock. This device combines a digital clock, alarm, calendar, and thermometer into a compact and user-friendly design. Please read this manual carefully to ensure proper setup and operation of your new alarm clock.



Image: Front view of the Trevi SLD 3850 Digital Alarm Clock, displaying the time, date, and current temperature on its large LCD screen.

COMPONENTS AND CONTROLS

Familiarize yourself with the various parts and control buttons of your Trevi SLD 3850 alarm clock.



Image: Top view of the Trevi SLD 3850 Digital Alarm Clock, highlighting the control buttons for setting time, alarm, and snooze/light functions.

- **LCD Display:** Shows time, date, day of the week, and temperature.
- **SET Button:** Used to enter time/date/alarm setting mode.
- **UP/DOWN Buttons:** Used to adjust values during setting, and to switch between 12/24-hour format or Celsius/Fahrenheit.
- **ALARM ON/OFF Button:** Activates or deactivates the alarm.
- **SNOOZE/LIGHT Button:** Activates the snooze function when the alarm sounds, or illuminates the display backlight.
- **Battery Compartment:** Located on the back, for battery installation.

SETUP

1. Battery Installation

1. Open the battery compartment cover located on the back of the unit.
2. Insert the required batteries (e.g., 2 x AAA, not included) according to the polarity indicators (+ and -) inside the compartment.
3. Close the battery compartment cover securely.

4. The display will light up, and the clock will be ready for initial setup.

2. Setting Time and Date

1. Press and hold the **SET** button for approximately 3 seconds until the hour digits start flashing.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **SET** again to confirm the hour and move to setting the minutes.
4. Use the **UP** or **DOWN** buttons to adjust the minutes.
5. Continue pressing **SET** to cycle through and set the year, month, and day using the **UP** or **DOWN** buttons for adjustment.
6. After setting the day, press **SET** one last time to exit the setting mode.

3. Setting Temperature Unit (Celsius/Fahrenheit)

In normal time display mode, press the **DOWN** button to toggle between Celsius (°C) and Fahrenheit (°F) temperature units.

4. 12/24-Hour Format Selection

In normal time display mode, press the **UP** button to switch between 12-hour and 24-hour time formats.

OPERATING INSTRUCTIONS

1. Setting the Alarm

1. Press the **SET** button once (short press) to display the current alarm time.
2. While the alarm time is displayed, press and hold the **SET** button for approximately 3 seconds until the alarm hour digits start flashing.
3. Use the **UP** or **DOWN** buttons to adjust the alarm hour.
4. Press **SET** again to confirm the alarm hour and move to setting the alarm minutes.
5. Use the **UP** or **DOWN** buttons to adjust the alarm minutes.
6. Press **SET** one last time to exit the alarm setting mode.

2. Activating/Deactivating the Alarm

Press the **ALARM ON/OFF** button to toggle the alarm function. An alarm icon (bell symbol) will appear on the display when the alarm is active and disappear when it is off.

3. Snooze Function and Backlight

- **Snooze:** When the alarm sounds, press the **SNOOZE/LIGHT** button to temporarily silence the alarm. The alarm will sound again after approximately 5 minutes.
- **Backlight:** In normal display mode, press the **SNOOZE/LIGHT** button to illuminate the display for a few seconds.

4. Stopping the Alarm

To stop the alarm completely after it sounds (without snooze), press any button other than the **SNOOZE/LIGHT** button, or let it ring for its full duration (typically 1 minute) after which it will automatically stop and reset for the next day.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Battery Replacement:** When the display dims or functions become erratic, replace the batteries with new ones. Ensure correct polarity.
- **Storage:** If the unit will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are dead or inserted incorrectly.	Replace batteries with new ones, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm icon is visible on the display. Re-check alarm time settings.
Incorrect time/date.	Time/date was not set correctly or batteries were removed.	Re-set the time and date following the "Setting Time and Date" instructions.
Temperature reading seems inaccurate.	Unit is placed near a heat source or in direct sunlight.	Relocate the clock to a stable room temperature environment.

SPECIFICATIONS

Model: SLD 3850

Brand: Trevi

Display Type: Digital LCD

Functions: Clock, Alarm, Calendar, Thermometer

Special Features: Snooze function, Backlight

Power Source: Battery Powered (Batteries required: Yes, not included)

Product Dimensions: 10 x 3.81 x 3 cm

Weight: 110 g

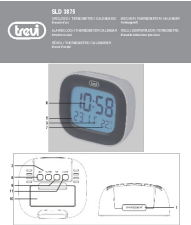





Material: Kunststoff (Plastic)

Color: White (for this specific model variant)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact Trevi customer service directly. Keep your purchase receipt as proof of purchase.



	<p>Trevi SLD 3875 Digital Alarm Clock, Thermometer, and Calendar User Manual</p> <p>Comprehensive user manual for the Trevi SLD 3875 digital alarm clock, thermometer, and calendar. Learn how to set the time, date, alarm, use the snooze function, and understand power and disposal information.</p>
	<p>Trevi SL 3054 Quartz Alarm Clock User Information and Warranty</p> <p>Detailed user information for the Trevi SL 3054 Quartz Alarm Clock, covering features, 24-month warranty details, and proper disposal guidelines according to EU regulations. Learn how to set the alarm, time, and use the snooze function.</p>
	<p>Trevi SLD 3200 T Clock and Weather Station User Manual</p> <p>Comprehensive user manual for the Trevi SLD 3200 T clock and weather station, covering setup, functions, alarm settings, comfort index, temperature units, moon phase, technical specifications, warranty, and disposal information.</p>
	<p>Trevi RC 80D2 DAB: Guida all'uso e Funzionalità Radio DAB/FM</p> <p>Manuale d'uso completo per la radio sveglia Trevi RC 80D2 DAB, che offre ricezione radio DAB, DAB+ e FM, funzioni di sveglia e un design moderno. Scopri come configurare e utilizzare il tuo dispositivo.</p>
	<p>Trevi MPV 1780 SB: Manuale Utente e Specifiche Tecniche</p> <p>Guida completa al lettore audio/video/MP3/pedometro Trevi MPV 1780 SB, incluse istruzioni d'uso, caratteristiche tecniche e avvertenze.</p>
	<p>Trevi XF 370 KB Portable Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the Trevi XF 370 KB portable speaker, covering setup, functions, Bluetooth connectivity, TWS pairing, USB/SD playback, AUX input, disco light effects, microphone use, recording, technical specifications, and disposal information.</p>