

West Bend AFWB10BK13

West Bend Double Up Air Fryer 10-Quart Capacity Instruction Manual

Model: AFWB10BK13

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the West Bend Double Up Air Fryer. This appliance is designed to provide a quick and easy way to cook delicious, healthier meals. Its 10-quart dual-basket capacity allows for cooking two different foods simultaneously, saving time and effort. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

3. PRODUCT FEATURES

- **Fifteen Air Fryer Cooking Presets:** One-touch time settings for Air Fry, Bake, Broil, Chicken, Dehydrate, Fish, Fries, Frozen, Keep Warm, Preheat, Roast, Reheat, Dual Cook, Sync Finish, Vegetables.
- **Dual Cook Function:** Runs both baskets at the same time, even at different temperatures, or mirrors settings for identical cooking.
- **Air Fryer Temperature Control:** Easily set temperature from 90°F to 400°F.
- **Convenient Features:** Designed with 1600 watts of cooking power, ergonomic handles, and an easy-to-read LCD display.
- **Air Fryer Baskets with Diamond Shield Coating:** Strong PFOA/PFOS-free, multi-layer diamond-infused nonstick coating prevents food from sticking for durability, easier cooking, and faster cleanup.
- **Easy-View Clear Window:** Monitor cooking progress without opening the baskets.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean:** Wash the frying baskets and racks with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit. Do not place it directly against a wall during operation to allow for proper airflow.
4. **Power:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

General Operation

1. Place food in the frying baskets. Ensure food does not exceed the MAX fill line.
2. Insert the baskets firmly into the air fryer.
3. Press the Power button to turn on the unit.
4. Select a preset function (e.g., Fries, Chicken) or manually adjust temperature and time using the +/- buttons.
5. Press the Start button to begin cooking.

6. The easy-view clear window allows monitoring of food without opening the baskets.

Dual Cook and Sync Finish Functions

- **Dual Cook:** To cook two identical items or mirror settings, set the desired temperature and time for one basket. Then, press the 'Dual Cook' button to apply the same settings to the second basket.
- **Sync Finish:** To cook two different items that finish at the same time, set the desired temperature and time for each basket individually. The air fryer will intelligently adjust the start times so both items are ready simultaneously.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your air fryer.

- **Unplug:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Baskets and Racks:** The frying baskets and racks feature a Diamond Shield nonstick coating for easy cleanup. Wash them with warm, soapy water. They are not dishwasher safe.
- **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior:** Clean the interior of the appliance with a damp cloth and mild detergent if necessary. Ensure no water enters the heating element area.
- **Storage:** Store the air fryer in a cool, dry place when not in use.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a grounded outlet. Check if the basket is fully inserted.
- **Food is not cooked evenly:** Shake or flip food halfway through the cooking process. Do not overload the baskets.
- **White smoke coming from the appliance:** This may indicate that fat from previous use is burning off. Clean the baskets and racks thoroughly after each use. If smoke is excessive or black, unplug immediately and contact customer support.
- **Air fryer smells like plastic:** A new appliance may emit a slight odor during its first few uses. This is normal and will dissipate. Ensure proper ventilation.

8. SPECIFICATIONS

Feature	Specification
Brand	West Bend

Model Name	AFWB10BK13
Capacity	10 Quarts (Dual Basket)
Output Wattage	1600 Watts
Voltage	120 Volts
Temperature Range	90°F - 400°F
Control Method	Touch (Digital LED Interface)
Nonstick Coating	Yes (Diamond Shield™ infused, PFOA/PFOS-free)
Dishwasher Safe	No (Baskets and racks are hand-wash recommended)
Product Dimensions	14.21"D x 15.75"W x 12.6"H
Item Weight	18.08 Pounds

9. WARRANTY AND SUPPORT

West Bend products are engineered for reliability and durability. For warranty information, product registration, or customer support, please visit the official West Bend website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, please refer to the contact information provided in your product packaging or on the official West Bend website: www.westbend.com

10. PRODUCT IMAGES



Front view of the West Bend Double Up Air Fryer, showcasing the digital control panel and dual baskets.

EXTRA-LARGE 10-QUART CAPACITY

2 5QT baskets to cook two foods, two ways



The air fryer highlighting its extra-large 10-quart capacity, suitable for cooking two foods in two ways.

15 PRESETS

Cook your favorite recipes with the touch of a button



A close-up of the digital control panel, illustrating the 15 one-touch cooking presets for various food types.

PTFE-FREE DIAMOND SHIELD™ INFUSED NON-STICK BASKETS

For enhanced durability and easy cleanup



View of the air fryer baskets, emphasizing the PTFE-free Diamond Shield™ infused non-stick coating for durability and easy cleanup.

EFFORTLESS CLEANING

Dishwasher-safe baskets and racks for easy cleanup



Demonstration of the effortless cleaning process, showing the removable baskets and racks.



Top-down view of the dual baskets, showing their internal structure and capacity.



Side view of the air fryer with both baskets

partially pulled out, revealing the interior space.