

West Bend TTWB2SBK13

West Bend 2-Slice Toaster Instruction Manual

Model: TTWB2SBK13

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

PRODUCT FEATURES

The West Bend 2-Slice Toaster is designed for convenience and consistent results. Key features include:

- **2 Wide Slots:** Two extra-wide and deep slots with self-centering guides accommodate various items like bread, bagels, and waffles.
- **Extra Lift:** A manual, high-lift lever simplifies the removal of toasted food.
- **Multi-Function:** User-friendly buttons offer four functions with backlit icons: Bagel, Waffle, Defrost, and Cancel.
- **Adjustable Browning:** A 7-level browning control knob allows for precise and consistent toasting.
- **Safety Features:** Equipped with Anti-Jam and Auto-Shut-Off for enhanced safety.
- **Easy-to-Clean:** Features a removable crumb tray for simple maintenance.



Image: The toaster features two wide slots, ideal for various bread types.



Image: The high-lift lever allows for easy retrieval of smaller items.



Image: Multi-function buttons for Bagel, Waffle, Defrost, and Cancel.

SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the toaster.
3. **Initial Burn-Off:** Before first use, operate the toaster empty on the highest browning setting (7) for a few cycles in a well-ventilated area. This will burn off any manufacturing residues and eliminate initial odors. A slight odor or smoke is normal during this process.
4. **Clean:** Wipe the exterior with a damp cloth. Do not immerse the toaster in water.

OPERATING INSTRUCTIONS

Follow these steps for optimal toasting results:

1. **Plug In:** Ensure the toaster is plugged into a suitable 120V AC electrical outlet.
2. **Place Food:** Insert one slice of bread, bagel, or waffle into each slot. The self-centering guides will hold the food in place.
3. **Adjust Browning:** Turn the browning control knob to your desired setting, from 1 (lightest) to 7 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust as needed.
4. **Select Function (if desired):**
 - **Bagel:** Toasts the cut side of bagels while warming the outer side.
 - **Waffle:** Optimized for toasting waffles.
 - **Defrost:** Defrosts and toasts frozen items.
5. **Start Toasting:** Push the toast lift lever down until it latches. The selected function button will illuminate.
6. **Cancel:** To stop toasting at any time, press the 'Cancel' button.
7. **Retrieve Food:** Once toasting is complete, the food will automatically pop up. Use the manual high-lift lever to raise smaller items for easier removal.



Image: A hand using the high-lift lever to retrieve toasted waffles.



Image: The adjustable browning control knob for precise toasting.

CARE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the electrical outlet and allow it to cool

completely before cleaning.

2. **Clean Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
4. **Do Not Immerse:** Never immerse the toaster in water or any other liquid.
5. **Storage:** When not in use, store the toaster in a clean, dry place.



Image: The removable crumb tray slides out for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your West Bend 2-Slice Toaster, refer to the following common problems and solutions:

- **Toaster does not turn on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the circuit breaker has tripped.

- **Food is not toasting evenly:**

- Ensure the food item is centered in the slots. The self-centering guides should adjust automatically.
- Adjust the browning control setting. Different types of bread may require different settings.

- **Food is stuck in the toaster:**

- **DO NOT** use metal utensils to remove food. Unplug the toaster and carefully use non-metallic tongs or a wooden utensil to dislodge the food.
- Ensure the crumb tray is clean and not overflowing, which could obstruct the toast lift mechanism.

- **Smoke or burning smell:**

- This may occur during initial use due to manufacturing residues. Ensure adequate ventilation.
- Check and clean the crumb tray. Accumulated crumbs can burn and cause smoke.
- If smoke persists, unplug the toaster immediately.

SPECIFICATIONS

Attribute	Value
Brand	West Bend
Model Number	TTWB2SBK13
Color	Black
Material	Stainless Steel
Product Dimensions	10.16"D x 6.69"W x 7.28"H
Wattage	750 watts
Number of Slices	2
Special Feature	High Lift Carriage
Number of Settings	7
Item Weight	2.33 Pounds
Voltage	120V
UPC	072244891096



Image: Product dimensions for the West Bend 2-Slice Toaster.

WARRANTY AND SUPPORT

The West Bend 2-Slice Toaster is covered by a **12-Month Limited Warranty**. For warranty claims, technical support, or product inquiries, please refer to the contact information provided in your product packaging or visit the official West Bend website.