

- Manuals.plus /
- > Cryfokt /
 - > Cryfokt Wireless Bluetooth Page Turner and Camera Shutter User Manual

Cryfokt Cryfokt1qh7kgiewt-12

Cryfokt Wireless Bluetooth Page Turner and Camera Shutter User Manual

Model: Cryfokt1qh7kgiewt-12 | Brand: Cryfokt

INTRODUCTION

This manual provides comprehensive instructions for the Cryfokt Wireless Bluetooth Page Turner and Camera Shutter. This compact device allows for remote control of various functions on your mobile phone, including page turning in e-books or social media, video playback control, and remote photo capture. Please read this manual carefully to ensure proper use and to maximize the device's functionality.

SETUP

1. Charging the Device

The device features a Type-C charging port. Use the included USB cable to connect the device to a power source (e.g., computer USB port, USB wall adapter). The indicator light will show charging status. A full charge ensures extended use.

Type C Interface

convenient to use



Image: The Cryfokt remote control connected to a Type-C USB cable for charging.

2. Bluetooth Pairing

1. Ensure the remote control is charged and powered on.
2. Activate Bluetooth on your mobile phone.
3. Search for available Bluetooth devices. The remote control should appear as a discoverable device.
4. Select the remote control from the list to initiate pairing. Once paired, the device will be ready for use.

ideal for most App and
webpage browsing: support
short video app, camera, and
book app



Image: The Cryfokt remote control positioned next to a smartphone, demonstrating its wireless connectivity.

OPERATING INSTRUCTIONS

Page Turning Functionality

This Bluetooth clicker is designed for browsing most applications and web pages. Pressing the left or right directional buttons allows for easy page navigation. This is particularly useful for e-reading applications or scrolling through social media feeds.

Easy to turn page with left or right button



Image: The Cryfokt remote control next to a smartphone displaying text, indicating its use for page turning.

Video Control

The remote supports basic video playback controls. The up and down directional buttons can be used for volume or brightness adjustments. Fast forward and rewind functions may be supported in some applications, typically by pressing the left/right buttons or holding them down.

Remote photo taking: Up to 32.8ft control distance



Image: The Cryfokt remote control shown with two smartphones displaying video content, illustrating its video scrolling capabilities.

Remote Photo Capture

To take photos remotely, open your phone's camera application. Press the dedicated camera button (often marked with a camera icon) on the remote. This allows for stable photo capture from a distance of up to 32.8 feet, ideal for selfies or group photos.

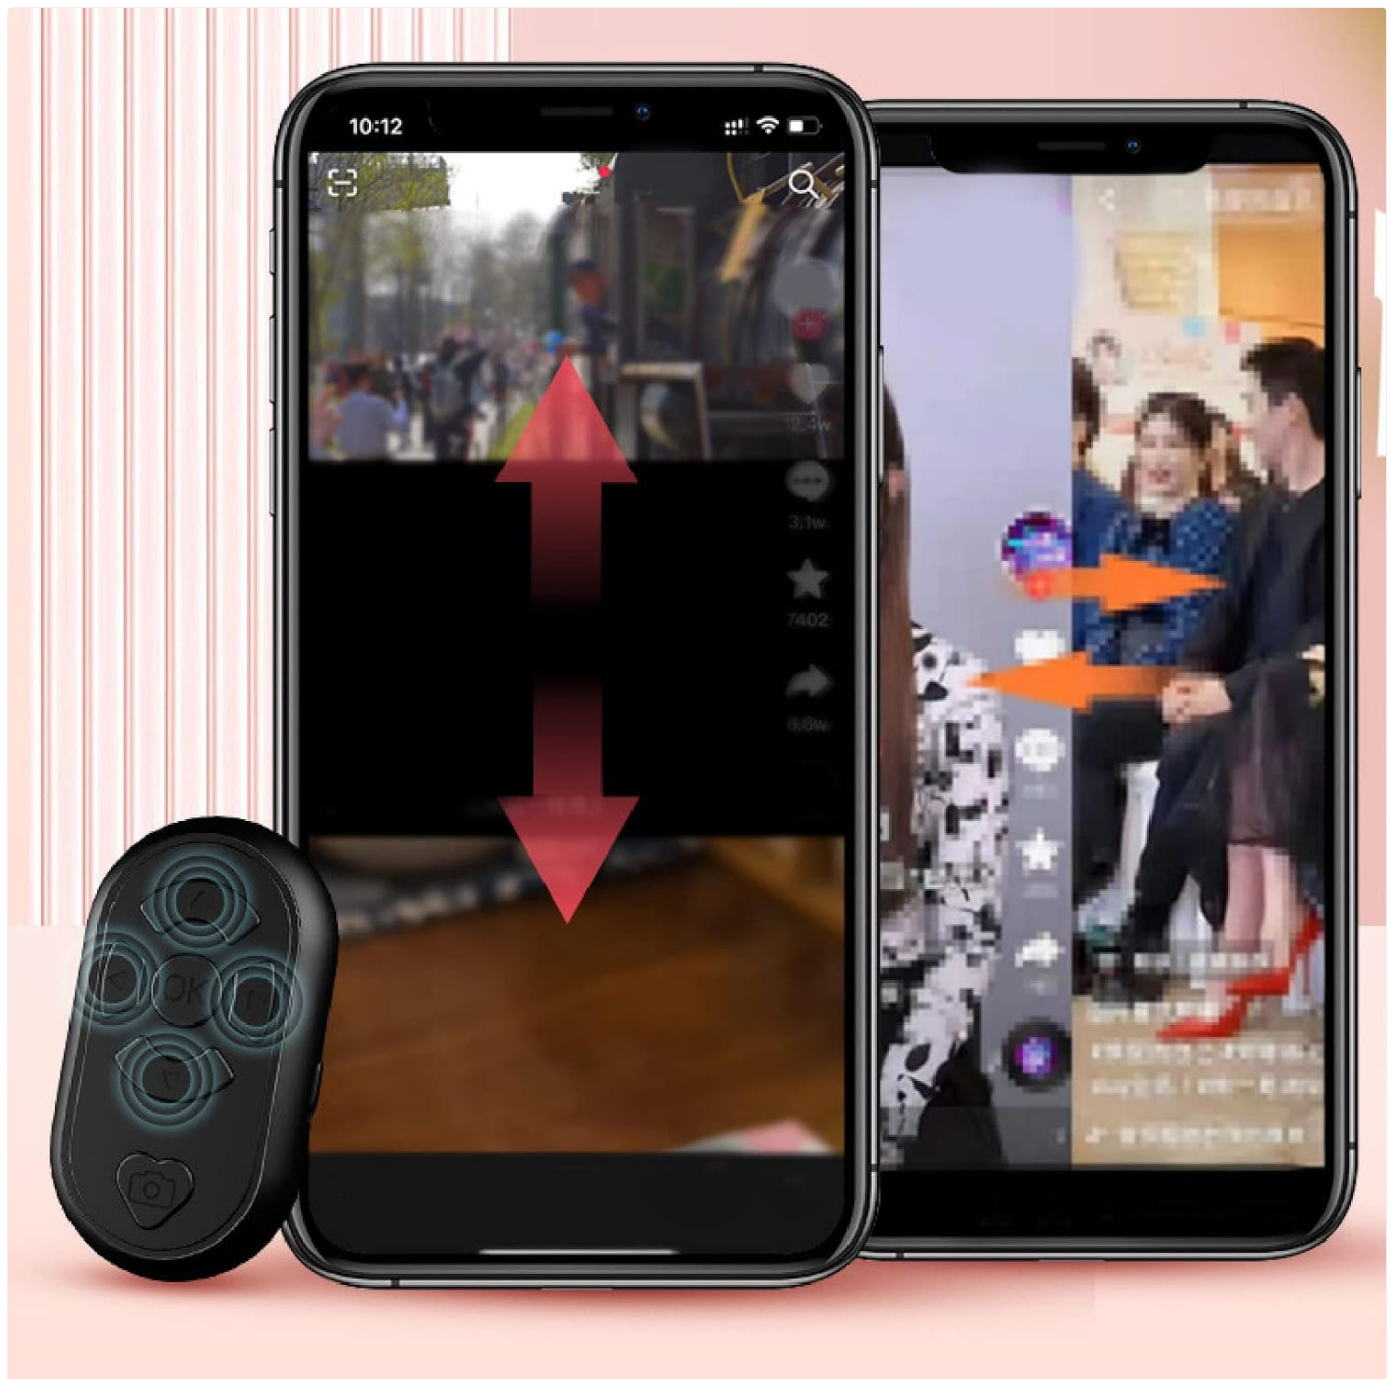


Image: A hand holding the Cryfokt remote control while a smartphone displays a selfie, demonstrating the remote photo capture function.

Button Functions Overview

- **OK Button (Center):** Acts as a tap on the center of the screen. In some apps, this may advance a page.
- **Left/Right Buttons:** Primarily for page turning (forward/backward) or scrolling. May also function as fast forward/rewind in video apps.
- **Up/Down Buttons:** Typically control volume or screen brightness.
- **Camera Button (Heart/Camera Icon):** Activates the camera shutter for remote photo taking.

MAINTENANCE

To ensure the longevity and optimal performance of your Cryfokt remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the surface.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Charge the device regularly, even if not in frequent use, to maintain battery health. Avoid overcharging for extended

periods.

- **Handling:** Handle the device with care to prevent drops or impacts, which could damage internal components.

TROUBLESHOOTING

If you encounter issues with your Cryfokt remote control, please refer to the following common solutions:

- **Device Not Pairing:**
 - Ensure the remote is sufficiently charged.
 - Make sure Bluetooth is enabled on your phone and the remote is within range.
 - Try turning off and on both the remote and your phone's Bluetooth.
 - Remove the device from your phone's paired devices list and attempt to pair again.
- **Buttons Not Responding:**
 - Verify the device is paired and connected.
 - Some applications may not fully support all remote functions. Test with different apps (e.g., a standard web browser or e-reader app).
 - For Android devices, check pointer speed settings. A very fast pointer speed might affect page turning responsiveness.
- **Cursor Appears on Screen:**
 - When a button is pressed, a mouse-like cursor may briefly appear on the screen. This is normal behavior as the remote simulates touch input. It should disappear after a few seconds if no further input is detected.
- **Video App Compatibility Issues:**
 - Functionality for fast forward/rewind in video applications (e.g., YouTube, Prime Video) can vary. Some apps may only support rewind or may navigate to the title selection screen when attempting to fast forward.
 - Full video control may not be universally supported across all streaming platforms.
- **Limited iOS/Windows Compatibility:**
 - While primarily designed for Android, some functions may work on iOS. However, full functionality, especially mouse cursor simulation, might be limited on iOS devices.
 - The device may not be compatible with Windows operating systems.

SPECIFICATIONS

Brand Name	Cryfokt
Product Model Number	Cryfokt1qh7kgiewt-12
Connectivity Technology	Bluetooth (BT4.0)
Features	Rechargeable
Controller Type	Android (Primary Compatibility)
Maximum Range	32.8 feet (10 meters)
Package Dimensions	9.2 x 5.6 x 2 cm; 30 g
First Available Date on Amazon.co.jp	2023/8/28

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For any product-related inquiries, technical support, or warranty claims, please refer to the seller's contact information or the platform where the product was purchased. Keep your proof of purchase for any potential claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CGSLGVLZ>

More documents and user manuals: <https://manuals.plus/>