

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FK Trading](#) /

› [FK Trading C16 Wireless Earbuds User Manual](#)

FK Trading C16

FK Trading Wireless Earbuds User Manual

Model: C16

INTRODUCTION

These FK Trading C16 Wireless Earbuds are designed to provide a high-quality audio experience with advanced Bluetooth 5.3 technology, comfortable fit, and extended battery life. They are suitable for various activities, including sports and daily use, offering clear sound and reliable performance.

WHAT'S IN THE BOX


- FK Trading C16 Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Eartips (S/M/L sizes)
- User Manual

PRODUCT OVERVIEW



Image: The FK Trading C16 Wireless Earbuds, showcasing both earbuds with earhooks and their open charging case. The earbuds are black with green LED accents, and the charging case features an LED display.

 ULTRA LONG PLAYTIME



USB-C Fast charging



8 HRS
Playtime



5 TIMES
Charge

Image: The earbuds are shown inside the charging case, which displays "100" on its LED screen, indicating full charge. Icons below illustrate 8 hours of playtime per charge and 5 additional charges from the case.

Key Features:

- **Bluetooth 5.3 Technology:** Ensures stable and fast wireless connection with low latency.
- **Extended Playback:** Up to 8 hours of playtime on a single charge, with the charging case providing an additional 32 hours.
- **Dual LED Display:** Digital display on the charging case shows battery levels for both the case and individual earbuds.
- **IP7 Waterproof Rating:** Designed to withstand sweat and water, suitable for workouts.
- **Secure & Comfortable Fit:** Ergonomic design with flexible earhooks and multiple eartip sizes (S/M/L) for a secure fit during physical activity.
- **Smart Touch Control:** Intuitive touch-sensitive controls for managing music, calls, and voice assistant.
- **HD Stereo Audio:** Features 6mm composite diaphragms for powerful bass and clear vocals.

SETUP GUIDE

1. Charging the Earbuds and Case:

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case. Ensure they are correctly seated.
2. Connect the USB charging cable to the charging port on the case and to a power source.
3. The LED display on the case will show the charging progress. When fully charged, the display will show "100".



Image: A close-up of the charging case's dual LED display, showing separate battery indicators for the left and right earbuds, and a percentage for the charging case itself.

2. Pairing with a Device:

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "C16" from the list.

4. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or LED indicator change).

OPERATING INSTRUCTIONS

Touch Controls:

The C16 earbuds feature sensitive touch controls on the outer surface of each earbud.



Image: A diagram illustrating the various functions controlled by touch on the earbud, including power on/off, call management, volume control, track skipping, and voice assistant activation.

Action	Left Earbud	Right Earbud
Play/Pause	Single Tap	Single Tap
Next Track	Double Tap	Double Tap

Action	Left Earbud	Right Earbud
Previous Track	Triple Tap	Triple Tap
Volume Up	Press and Hold (Right)	Press and Hold (Right)
Volume Down	Press and Hold (Left)	Press and Hold (Left)
Answer/End Call	Single Tap	Single Tap
Reject Call	Press and Hold (2s)	Press and Hold (2s)
Activate Voice Assistant	Long Press (3s)	Long Press (3s)

MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Eartips:** Remove eartips periodically and clean them with water and mild soap. Ensure they are completely dry before reattaching.
- **Water Resistance:** While the earbuds are IP7 waterproof, the charging case is not. Avoid exposing the charging case to water. Do not submerge the earbuds in water for extended periods.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged.
- **Temperature:** Avoid exposing the product to extreme temperatures (hot or cold) as this can affect battery life and performance.

IP7 WATER & SWEAT RESISTANT

Water won't ruin your workout with IP7 waterproof



Image: The earbuds are shown with water splashing on them, illustrating their IP7 water and sweat resistance, suitable for workouts.

TROUBLESHOOTING

Earbuds not pairing or connecting:

- Ensure both earbuds are charged.
- Turn off Bluetooth on your device and turn it back on.
- Delete "C16" from your device's Bluetooth list and try pairing again.
- Place earbuds back in the case, close the lid, wait a few seconds, then open to reset.

Only one earbud working:

- Ensure both earbuds are charged.
- Place both earbuds back into the charging case, close the lid, and then open it again. This often re-syncs them.
- Check if the non-working earbud's charging contacts are clean.

Low volume or poor sound quality:

- Adjust the volume on both your device and the earbuds.
- Ensure the eartips are properly sealed in your ear canal. Try different sized eartips.
- Clean any debris from the earbud's speaker mesh.
- Ensure there are no obstructions between the earbuds and your device.

Charging case not charging:

- Check the USB cable and power adapter for damage.
- Try a different USB port or power source.
- Ensure the charging port on the case is clean and free of debris.

SPECIFICATIONS

Model Name	C16
Connectivity Technology	Wireless (Bluetooth 5.3)
Earbud Playtime (Single Charge)	Up to 8 Hours
Total Playtime with Charging Case	Up to 40 Hours
Water Resistance Rating	IP7 (Earbuds only)
Control Type	Touch, Voice
Included Components	Earbuds, Charging Case, USB Cable, Eartips
Material	PC, Acrylonitrile Butadiene Styrene (ABS)
Item Weight	4 ounces