

Vetoper Mini Chainsaw-001

Vetoper Mini Chainsaw-001 User Manual

Model: Mini Chainsaw-001 | Brand: Vetoper

1. INTRODUCTION

Thank you for choosing the Vetoper Mini Chainsaw-001. This compact and lightweight battery-powered chainsaw is designed for small-scale tree trimming, pruning, and wood cutting tasks. Its efficient design and safety features make it suitable for various household and garden applications. Please read this manual thoroughly before operation to ensure safe and effective use of the product.

2. SAFETY INFORMATION

WARNING: Always wear appropriate personal protective equipment (PPE) including safety glasses, gloves, and hearing protection when operating the chainsaw.

- Keep hands and body clear of the chain when the chainsaw is running.
- Ensure the battery is removed when performing maintenance, cleaning, or when the tool is not in use.
- Do not operate the chainsaw in wet conditions or near flammable liquids or gases.
- Inspect the chainsaw for damage before each use. Do not operate if damaged.
- Maintain a firm grip with both hands on the chainsaw during operation.
- Be aware of kickback. Avoid cutting with the tip of the guide bar.
- Keep children and bystanders at a safe distance from the work area.
- Only use the chainsaw for its intended purpose: cutting wood.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Vetoper Mini Chainsaw
- 1 x Battery
- 1 x Chain
- 1 x Guide Plate Protection Case

- 1 x Gloves
- 1 x Splash Glasses
- 1 x Wall Charger
- 1 x Screwdriver
- 1 x User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your mini chainsaw:



Figure 4.1: Main components of the Vetoper Mini Chainsaw. Labels include Guide Plate, Chain Saw, Sprocket Cover, Protective Board, Variable Speed Trigger Switch, Battery Release Button, Cover Plate, Tensioning Knob, Security Lock Button, Spft Anti-slip Handle, and Battery Pack.

- **Guide Plate:** Supports the saw chain.
- **Chain Saw:** The cutting chain that rotates around the guide plate.
- **Sprocket Cover:** Protects the sprocket and chain mechanism.

- **Protective Board:** Provides additional safety during operation.
- **Variable Speed Trigger Switch:** Activates the chainsaw and controls speed.
- **Battery Release Button:** Used to detach the battery pack.
- **Cover Plate:** Secures the guide plate and chain.
- **Tensioning Knob:** Adjusts chain tightness.
- **Security Lock Button:** Prevents accidental starting.
- **Anti-slip Handle:** Ergonomically designed for secure grip.
- **Battery Pack:** Provides power to the chainsaw.

5. SETUP

5.1. Install the Battery

1. Ensure the chainsaw is off and the security lock button is engaged.
2. Align the battery pack with the battery slot at the base of the handle.
3. Slide the battery into place until it clicks securely.
4. To remove, press the battery release button and slide the battery out.

5.2. Install and Adjust the Chain

The chain must be installed correctly and tensioned properly for safe and efficient operation.

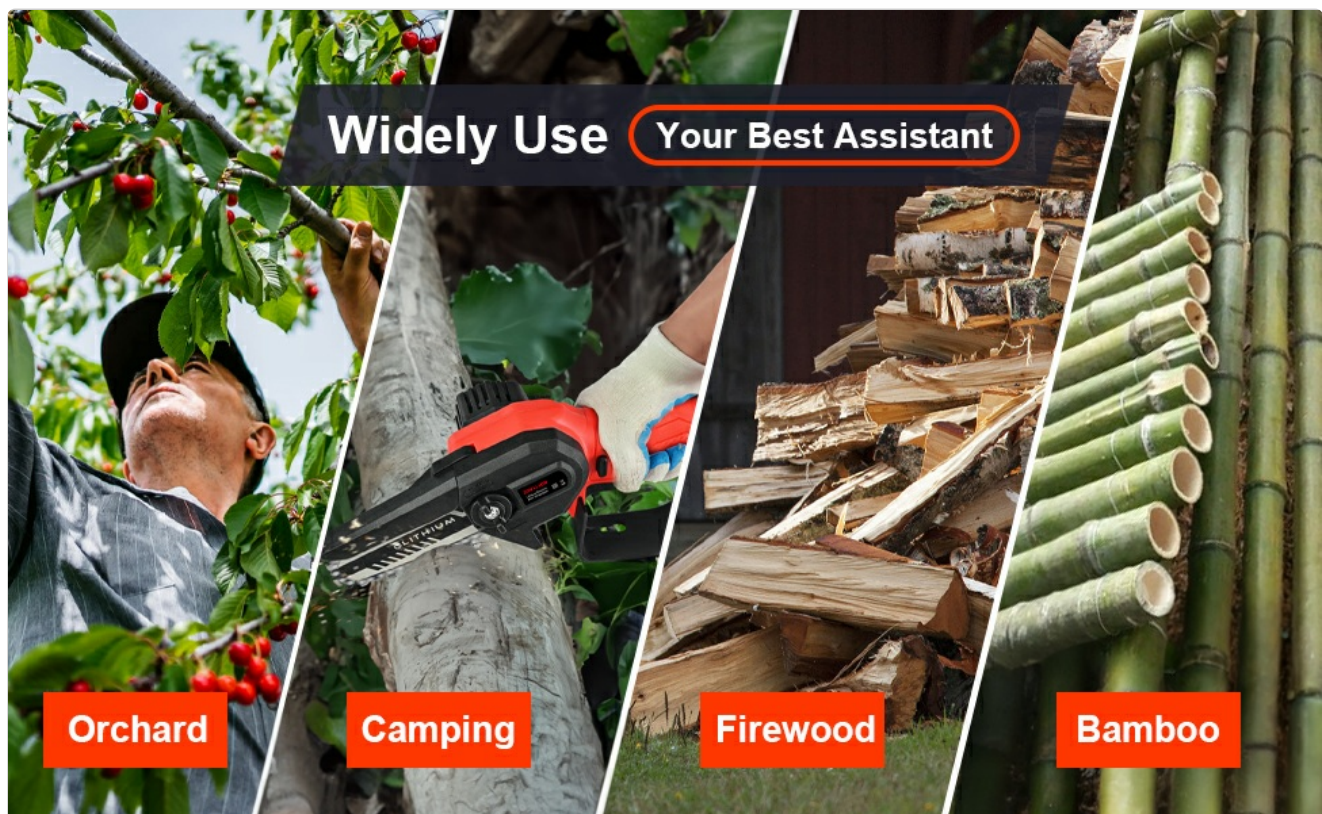 


Figure 5.1: Ensure the chain teeth are oriented in the correct cutting direction as indicated by the arrows.

1. Ensure the battery is removed.
2. Remove the sprocket cover and guide plate.
3. Carefully place the chain around the sprocket and guide plate, ensuring the cutting teeth face the correct direction (refer to Figure 5.1).
4. Reattach the guide plate and sprocket cover.

- Adjust the chain tension using the tensioning knob. The chain should be snug but still able to be pulled around the guide bar by hand. A common guideline is to expose approximately 0.12 inches of the chain when pulling down on it.

HOW TO ADJUST THE CHAIN TIGHTNESS

If the chain is too loose and jumping off track, please follow below steps to adjust



1. The chain loose



2. Tighten the screw and adjust the chain, expose 0.12inch when pulling down

PLEASE PAY ATTENTION TO THE DIRECTION OF CHAIN TEETH AS BELOW:

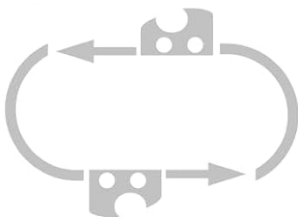 


Figure 5.2: Visual guide for adjusting chain tightness. The left image shows a loose chain, and the right image shows tightening the screw to achieve proper tension.

5.3. Lubricate the Chain

Proper lubrication is essential for chain longevity and cutting performance.



Figure 5.3: Apply bar and chain oil directly to the chain before each use. Run the chainsaw for a few seconds to distribute the oil evenly.

Tip: Do not operate the chainsaw without lubricating the guide bar and chain.

5.4. First Use Guidance Video

Watch this video for a visual guide on setting up and using your mini chainsaw for the first time.

Your browser does not support the video tag.

Video 5.1: Demonstrates the correct procedure for using a small electric chainsaw for the first time, including safety precautions and cutting techniques.

6. OPERATING INSTRUCTIONS

6.1. Starting and Stopping

1. Ensure the battery is fully charged and properly installed.
2. Wear all recommended PPE (safety glasses, gloves).
3. Hold the chainsaw firmly with both hands.
4. Press the security lock button, then squeeze the variable speed trigger switch to start the chainsaw.
5. Release the trigger switch to stop the chainsaw.

6.2. Cutting Techniques

- Always ensure the work area is clear of obstructions and bystanders.
- Identify the cutting line and ensure the branch or wood is stable.
- Begin cutting with the bottom of the guide bar, allowing the chain to pull the saw into the wood.
- Avoid forcing the saw; let the chain do the work.
- For larger branches, make an undercut first to prevent pinching and splintering.
- Be mindful of kickback, especially when cutting with the tip of the guide bar or when the chain pinches.



Figure 6.1: The mini chainsaw is suitable for various cutting tasks, including pruning branches and cutting small logs.

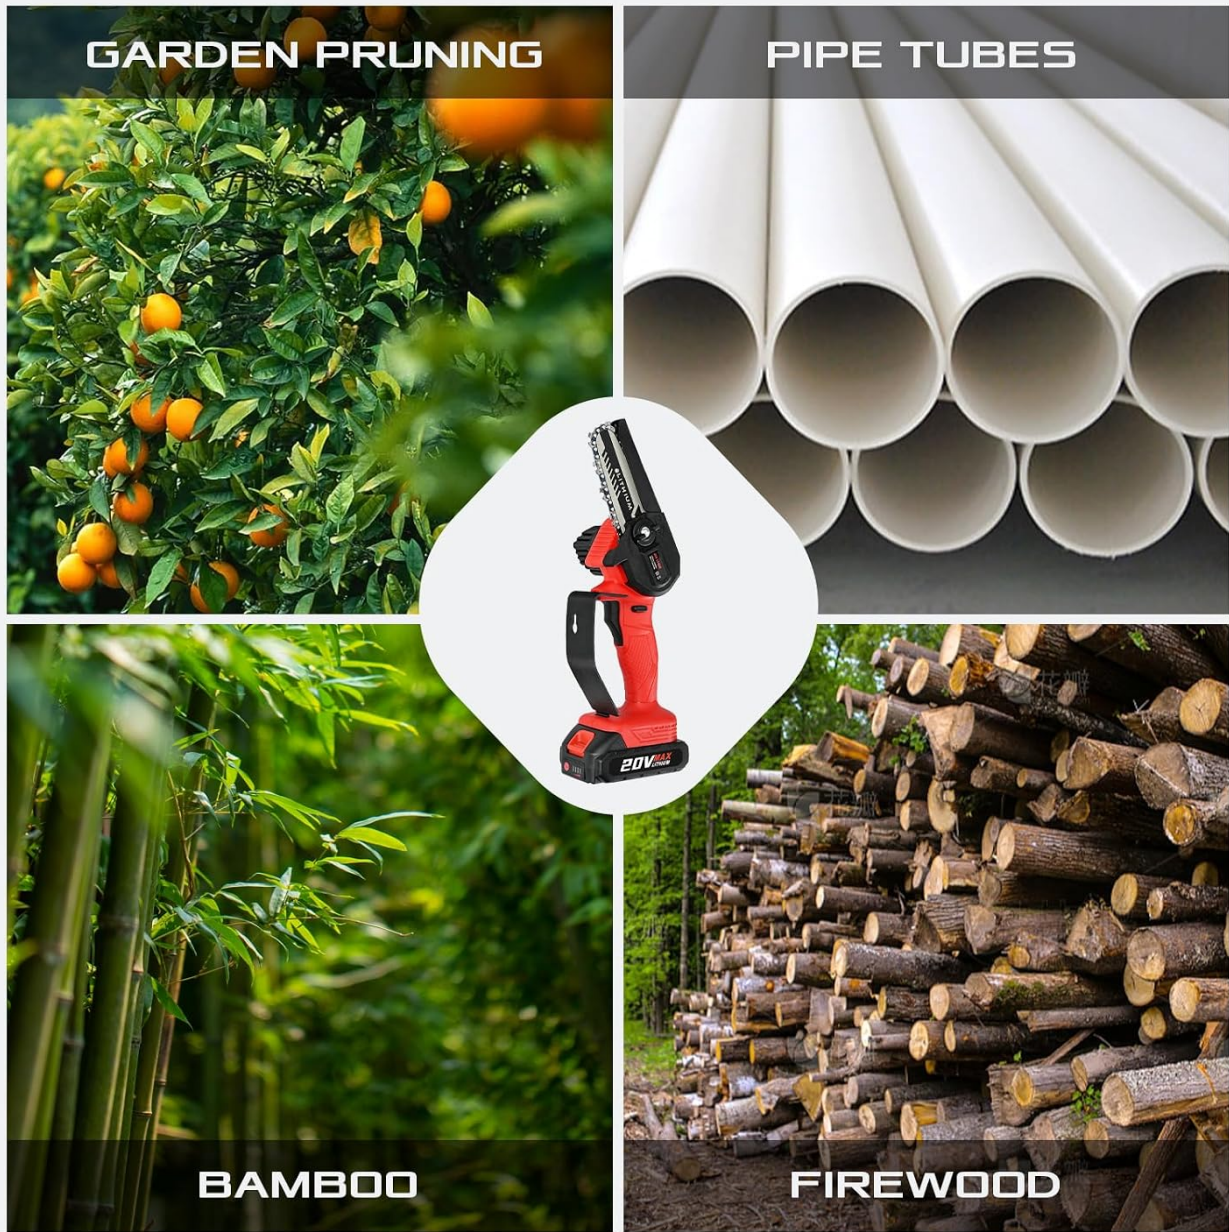 


Figure 6.2: Examples of suitable applications for the Vetoper Mini Chainsaw, such as garden pruning, cutting PVC pipes, bamboo, and preparing firewood.

6.3. Dynamic System Demonstration Video

This video showcases the strong dynamic system of the mini handheld chainsaw in action.

Your browser does not support the video tag.

Video 6.1: Demonstrates the cutting power and efficiency of the Vetoper Mini Handheld Chainsaw's dynamic system on various wood types.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your chainsaw.

7.1. Chain Sharpening and Replacement

- A dull chain will reduce cutting efficiency and increase battery drain. Sharpen the chain regularly or replace it when necessary.

- Refer to the chain manufacturer's instructions for proper sharpening techniques.

7.2. Cleaning

- After each use, remove the battery and clean sawdust and debris from the guide bar, chain, and motor housing.
- Use a brush or compressed air for cleaning. Do not use water or solvents.

7.3. Battery Care

- Charge the battery fully before first use and after each use.
- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for extended periods, charge the battery to approximately 50% capacity.

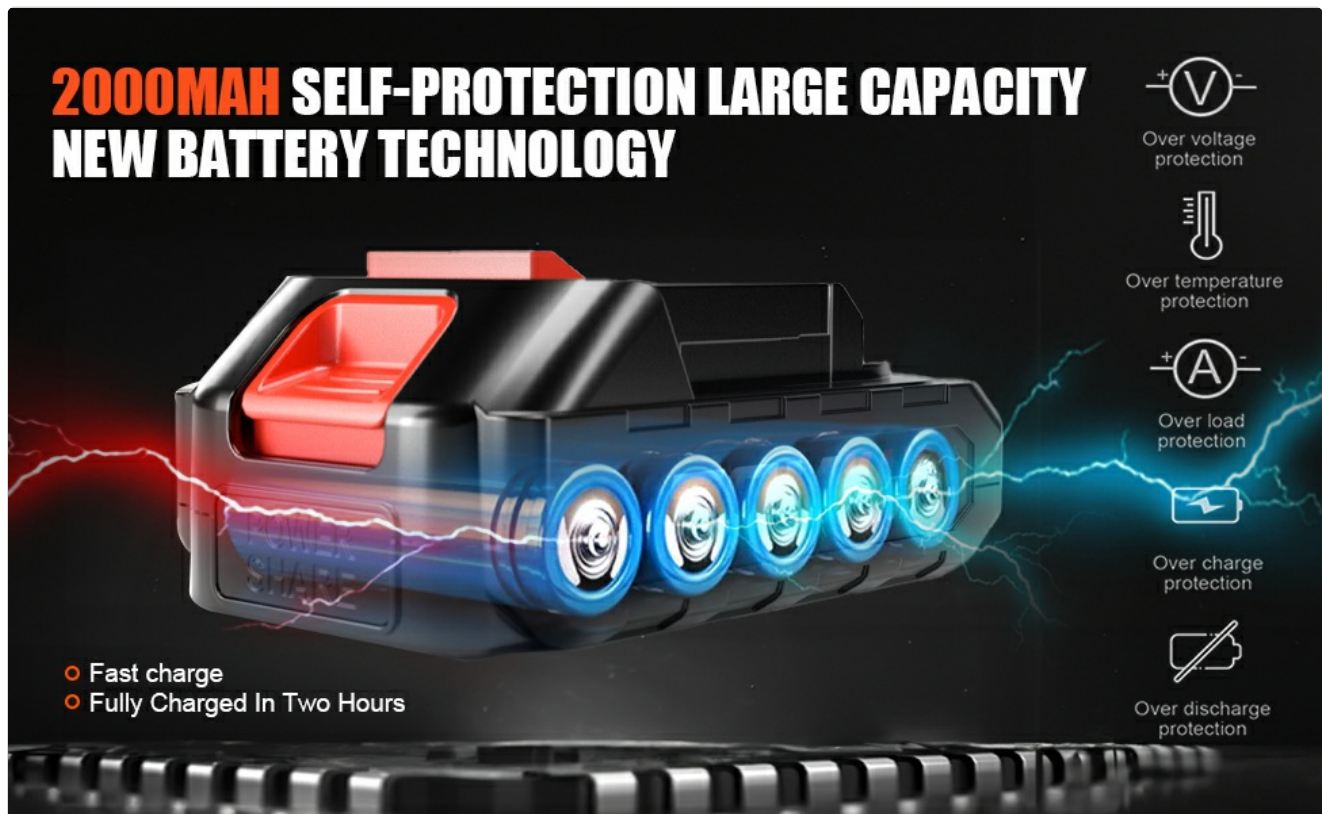 


Figure 7.1: The 4-inch chain requires regular inspection and maintenance for optimal performance.



Figure 7.2: The 2000mAh battery features multiple protection mechanisms including over-voltage, over-temperature, over-load, over-charge, and over-discharge protection.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Chainsaw does not start.	Battery not installed correctly or discharged. Security lock engaged.	Ensure battery is fully charged and properly seated. Press the security lock button before squeezing the trigger.
Chain is loose or jumps off track.	Improper chain tension.	Adjust chain tension using the tensioning knob (refer to Section 5.2).
Chainsaw cuts slowly or inefficiently.	Dull chain. Insufficient lubrication.	Sharpen or replace the chain. Apply bar and chain oil (refer to Section 5.3).
Motor smokes or overheats.	Overloading the chainsaw. Blocked ventilation.	Reduce cutting pressure. Allow the motor to cool. Clear any debris from ventilation openings. If problem persists, discontinue use and contact support.

9. SPECIFICATIONS

Feature	Detail
Brand	Vetoper

Feature	Detail
Model Number	Mini Chainsaw-001
Power Source	Battery Powered
Horsepower	550 Watts
Item Weight	3.3 Pounds
Product Dimensions (L x W x H)	6"L x 3.2"W x 14"H
UPC	715072196130

10. WARRANTY AND SUPPORT

Vetoper provides a **12-month guarantee** for the motor and battery of your Mini Chainsaw-001. For any questions, concerns, or technical assistance, please contact our customer service team. We offer 24-hour friendly customer service to address your needs.

Please retain your proof of purchase for warranty claims.

© 2026 Vetoper. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

