

[Manuals.plus](#) /

› [Singer](#) /

› Singer Quantum Stylist 9960 Pocket Guide: Instruction Manual

Singer Quantum Stylist 9960

Singer Quantum Stylist 9960 Pocket Guide: Instruction Manual

Your essential reference for the Singer Quantum Stylist 9960 Sewing Machine

1. INTRODUCTION TO YOUR POCKET GUIDE

This pocket guide serves as a quick reference for owners of the Singer Quantum Stylist 9960 sewing machine. It is designed to provide immediate access to key information regarding machine operation, settings, and various sewing techniques. The guide is compact, spiral-bound, and printed on durable card stock for convenient use alongside your machine.



SINGER QUANTUM STYLIST 9960

POCKET GUIDE

BUTTONS, DIALS, SETTINGS, STITCHES, AND FEET

rocky**nook**

Image: The front cover of the Singer Quantum Stylist 9960 Pocket Guide, showing its compact, spiral-bound design.

The content covers a comprehensive overview of the machine's features, from basic setup to advanced specialty sewing. It aims to reduce the need to consult the full manual for common tasks and adjustments.

2. MACHINE ANATOMY AND CONTROLS

Understanding the various parts, buttons, and dials of your Singer Quantum Stylist 9960 is crucial for effective operation. This section details the primary components and their functions.

SINGER QUANTUM STYLIST 9960

POCKET GUIDE

TABLE OF CONTENTS

01 PARTS, BUTTONS, AND DIALS	3
02 ACCESSORIES AND FEET	12
03 CONTROL PANEL AND LCD	19
DIRECT STITCH SELECTION BUTTONS.....	19
SCROLL BUTTONS.....	20
UTILITY STITCH BUTTON	21
DECORATIVE & LETTER STITCH BUTTON	21
CURSOR BUTTONS	22
FUNCTION BUTTONS	22
EDIT BUTTON	24
CLEAR BUTTON	24
TACK BUTTON	24
TWIN NEEDLE BUTTON	25

Image: A labeled diagram of the Singer Quantum Stylist 9960 sewing machine, highlighting key parts such as the handle, thread take-up lever, and thread cutter button.

Key Components:

1. **Handle:** Used for carrying the machine.
2. **Thread Take-Up Lever (inside):** This arm moves up and down to feed thread from the spool through the needle. Cycle it by turning the hand wheel.
3. **Thread Cutter Button:** Press this button to cut both the upper and bobbin threads after sewing.
4. **Direct Stitch Selection Buttons:** Allows for quick selection of frequently used stitches.
5. **Scroll Buttons:** Used to navigate through stitch menus and settings on the LCD.
6. **Utility Stitch Button:** Accesses a range of utility stitches.
7. **Decorative & Letter Stitch Button:** For selecting decorative patterns and lettering options.
8. **Cursor Buttons:** Used for precise navigation and adjustment within menus.
9. **Function Buttons:** Provide access to various machine functions and settings.
10. **Edit Button:** For modifying stitch patterns or sequences.
11. **Clear Button:** Resets current stitch settings.
12. **Tack Button:** Used for reinforcing stitches at the beginning or end of a seam.
13. **Twin Needle Button:** Activates settings for twin needle sewing.

3. BASIC OPERATIONS

3.1 Prepping the Machine

- **Inserting the Needle:** Ensure the needle is inserted correctly with the flat side facing the back.
- **Winding/Inserting the Bobbin:** Follow the machine's specific path for winding the bobbin evenly and insert it into the bobbin case.
- **Threading the Machine:** Guide the upper thread through the designated path, including the tension discs and take-up lever, before threading the needle.

3.2 Choosing and Programming Stitches

The Singer Quantum Stylist 9960 offers 600 built-in stitches. Use the direct stitch selection buttons or scroll through the LCD menu to choose your desired stitch. Refer to the stitch chart for stitch numbers and their corresponding patterns. Adjust stitch length and width as needed for your project.

4. SPECIALTY SEWING TECHNIQUES

This machine supports various advanced sewing techniques. Below are instructions for some common specialty applications.

4.1 Quilting

When quilting, use the **Straight Stitch/Patch Quilting Foot**. Insert the quilting bar into the hole in the presser foot holder. The **Quilting Bar** is adjustable and can be used as a guide for evenly spaced lines of stitching. Use stitch number 1 for a basic straight stitch and stitch number 8 for a hand-quilted look.

05 SPECIALTY SEWING

QUILTING

When creating a quilt, use the **Straight Stitch/Patch Quilting Foot**. Insert the quilting bar into the hole in the presser foot holder. The **Quilting Bar** is adjustable and can be used as a guide to make evenly spaced lines of stitching. Use stitch number 1 for a basic straight stitch and stitch number 8 for a hand-quilted look.



Image: A close-up of quilted fabric, demonstrating even stitching lines achieved with the quilting foot and bar.

4.2 Patchwork

For patchwork, precise seam allowances are critical. Utilize the 1/4-inch seam foot for consistent stitching. Ensure fabric pieces are cut accurately before sewing.

4.3 Applique

Applique involves attaching fabric pieces onto a larger background. Use a satin stitch or a narrow zigzag stitch to secure the edges of the applique fabric. A clear applique foot can improve visibility.

4.4 Darning

Darning is used to repair holes or worn areas in fabric. Attach the darning/embroidery foot. Lower the feed dogs to allow free-motion stitching. Move the fabric back and forth to create a dense patch of stitches over the damaged area.

4.5 Embroidery

For embroidery, raise the needle to its halfway point and insert the darning/embroidery foot. The arm of the foot should rest on the needle clamp shaft, and the needle should be positioned in the middle of the circular window. Use straight stitch number 1. An embroidery hoop (not included with the machine) is necessary. Draw your design on the fabric, fix it in the hoop, and place it under the needle. Sew slowly, tracing your design for accuracy.

and presser foot holder. Raise the needle to its halfway point, and insert the darning/embroidery foot. The arm of the foot should rest on the needle clamp shaft, and the needle should be poised to sew in the middle of the circular window (see image below). Use straight stitch number 1.

For embroidery, you'll need an embroidery hoop, not included with this machine. Draw the intended design on the fabric, fix it in the embroidery hoop, and place the design under the needle. Sew slowly for accuracy as you trace your design with stitches.



Image: A close-up of an embroidery project featuring a tree design, being sewn on the Singer Quantum Stylist 9960.

4.6 Cording

Cording involves sewing over a cord to create a raised decorative effect. Use a cording foot and select an appropriate zigzag or decorative stitch.

4.7 Twin Needle Sewing

For parallel lines of stitching, use a twin needle. Ensure the twin needle button is activated and thread two spools of thread through separate paths to the twin needle.

4.8 Eyelets

The machine can create eyelets for decorative purposes or for drawstring openings. Follow the specific instructions for eyelet stitch selection and foot attachment.

5. FINISHING TOUCHES

This section covers techniques for completing your sewing projects.

5.1 Zipper Installation

Use the zipper foot for installing zippers. Position the foot to sew close to the zipper teeth **Note:** When inserting zippers, your foot and needle may encounter the zipper pull. Stop sewing, raise the needle and presser foot, move the zipper pull out of the way, lower the presser foot, and continue sewing.

5.2 Attaching Buttons

Use the **Button Sewing Foot** with stitch number 13 to attach flat, two-hole, or four-hole buttons.

1. Since the fabric remains stationary, lower the feed dogs to prevent guiding the garment.
2. Place the button (using the **Clearance Plate** under the button if desired) and lower the presser foot so it sits on top, allowing visibility of the two holes.
3. Use the hand wheel to lower the needle into the first hole, then the second. Adjust stitch length based on button hole placement.
4. Once aligned, stitch on the slowest setting until the button is firmly attached. Repeat for additional holes. Four-hole buttons can be sewn in two lines or an X pattern.

Note: You'll notice when inserting zippers that your foot and needle may run into the zipper pull at some point. When that happens, stop sewing (leaving your needle in the fabric) and lift the presser foot. Move the zipper pull out of the way, put the presser foot back down, and continue sewing.

ATTACHING BUTTONS

Use the **Button Sewing Foot** in concert with stitch number 13 to attach flat, two-hole, or four-hole buttons.

1. Because the fabric will remain stationary while the button is being sewn, lower the feed dogs to prevent them from guiding the garment through the machine.
2. Place the button (use the **Clearance Plate** under the button if you desire), and lower the presser foot to sit on top of it so that you can see the two holes you plan to sew in the foot's window.
3. Use the hand wheel to lower the needle into the first hole, followed by the second hole. You may need to adjust the stitch length depending on the placement of your button's holes.
4. Once your button is aligned, stitch on the slowest setting until the button is firmly attached. Repeat these steps with any additional holes in the button. You can sew four-hole buttons in two lines, or you can crisscross your stitches in an X pattern.

Image: A close-up of a button being attached to fabric using the Singer Quantum Stylist 9960, illustrating the button sewing process.

5.3 Making Buttonholes

The machine features an automatic buttonhole function. Attach the buttonhole foot and follow the on-screen prompts or manual instructions for precise buttonhole creation.

5.4 Hemming

Various hemming techniques can be performed, including blind hemming with a blind hem foot or rolled hemming with a rolled hem foot. Select the appropriate stitch and foot for your fabric type and desired finish.

6. MAINTENANCE AND TROUBLESHOOTING

6.1 Cleaning Your Machine

Regular cleaning is essential for maintaining your Singer Quantum Stylist 9960. Turn off and unplug the machine before cleaning. Use a small brush to remove lint and dust from the bobbin area, feed dogs, and tension discs. Periodically oil the machine according to the manufacturer's recommendations.

6.2 Troubleshooting Common Issues

This section addresses common problems you might encounter:

- **Skipped Stitches:** Check needle insertion, ensure the needle is not bent or dull, and verify correct threading.
- **Thread Breakage:** Inspect for burrs on the needle plate or bobbin case, ensure proper thread tension, and use quality thread.
- **Uneven Stitches:** Adjust upper and bobbin thread tension. Ensure the presser foot pressure is appropriate for the fabric.
- **Machine Jamming:** Remove the bobbin case and needle plate to clear any tangled threads. Re-thread the machine carefully.
- **LCD Messages:** Refer to the machine's main manual for specific error codes and their solutions.

7. SPECIFICATIONS OF THE POCKET GUIDE

Feature	Detail
Publisher	Rocky Nook
Publication Date	May 7, 2024
Language	English
Print Length	50 pages
Item Weight	3.99 ounces
Dimensions	3.25 x 0.5 x 5.25 inches
ISBN-13	979-8888141809