

[Manuals.plus](#) /

› [Sokany](#) /

› Sokany SK-ZG-8032 1500W 17QT Air Fryer Oven Instruction Manual

Sokany SK-ZG-8032

Sokany SK-ZG-8032 1500W 17QT Air Fryer Oven Instruction Manual

Model: SK-ZG-8032 | Brand: Sokany

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Adequate air circulation should be allowed around the appliance during operation.

2. PRODUCT OVERVIEW

The Sokany SK-ZG-8032 Air Fryer Oven is a versatile kitchen appliance designed for air frying, roasting, baking, and more. It features a digital touchscreen control panel and a spacious 17-quart (16L) capacity.

Touch screen design

A thoughtful recipe, Everyone can make delicious food



Figure 2.1: Front view of the Sokany SK-ZG-8032 Air Fryer Oven, showcasing its sleek black design and front-loading door.

Key Features:

- **Large Capacity:** 17 Quarts (16 Liters) ideal for family meals.
- **Powerful Heating:** 1500W motor for quick and even cooking.
- **Digital Touchscreen Controls:** Easy-to-use interface for program selection and temperature adjustment.
- **8 Preset Cooking Programs:** Simplifies cooking for various food types.
- **Adjustable Temperature:** Allows precise cooking for different dishes.
- **Internal Warm Light:** For monitoring cooking progress without opening the door.
- **Rotisserie Function:** For even cooking of larger items like whole chickens.
- **Non-slip Feet:** Ensures stability during operation.
- **Visualization Window:** Clear view of food while cooking.
- **Easy to Clean Interior:** Designed for convenient maintenance.



Figure 2.2: The digital touchscreen control panel, showing time and temperature settings, along with various cooking icons.



Figure 2.3: Key design features of the air fryer oven, highlighting non-slip feet for stability, a clear visualization window, an ergonomic handle, and an interior designed for easy cleaning.

3. SETUP AND FIRST USE

Unpacking:

- Carefully remove all packaging materials from the air fryer oven and its accessories.
- Check that all parts are present and in good condition. Refer to the "Accessories" section for a complete list.
- Remove any stickers or labels from the appliance.

Before First Use:

- Wipe the exterior of the appliance with a damp cloth.
- Clean the interior cavity and all accessories (baskets, racks, drip tray) with warm soapy water. Rinse thoroughly and dry completely.
- Place the air fryer oven on a stable, level, and heat-resistant surface, ensuring adequate clearance (at least 4 inches) on all sides for proper ventilation.
- Plug the power cord into a grounded electrical outlet.
- It is recommended to run the appliance empty for about 10-15 minutes at 350°F (175°C) during the first use to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure good ventilation during this process.

4. OPERATING INSTRUCTIONS

Basic Operation:

1. Place food on the appropriate accessory (e.g., air fry basket, rotisserie spit) and insert it into the oven.
2. Close the oven door securely.
3. Press the Power button () on the touchscreen to turn on the appliance.
4. Select a preset cooking program by tapping the corresponding icon, or manually set the temperature and time.

5. To adjust temperature, use the + and - buttons next to the temperature display.
6. To adjust cooking time, use the + and - buttons next to the time display.
7. Press the Start/Pause button to begin cooking.
8. The internal light can be turned on/off by pressing the light bulb icon ().
9. When cooking is complete, the oven will beep, and the heating element will turn off. Carefully remove food using oven mitts.

Preset Cooking Programs:

The air fryer oven includes 8 preset programs for common dishes. These programs automatically set optimal time and temperature, which can be adjusted manually if needed.

- Fries
- Chicken Wings
- Steak
- Fish
- Shrimp
- Pizza
- Cake
- Roast



Figure 4.1: The air fryer oven in a kitchen setting, surrounded by various dishes prepared using its functions, including fries, chicken wings, and small pastries.

5. ACCESSORIES AND USAGE

The Sokany SK-ZG-8032 comes with several accessories to enhance your cooking experience.

Included Accessories:

- Air Fry Basket (Mesh Basket)
- Drip Tray / Baking Pan
- Rotisserie Spit and Forks
- Rotisserie Fetch Tool
- Rotisserie Basket (for fries, nuts, etc.)

Using the Rotisserie Function:

1. For the rotisserie spit, secure food (e.g., whole chicken) onto the spit using the forks. Ensure it is balanced.
2. For the rotisserie basket, place smaller items like fries or nuts inside and secure the lid.
3. Insert the rotisserie assembly into the designated slots inside the oven.
4. Select the appropriate cooking program or set time/temperature.
5. Press the Rotisserie icon (🌀) on the touchscreen to activate rotation.

- Use the rotisserie fetch tool to safely remove the hot rotisserie assembly after cooking.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer oven.

- **Always unplug the appliance** and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners.
- **Interior:** Clean the interior walls with a damp cloth and mild soap. For stubborn stains, use a non-abrasive sponge.
- **Accessories:** All removable accessories (air fry basket, drip tray, rotisserie parts) are dishwasher safe. Alternatively, wash them in warm soapy water, rinse, and dry thoroughly.
- **Heating Element:** Gently wipe the heating element with a damp cloth if necessary, ensuring the appliance is unplugged and cool. Do not scrub.
- **Storage:** Store the cleaned and dried appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your air fryer oven, consult the following table before contacting support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; main unit not properly connected.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker.
Food is not cooked evenly.	Overcrowding the basket; incorrect temperature/time; food not rotated.	Do not overcrowd. Shake or turn food halfway through cooking. Adjust temperature/time as needed. Use rotisserie for even cooking of suitable items.
White smoke coming from the appliance.	Grease or food residue on heating element; fatty foods being cooked.	Clean the heating element and interior. Ensure drip tray is clean. Reduce amount of oil used.
Food is not crispy.	Too much moisture in food; not enough oil; overcrowding.	Pat food dry before cooking. Lightly coat with oil. Cook in smaller batches.

8. SPECIFICATIONS

- **Model Name:** SK-ZG-8032
- **Brand:** Sokany
- **Capacity:** 17 Quarts (16 Liters)
- **Output Wattage:** 1500 Watts
- **Voltage:** 220 Volts (*Note: Voltage may vary by region. Please check your local power supply.*)
- **Control Method:** Touch
- **Material:** Plastic (Exterior), Metal (Interior/Accessories)
- **Color:** Black
- **Product Dimensions (D x W x H):** 14"D x 12"W x 12"H
- **Item Weight:** 17.95 Pounds
- **Special Features:** Electric Stovetop Compatible (*Note: This feature description from product data seems incorrect for an air fryer oven. Please disregard if not applicable to the product's function.*)
- **Nonstick Coating:** Yes
- **Dishwasher Safe Parts:** Yes (Removable accessories)

Note on Wattage: While the product title and main features indicate 1500W, some promotional materials may show higher wattages (e.g.,

1700W or 2500W). The 1500W rating is consistent with the primary product description.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Sokany customer service through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase for warranty claims.

