

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TIMEMORE](#) /

› [TIMEMORE Chestnut C2S Manual Coffee Grinder Instruction Manual](#)

TIMEMORE C2S

TIMEMORE Chestnut C2S Manual Coffee Grinder

Model: C2S | Brand: TIMEMORE

INTRODUCTION

Thank you for choosing the TIMEMORE Chestnut C2S Manual Coffee Grinder. This manual provides essential information for the proper setup, operation, and maintenance of your new coffee grinder. The C2S model features an upgraded full-metal unibody design, stainless steel conical burrs, and double-bearing central axis positioning for uniform grinding. Its compact and durable construction makes it ideal for both home use and travel.



TIMEMORE®



ADJUSTABLEGRIND SETTING

Image: The TIMEMORE Chestnut C2S grinder showcasing its newly upgraded full-metal integrated body, designed for enhanced durability and precision.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Inspect the grinder for any signs of damage. Ensure all parts are present: the grinder body, handle, and collection cup.

2. Assembly

1. Attach the handle to the top shaft of the grinder.
2. Ensure the collection cup is securely screwed onto the bottom of the grinder body.

3. Adjusting Grind Size

The TIMEMORE C2S offers approximately 36 levels of grind adjustment, from fine to coarse. To adjust:

1. Remove the collection cup and the handle.
2. Locate the adjustment nut at the bottom of the burr assembly.
3. Rotate the adjustment nut **clockwise** for a finer grind.
4. Rotate the adjustment nut **anti-clockwise** for a coarser grind.
5. Refer to the markings (Fine/Coarse) on the grinder for guidance.



EASY TO CLEAN

Brush is included in the package



Image: Close-up view of the adjustable grind setting mechanism on the TIMEMORE Chestnut C2S, showing indicators for fine and coarse adjustments.

Video: This video demonstrates the assembly of the TIMEMORE Chestnut C2S Manual Coffee Grinder, including how to attach the handle and adjust the grind size for various brewing methods.

OPERATING INSTRUCTIONS

1. Loading Coffee Beans

1. Remove the handle and the top lid of the grinder.
2. Pour your desired amount of whole coffee beans into the hopper. The grinder has a capacity of 25g.
3. Replace the top lid and reattach the handle.

2. Grinding Process

Hold the grinder firmly with one hand and turn the crank handle clockwise with the other. The double-bearing central axis ensures smooth and efficient grinding with minimal effort. Continue grinding until all beans have passed through the burrs and collected in the bottom cup.

**SOLID TEXTURE
TIGHT HAND GRIP**

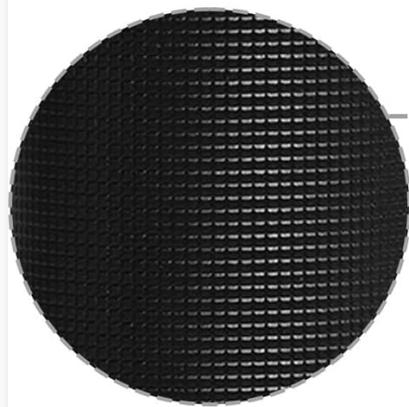


Image: A user demonstrates the energy-saving crank handle of the TIMEMORE Chestnut C2S, designed for comfortable and efficient grinding.



Image: A detailed view of the solid textured grip on the TIMEMORE Chestnut C2S, providing a secure and comfortable hold during operation.

3. Recommended Grind Settings

The ideal grind setting depends on your brewing method. Experiment to find your preferred taste. Here are general recommendations:

- **Espresso:** 7-10 clicks (Fine)
- **Moka Pot:** 9-11 clicks (Fine-Medium)
- **Aeropress:** 13-14 clicks (Medium)
- **Pour Over:** 15-17 clicks (Medium-Coarse)
- **French Press:** 25-29 clicks (Coarse)

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your grinder. The C2S is designed for easy disassembly and cleaning.

1. Disassembly for Cleaning

1. Unscrew the collection cup from the main body.
2. Remove the handle and the top lid.
3. Carefully remove the inner burr and spring assembly.

2. Cleaning the Burrs

- Use the included brush to remove any residual coffee grounds from the burrs and internal components.
- **DO NOT wash the grinder with water.** Water can damage the burrs and internal mechanisms.
- An air blower can also be used for thorough cleaning.

3. Reassembly

Reassemble the grinder by reversing the disassembly steps. Ensure all parts are securely in place before use.



ENERGY-SAVING CRANK HANDLE

- Crank makes both of your hands on a horizontal line

Image: The TIMEMORE Chestnut C2S grinder disassembled for cleaning, highlighting the brush for maintenance and a clear warning against washing with water.

TROUBLESHOOTING

- **Inconsistent Grind:** Ensure the adjustment nut is tightened correctly and the burrs are free of debris. Check that the central shaft is stable.
- **Difficulty Grinding:** If grinding feels excessively difficult, check if the grind setting is too fine for the beans being used. Adjust to a coarser setting if necessary. Ensure the beans are not jammed.
- **Handle Detaches:** While the handle is designed to be easily removable for portability, ensure it is fully seated on the shaft during grinding.

SPECIFICATIONS

Feature	Detail
Brand	TIMEMORE
Model Number	C2S
Color	Black
Material	Stainless Steel
Item Weight	700 Grams (1.54 pounds)
Burr Type	S2C Conical Burr (38mm)
Grind Settings	Approx. 36 levels
Capacity	25g Coffee Beans
Package Dimensions	7.6 x 5.67 x 2.09 inches



Image: Visual representation of the dimensions for the TIMEMORE Chestnut C2S Manual Coffee Grinder, showing its compact size.

WARRANTY AND SUPPORT

TIMEMORE products are manufactured to high-quality standards. For specific warranty information and customer support, please refer to the documentation included with your purchase or visit the official TIMEMORE brand store.

Official TIMEMORE Brand Store: [Visit the TIMEMORE Store](#)