

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GOURMETmaxx](#) /

› [GOURMETmaxx Electric Multifunction Pan Model 12316 - Instruction Manual](#)

GOURMETmaxx 12316

GOURMETmaxx Electric Multifunction Pan

Model: 12316

[Introduction](#) [Safety Instructions](#) [Product Overview](#) [Setup & First Use](#) [Operation](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Welcome to the GOURMETmaxx Electric Multifunction Pan instruction manual. This guide provides essential information for the safe and efficient use of your new appliance.

The GOURMETmaxx Electric Multifunction Pan (Model 12316) is a versatile kitchen appliance designed for various cooking methods, including frying, sautéing, paella, wok cooking, and even as an electric pizza oven. Its large capacity and non-stick coating make it ideal for preparing meals for families and gatherings.

2. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before use:

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the appliance, power cord, or thermostat control in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Unplug the appliance from the power outlet when not in use, before cleaning, and before assembling or disassembling parts.
- Do not operate the appliance if the power cord, plug, or any other part is damaged. Contact customer service for repairs.
- Avoid touching hot surfaces during and immediately after use. Use oven mitts or heat-resistant gloves.
- Use only original accessories and spare parts provided or recommended by GOURMETmaxx.
- This appliance is intended for household use only. Do not use it outdoors or for commercial purposes.
- Ensure proper ventilation when operating the appliance.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your GOURMETmaxx Electric Multifunction Pan:



- **Electric Pan Body:** The main cooking vessel with a non-stick coating.
- **Glass Lid:** Transparent lid with a steam vent and handle for monitoring cooking progress.
- **Thermostat Control:** Detachable unit for adjusting and maintaining cooking temperature.
- **Cool-Touch Handles:** Ergonomically designed handles for safe and comfortable handling.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Cleaning:** Before first use, wipe the non-stick cooking surface with a damp cloth. Wash the glass lid and thermostat control with warm soapy water, then rinse and dry thoroughly.
3. **Assembly:**
 - Place the electric pan on a stable, heat-resistant, and level surface.
 - Insert the thermostat control into the designated socket on the pan. Ensure it is firmly seated and clicks into place.

4. First Use:

- Lightly grease the non-stick surface with a small amount of cooking oil.
- Plug the power cord into a suitable electrical outlet.
- Set the desired temperature using the thermostat control.
- Allow the pan to preheat for a few minutes before adding food.

5. OPERATION

The GOURMETmaxx Electric Multifunction Pan is designed for various cooking methods:

- **Frying and Sautéing:** Use for stir-fries, searing meats, or sautéing vegetables.
- **Paella and Wok:** The large capacity and high sides make it ideal for paella, stews, and wok dishes.
- **Pizza Oven:** Can also be used as an electric pizza oven.

Cooking Tips:

- Always preheat the pan to the desired temperature before adding ingredients.
- Use wooden or heat-resistant plastic utensils to protect the non-stick coating.
- Adjust the thermostat as needed during cooking.
- The glass lid helps retain heat and moisture, speeding up cooking times.

6. CLEANING AND CARE

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Pan Body:** Wipe the non-stick cooking surface with a soft, damp cloth. For stubborn food residues, use a mild detergent and a non-abrasive sponge.
3. **Glass Lid:** The glass lid can be washed by hand with warm soapy water or placed in a dishwasher.
4. **Thermostat Control:** Wipe the thermostat control with a damp cloth. Do not immerse it in water.
5. **Storage:** Store the clean and dry appliance in a cool, dry place.

7. TROUBLESHOOTING

Problem: The pan does not heat up.

- **Solution:** Check if the power cord is securely plugged into both the pan and the electrical outlet. Ensure the thermostat control is correctly inserted and turned on.

Problem: Food sticks to the pan.

- **Solution:** Ensure you are using a small amount of cooking oil. Avoid using metal utensils that can damage the non-stick coating.

8. TECHNICAL SPECIFICATIONS

- **Model Number:** 12316
- **Power:** 1500 Watts

- **Voltage:** 240 Volts
- **Diameter:** 40 cm
- **Material:** Stainless steel casing, non-stick coating, glass lid
- **Color:** Black
- **Weight:** 3.42 kg

9. WARRANTY AND SUPPORT

This GOURMETmaxx product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase.

For technical support, spare parts, or warranty claims, please contact GOURMETmaxx customer service:

- **Website:** www.gourmetmaxx.de
- **Email:** [Insert Customer Service Email Here]
- **Phone:** [Insert Customer Service Phone Number Here]

Please have your model number (12316) and purchase date ready when contacting support.

