



Manuals.plus /

› Yolansin /

› Yolansin 4K 60FPS Touchscreen Action Camera User Manual

Yolansin B0CGV11SL3

Yolansin 4K 60FPS Touchscreen Action Camera User Manual

Model: B0CGV11SL3

INTRODUCTION

Thank you for choosing the Yolansin 4K 60FPS Touchscreen Action Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance. This camera is designed for capturing high-quality video and photos in various environments, including underwater, with its robust features like 4K/60FPS video, 24MP photos, dual screens, EIS anti-shake, and Wi-Fi connectivity.

WHAT'S IN THE BOX



This image displays the Yolansin 4K 60FPS Touchscreen Action Camera along with its comprehensive accessory kit. You can see the camera itself, the waterproof case, a remote control, a 64GB SD card, an external microphone, and the battery charger with two batteries.

- 1 x Yolansin 4K 60FPS Touchscreen Action Camera
- 1 x 64GB SD Card
- 2 x 1350mAh Batteries
- 1 x Battery Charger
- 1 x Waterproof Case
- 1 x Remote Control
- 1 x External Microphone
- Various mounting accessories and attachment straps

SETUP GUIDE

1. Battery Installation and Charging

All feature in one action camera



This image shows the two included 1350mAh batteries and the dedicated battery charger. Ensure batteries are fully charged before first use for optimal performance.

1. Insert the two 1350mAh batteries into the provided charger.
2. Connect the charger to a power source using a standard USB cable.
3. The indicator light on the charger will show charging status. Once fully charged, remove the batteries.
4. Open the battery compartment on the bottom of the camera and insert a charged battery, ensuring correct orientation.

2. SD Card Insertion



BIKE CAMERA

MOUNT it to the handlebar Free your hands.



EIS ON EIS OFF

This image highlights the included 64GB SD card, which is essential for storing your captured videos and photos. The camera requires a memory card for operation.

- Locate the SD card slot on the side of the camera.
- Insert the included 64GB Micro SD card with the gold contacts facing the back of the camera until it clicks into place.
- It is recommended to format the SD card in the camera's settings before first use.

3. Waterproof Case Usage

131ft Waterproof Action Camera with case




This image demonstrates the action camera securely enclosed within its waterproof case, with water splashing, indicating its readiness for underwater or wet environments. The case allows for submersion up to 40 meters (131 feet).

- The camera itself is not waterproof; it requires the included waterproof case for underwater use.
- Ensure the camera is properly seated inside the case and the latch is securely closed before submersion.
- The waterproof case allows the camera to be used up to 40 meters (131 feet) underwater.
- **Note:** The external microphone cannot be used when the camera is inside the waterproof case due to the sealed design.

4. Remote Control Pairing


Dual Colorful-clear Touchscreens

The back screens support touch control, allowing parameter adjustments during selfies



1.4 inches

Easy selfie composition



2.0 inches

Touchscreen and clear video playback

This image displays the compact remote control and the external microphone, both included accessories that enhance the camera's functionality. The remote allows for convenient control from a distance.

- To activate the remote function, navigate to the camera's settings menu and select "ON" for the remote controller option.
- Ensure the camera is in Video/Photo preview mode for the remote to function. It will not respond if the camera is in Playback or Setting Menu.
- The remote control range is up to 10-15 meters.
- **Important:** The remote control is NOT waterproof.

5. External Microphone Connection

- Connect the external microphone to the camera's DC2.5 port.
- This microphone significantly improves audio quality by capturing a wider frequency range and sound from all directions.
- **Note:** The external microphone and waterproof case cannot be used simultaneously.

6. Wi-Fi and App Connection

Long-lasting battery life, 2*1350 mAh

Battery can be removed & replaced, the battery life is more durable.



This image illustrates the four-step process for connecting your Yolansin action camera to your smartphone via Wi-Fi using the FUN DV app. It shows the QR code for app download, the camera's Wi-Fi button, and the app's connection interface.

1. **Step 1:** Download the "FUN DV" app from the App Store (iOS) or Google Play (Android), or scan the QR code provided in the image. You can also visit yolansin.com/download/fundv.
2. **Step 2:** Turn on the camera's Wi-Fi by pressing the Up Button. Press it quickly again to turn off Wi-Fi.
3. **Step 3:** Allow all pop-up permissions requested by the app on your phone.
4. **Step 4:** Connect to the camera's Wi-Fi network (SSID usually starts with "ActionCam"). Once connected, you can download or share videos and photos directly from the app.

OPERATING INSTRUCTIONS

1. Power On/Off and Mode Switching

- To power on, press and hold the Power/Mode button. To power off, press and hold again.
- To switch between modes (Video, Time Lapse Video, Slow Motion, Short Video, Underwater Mode, Driving Mode, Photo, Photo-Time lapse, Burst Photo), press the Mode Button. Use the Up or Down buttons to cycle through options, then press the Shutter Button to select. Press Mode Button again to exit.

2. Recording Videos and Capturing Photos

Step 1
Download FUN DV APP on APP Store, Google Play or Scan the QR code

Step 2
Press the Up button to turn on the Wifi
Tips: press the Up Button quickly again to turn off Wi-Fi.

Step 3
Allow all pop-up permissions request on your phone

Step 4
Download or share videos and photos

This image showcases the camera's dual screens: a 1.4-inch front display for easy selfie composition and a 2.0-inch rear touchscreen for clear video playback and intuitive settings adjustment.

- In Video mode, press the Shutter button to start recording. Press again to stop.
- In Photo mode, press the Shutter button to take a picture.
- The camera supports 4K/60FPS video resolution and 24MP image resolution.
- Utilize the 1.4-inch front display for easy selfie composition and the 2.0-inch rear touchscreen for clear video playback and settings adjustments.

3. Electronic Image Stabilization (EIS)



This image visually demonstrates the effectiveness of the Electronic Image Stabilization (EIS) feature. It shows a side-by-side comparison of video footage, with one side being stable (EIS ON) and the other shaky (EIS OFF), highlighting the benefit of EIS for smooth recordings during activities like cycling.

- The camera features built-in 3-axis EIS stabilization to reduce shake and jitter.
- Enable EIS in the camera settings for smoother footage, especially during dynamic activities like surfing, climbing, skiing, or cycling.

4. Pre-recording Function

- The camera supports pre-recording, allowing you to capture moments even before you press the record button.
- This feature helps ensure you don't miss any critical highlights.

5. Adjusting Viewing Angle

- The Yolansin action camera supports wide, medium, and narrow angle adjustments.
- The default shooting screen setting is 170 degrees wide, capturing expansive views.

6. Playback on Computer

- To view your videos and photos on a computer, you must first transfer the files.
- Using a card reader (sold separately): Connect the card reader to your computer, then insert the micro SD card. You can then transfer files or delete selected files using your computer's file explorer. This method is required for offloading photos or audio files.
- Playback resolution depends on the resolution capabilities of your device.

MAINTENANCE

- **Waterproof Case Care:** After each use in water, rinse the waterproof case with fresh water and allow it to air dry completely before storing. Inspect the seal for any debris or damage.
- **Battery Care:** Store batteries in a cool, dry place. Avoid fully discharging batteries for extended periods. If not using the camera for a long time, remove the batteries.

- **SD Card Management:** Regularly back up your files to a computer or external storage. Format the SD card periodically (after backing up) to maintain optimal performance and prevent data corruption.
- **Camera Cleaning:** Use a soft, lint-free cloth to clean the camera body and lenses. For stubborn smudges on the lens, use a specialized lens cleaning solution. Avoid abrasive materials.

TROUBLESHOOTING

Problem	Possible Solution
Remote control not working.	<p>Ensure the camera's remote function is set to "ON" in the settings menu.</p> <p>Verify the camera is in Video/Photo preview mode, not Playback or Setting Menu.</p> <p>Check the remote's battery.</p> <p>Ensure you are within the 10-15 meter range.</p>
No audio when using waterproof case.	<p>This is normal. The waterproof case is completely sealed, preventing the use of the external microphone and significantly muffling internal audio.</p>
Cannot transfer files to computer.	<p>Ensure the SD card is properly inserted into the card reader.</p> <p>Verify the card reader is correctly connected to your computer.</p> <p>Try a different USB port or card reader.</p> <p>Ensure the SD card is not locked (check the small switch on the side of the card).</p>
Camera freezes or becomes unresponsive.	<p>Remove and reinsert the battery to perform a hard reset. If the issue persists, try formatting the SD card (after backing up data).</p>

SPECIFICATIONS

Feature	Detail
Brand	Yolansin
Model	B0CGV11SL3
Video Resolution	4K/60fps, 4K/30fps, 2.7K/30fps, 1080P/60fps
Image Resolution	24MP (maximum)
Display	1.4-inch Front Display, 2.0-inch Rear Touch Screen
Waterproof Depth	Up to 40 meters (131 feet) with included case
Image Stabilization	Electronic Image Stabilization (EIS)
Viewing Angle	170° Wide Angle (adjustable)
Connectivity	Wi-Fi, Micro USB
Batteries	2 x 1350mAh Lithium Ion (included)
Storage	Micro SD (64GB card included)
Special Features	Anti-Shake, Remote Control, Touchscreen, Pre-recording
Item Weight	1.04 pounds

WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your Yolansin 4K 60FPS Touchscreen Action Camera, please contact Yolansin customer service. Refer to the product packaging or the official Yolansin website for the most up-to-date contact information.

Please retain your proof of purchase for warranty claims.