

KYOCERA 1T02Z00NLO

Kyocera TK-5380K Black Toner Cartridge User Manual

Model: 1T02Z00NLO

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Kyocera TK-5380K Black Toner Cartridge. Please read this manual thoroughly before installation and retain it for future reference. This toner cartridge is designed to deliver high-quality prints with compatible Kyocera ECOSYS MA4000 and PA4000 series printers.

2. SAFETY INFORMATION

- Keep toner cartridges out of reach of children.
- Do not incinerate toner cartridges. Toner dust can ignite.
- If toner comes into contact with skin, wash thoroughly with soap and water.
- If toner is inhaled, move to fresh air. If irritation persists, seek medical attention.
- Store toner cartridges in a cool, dry place, away from direct sunlight and extreme temperatures.
- Handle the cartridge carefully to avoid spilling toner.

3. PACKAGE CONTENTS

The Kyocera TK-5380K Black Toner Cartridge package includes:

- 1 x Kyocera TK-5380K Black Toner Cartridge
- Installation Instructions
- 1 x Disposal Bag for empty toner cartridge



Image 1: The Kyocera TK-5380K Black Toner Cartridge packaging, showing the model number and compatible printer series.

4. COMPATIBILITY

The Kyocera TK-5380K Black Toner Cartridge is compatible with the following Kyocera ECOSYS printer models:

- ECOSYS MA4000cifix
- ECOSYS MA4000cix
- ECOSYS PA4000cx

5. SETUP AND INSTALLATION

Follow these steps to install the Kyocera TK-5380K Black Toner Cartridge into your compatible printer:

1. **Power Off:** Ensure your printer is powered off and unplugged before beginning the installation process.
2. **Open Printer Cover:** Open the front cover or access panel of your Kyocera printer to expose the toner compartment. Refer to your printer's specific manual for exact instructions on opening the cover.
3. **Remove Old Cartridge:** Carefully remove the empty toner cartridge by pulling it straight out. Place the old cartridge into the provided disposal bag.
4. **Unpack New Cartridge:** Remove the new Kyocera TK-5380K toner cartridge from its packaging. Gently shake the cartridge horizontally 5-6 times to distribute the toner evenly.
5. **Remove Protective Seals:** Remove any protective seals, tapes, or covers from the new toner cartridge as indicated in the cartridge's specific instructions. Be careful not to touch the green drum surface if visible.

- 6. **Insert New Cartridge:** Align the new toner cartridge with the guides in the printer's toner compartment and slide it in firmly until it clicks into place.
- 7. **Close Printer Cover:** Close the printer's front cover or access panel securely.
- 8. **Power On:** Plug in and power on your printer. The printer will typically perform a self-test and recognize the new toner cartridge.

6. OPERATING INSTRUCTIONS

Once the toner cartridge is installed, your printer is ready for operation. The printer's control panel or software will indicate toner levels. Replace the cartridge when the printer indicates it is empty or print quality degrades significantly.

7. MAINTENANCE AND STORAGE

- **Storage:** Store unused toner cartridges in their original sealed packaging in a cool, dry environment, away from direct sunlight and extreme temperatures.
- **Disposal:** Dispose of empty toner cartridges responsibly. Use the provided disposal bag and follow local regulations for recycling or disposal of electronic waste. Kyocera often has recycling programs; check their official website for details.
- **Cleaning:** If toner spills, wipe it up immediately with a dry cloth. Do not use water, as it can set the toner.

8. TROUBLESHOOTING

Poor Print Quality (Faded, Streaky, or Inconsistent Prints)

- **Low Toner:** The toner cartridge may be running low. Replace it with a new one.
- **Toner Distribution:** Remove the cartridge and gently shake it horizontally 5-6 times to redistribute any remaining toner. Reinstall and test.
- **Printer Settings:** Check your printer's print quality settings in the driver. Ensure they are set appropriately for your document type.
- **Drum Unit:** If the issue persists after replacing the toner, the printer's drum unit (if separate) may need cleaning or replacement. Refer to your printer's manual.

"Toner Empty" or "Replace Toner" Message After Installation

- **Improper Installation:** Ensure the toner cartridge is fully seated and clicked into place. Remove and reinsert it.
- **Protective Seals:** Verify that all protective seals and tapes have been completely removed from the new cartridge.
- **Printer Reset:** Some printers may require a manual reset or a power cycle (turn off, unplug, wait 30 seconds, plug in, turn on) to recognize a new cartridge.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Product Name	Kyocera TK-5380K Black Toner Cartridge
Model Number	1T02Z00NL0
Color	Black
Page Yield	Up to 13,000 pages (ISO/IEC 19798)
Compatible Printers	ECOSYS MA4000cifx, ECOSYS MA4000cix, ECOSYS PA4000cx
Product Dimensions	13.23 x 5.51 x 4.92 inches
Item Weight	1.28 pounds
UPC	632983073063

10. WARRANTY AND SUPPORT

Kyocera original toner cartridges are covered by a manufacturer's warranty against defects. For specific warranty terms and conditions, please refer to the documentation included with your printer or visit the official Kyocera website. For technical support or further assistance, please contact Kyocera customer service.


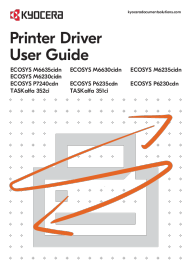

Kyocera Contact Information:

Website: www.kyoceradocumentsolutions.com

Phone: Refer to your regional Kyocera website for local support numbers.

Related Documents - 1T02Z00NL0

	<p>KYOCERA TK-5430Y Yellow Toner Safety Data Sheet (SDS)</p> <p>Comprehensive Safety Data Sheet (SDS) for KYOCERA TK-5430Y Yellow Toner, detailing hazard identification, first aid, handling, storage, and regulatory information for ECOSYS MA2100cwfx, MA2100cfx, PA2100cwx, PA2100cx printers.</p>
	<p>Kyocera ECOSYS M Series Printer Safety and Installation Guide</p> <p>Comprehensive safety warnings, cautionary labels, and installation space requirements for Kyocera ECOSYS M2135dn, M2635dn, M2635dw, M2040dn, M2540dn, M2540dw, M2735dw, and M2640idw printers.</p>
	<p>KYOCERA ECOSYS M Series Safety and Installation Guide</p> <p>Safety and installation precautions for KYOCERA ECOSYS M2135dn, M2635dn, M2635dw, M2040dn, M2540dn, M2540dw, M2735dw, and M2640idw multifunction printers. Includes warnings and environmental specifications.</p>

	<p>KYOCERA ECOSYS Multifunction Printer Safety and Installation Guide</p> <p>Essential safety and installation guidelines for KYOCERA ECOSYS multifunction printers, covering models M2135dn, M2635dn, M2635dw, M2040dn, M2540dn, M2540dw, M2735dw, and M2640idw, including operating environment and power specifications.</p>
	<p>KYOCERA Printer Driver User Guide</p> <p>A comprehensive user guide for the KYOCERA printer driver, covering installation, configuration, and advanced printing features for various ECOSYS and TASKalfa models.</p>
	<p>Kyocera TASKalfa and ECOSYS Printers: Product Quick Reference Guide</p> <p>A comprehensive quick reference guide detailing specifications for Kyocera's TASKalfa and ECOSYS series of multifunctional printers and color printers, including print speed, resolution, paper handling, memory, and more.</p>