

[Manuals.plus](#) /

› [Tognana](#) /

› Tognana Iridea 7L Air Fryer Instruction Manual

Tognana Iridea D2DFA03IRVEA

Tognana Iridea 7L Air Fryer Instruction Manual

Model: Iridea D2DFA03IRVEA

INTRODUCTION

Thank you for choosing the Tognana Iridea 7L Air Fryer. This appliance is designed to cook your favorite foods with little to no oil, providing a healthier alternative to traditional frying. Please read this instruction manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- Never fill the basket with oil. This appliance uses hot air to fry.
- Do not block the air inlet or outlet vents.

PRODUCT OVERVIEW

The Tognana Iridea 7L Air Fryer features a user-friendly design with advanced cooking capabilities.

Key Features:

- **9 Pre-set Programs:** For various cooking needs.
- **Cool-Touch Plastic Body:** Ensures safety during operation.
- **Adjustable Temperature:** From 50°C to 200°C.
- **60-Minute Timer:** With automatic shut-off.
- **Non-Stick Removable Basket and Grill:**For easy cleaning.
- **Digital Display:** For clear temperature and time settings.

Components:



Figure 1: The Tognana Iridea 7L Air Fryer in Sage Green, showing its compact design and digital control panel.



Figure 2: Close-up of the digital control panel with temperature and time settings, along with various preset icons.



Figure 3: The air fryer basket, partially pulled out, revealing the integrated viewing window to monitor cooking progress.



Figure 4: The removable air fryer basket and the separate grill plate, both featuring a non-stick coating.



Figure 5: A close-up of the non-stick grill plate, designed for optimal air circulation and easy food release.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, clean the basket and grill plate with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Dry all parts thoroughly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4

inches) of clear space around the back and sides of the appliance to allow for proper air circulation. Do not place it directly under cabinets.

4. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

Basic Operation:

1. **Power On:** Plug in the air fryer. The digital display will illuminate. Press the power button **U**) to turn the appliance on.
2. **Preheating (Optional):** For best results, preheat the air fryer. Set the desired temperature using the temperature controls **(+ / -)** and set a short time (e.g., 3-5 minutes) using the timer controls **(+ / -)**. Press the start button to begin preheating.
3. **Prepare Food:** Place your food in the air fryer basket, ensuring not to overfill. For optimal results, food should be in a single layer or shaken periodically.
4. **Set Temperature and Time:** Use the temperature controls **(+ / -)** to select the desired cooking temperature (50°C - 200°C). Use the timer controls **(+ / -)** to set the cooking time (up to 60 minutes).
5. **Start Cooking:** Press the start button to begin the cooking cycle.
6. **Shake/Flip Food:** For even cooking, especially with smaller items, pull out the basket halfway through the cooking time and shake or flip the food. The air fryer will pause automatically when the basket is removed and resume when reinserted.
7. **Cooking Completion:** The air fryer will beep when the timer reaches zero and automatically shut off. Carefully pull out the basket and transfer the cooked food to a plate.

Using Preset Programs:

The Tognana Iridea Air Fryer comes with 9 pre-set programs for common dishes. To use a preset:

1. Turn on the air fryer.
2. Press the menu/preset button (often indicated by multiple icons or a 'M' symbol) to cycle through the available programs. Each program will display a default temperature and time.
3. You can adjust the temperature and time of a selected preset using the respective **(+ / -)** buttons if needed.
4. Press the start button to begin cooking.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Basket and Grill Plate:** The non-stick basket and grill plate are removable for easy cleaning. Wash them with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely. **Note:** These parts are not dishwasher safe.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn food residue, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Heating Element:** Gently clean the heating element with a soft brush to remove any food particles.
5. **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive materials.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Tognana Iridea Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed for specific recipes.
White smoke comes from the appliance.	Grease residue from previous use; fatty food cooking.	Clean the basket and grill plate thoroughly after each use. For fatty foods, place a small amount of water in the bottom of the outer pan to prevent smoke.
Food is not crispy.	Too much moisture in food; not enough oil (for certain foods); basket overfilled.	Pat food dry before air frying. Lightly spray or brush food with oil for extra crispiness. Ensure the basket is not overcrowded.

SPECIFICATIONS

Feature	Specification
Brand	Tognana
Model Name	Iridea
Model Number	D2DFA03IRVEA
Capacity	7 Liters
Wattage	1800 Watts
Temperature Range	50°C - 200°C (122°F - 392°F)
Timer	Up to 60 minutes
Product Dimensions (DxWxH)	38P x 28l x 31.8H cm
Item Weight	5.2 Kilograms
Material	Stainless Steel, Plastic
Control Method	Touch
Non-stick Coating	Yes
Dishwasher Safe Parts	No
Special Features	Temperature Control, Programmable, Stain Resistant, Automatic Shut-off, Timer

WARRANTY AND SUPPORT

Tognana products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Tognana website. If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Tognana customer support through their official channels.

Please retain your proof of purchase for any warranty claims.

© 2026 Tognana. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CGVDDZ7B>

More documents and user manuals: <https://manuals.plus/>