

Briloner 1472015

BRILONER LED Dimmable Floor Lamp Model 1472015 User Manual

Brand: Briloner | **Model:** 1472015

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your BRILONER LED Dimmable Floor Lamp, Model 1472015. This versatile lamp is designed to provide warm white light (3000K) with adjustable brightness, making it suitable for various settings such as living rooms, bedrooms, and home offices. Please read these instructions carefully before use and retain them for future reference.



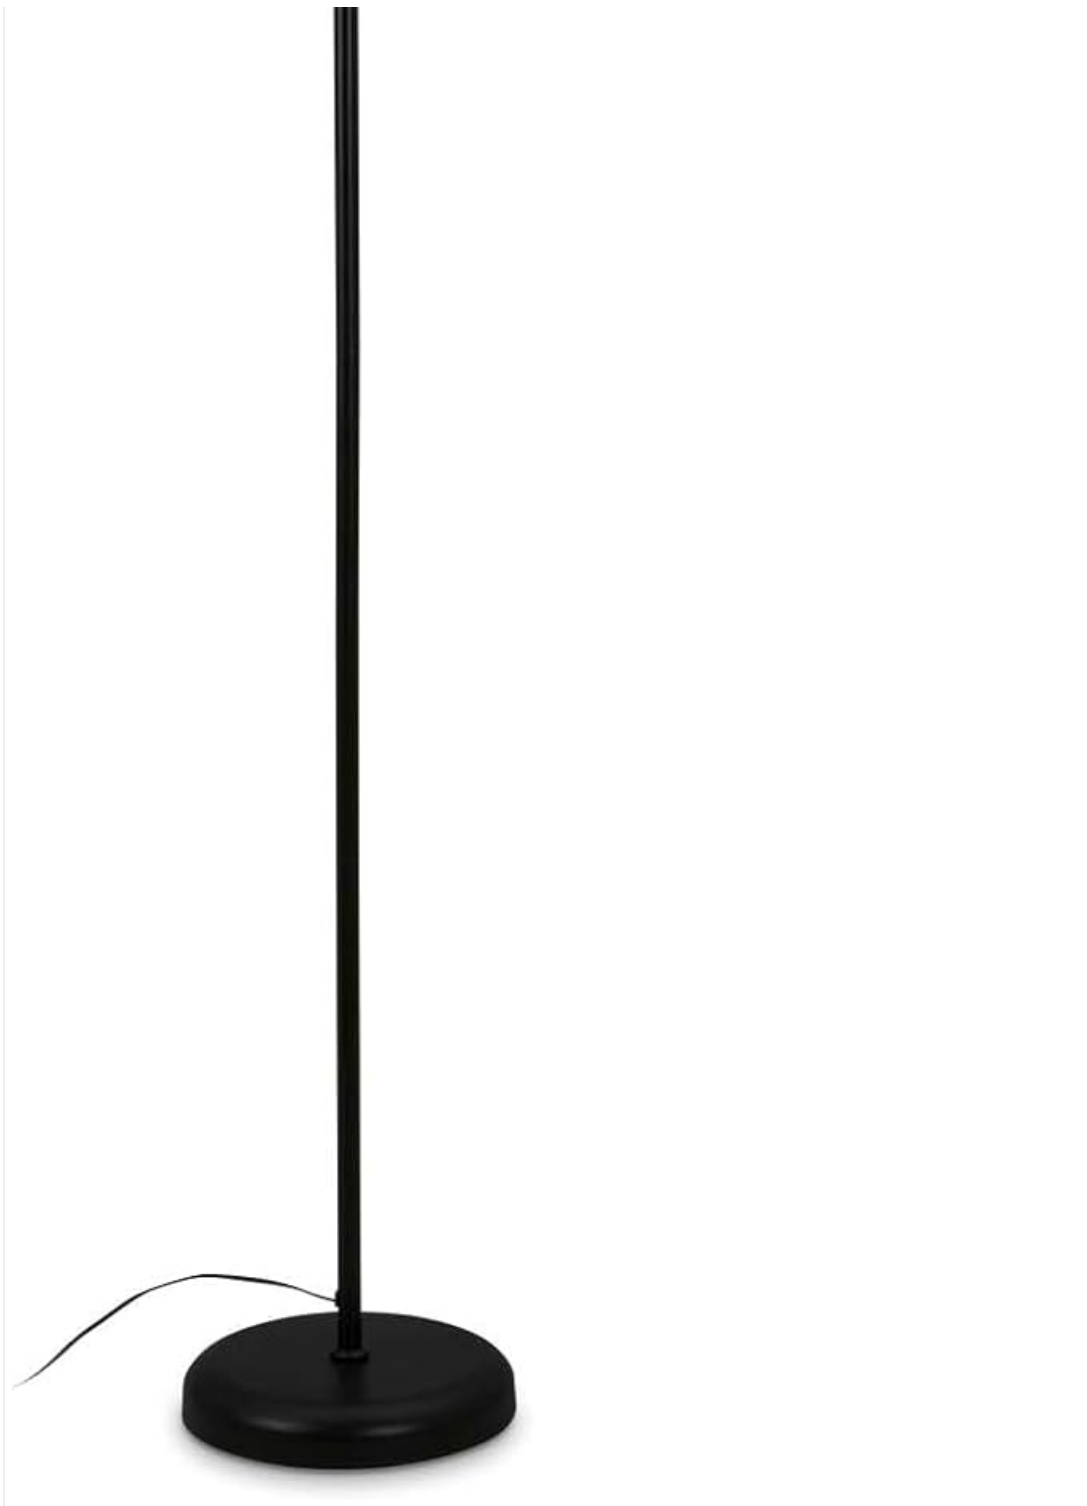


Figure 1: BRILONER LED Dimmable Floor Lamp, Model 1472015. This image shows the complete black floor lamp with its curved arm and rectangular LED light head, standing on a round base.

SAFETY INSTRUCTIONS

- Ensure the power supply voltage matches the lamp's requirements (230 Volts).
- Do not attempt to disassemble or modify the lamp. Integrated LED components are not user-replaceable.
- Keep the lamp away from water and moisture.
- Place the lamp on a stable, level surface to prevent tipping.
- Do not cover the lamp with any materials while it is in operation.
- If the power cord is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid hazards.

PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package.

- 1 x BRILONER LED Dimmable Floor Lamp (Model 1472015)
- 1 x User Manual

ASSEMBLY AND SETUP

1. Carefully unpack all components from the packaging.
2. Assemble the lamp pole sections if they are separate, ensuring they are securely fastened.
3. Attach the lamp head to the pole, if not pre-assembled.
4. Place the lamp on a flat, stable surface.
5. Plug the power cord into a standard 230V electrical outlet.

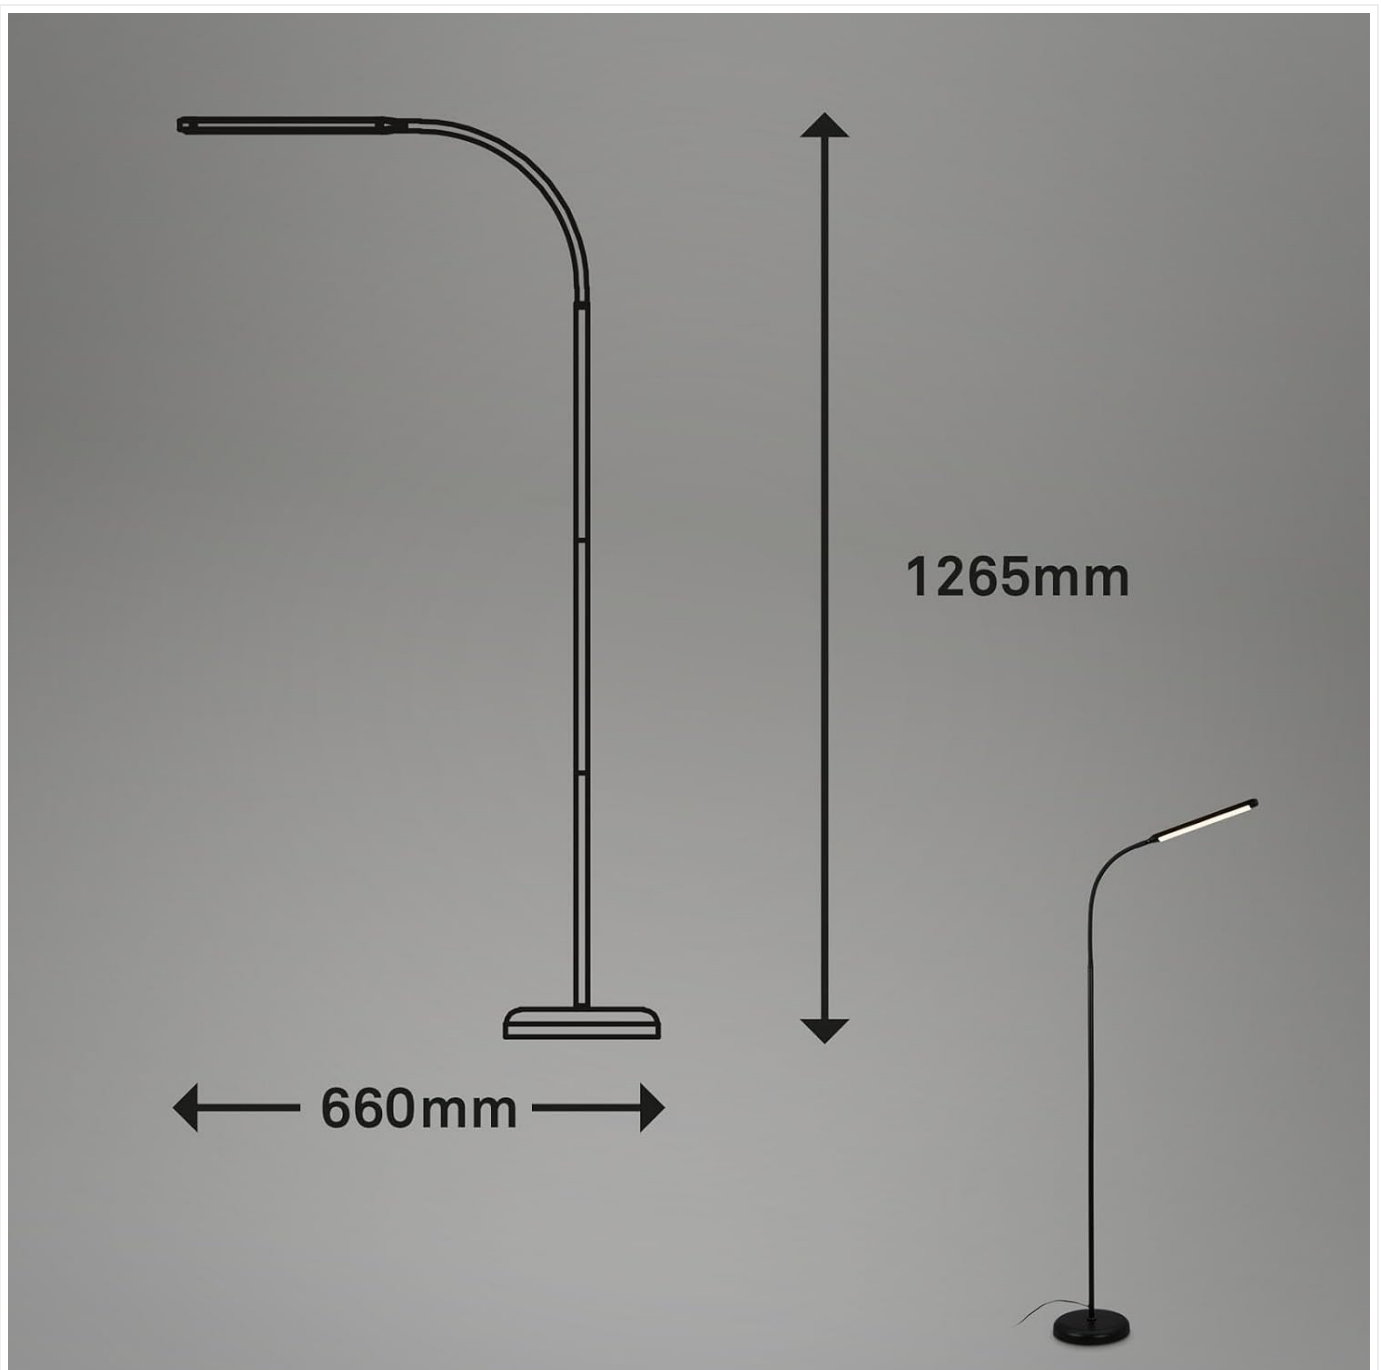


Figure 2: Lamp Dimensions. This diagram illustrates the overall dimensions of the floor lamp: 1265mm height, 210mm base diameter, and 660mm arm depth.

OPERATION

The BRILONER LED Floor Lamp features intuitive touch control for power and dimming.

Power On/Off and Dimming

1. **To Turn On/Off:** Lightly touch the designated touch sensor on the lamp head (indicated by a power symbol).
2. **To Adjust Brightness:** After turning on, repeatedly touch the sensor to cycle through the 4 dimming levels: 100%, 75%, 50%, and 25%.
3. **Memory Function:** The lamp will remember the last brightness setting used when it is turned off and will resume that setting upon being turned back on.



Figure 3: Touch Sensor Location. This image highlights the touch-sensitive power symbol located on the lamp head, used for both turning the lamp on/off and adjusting brightness.

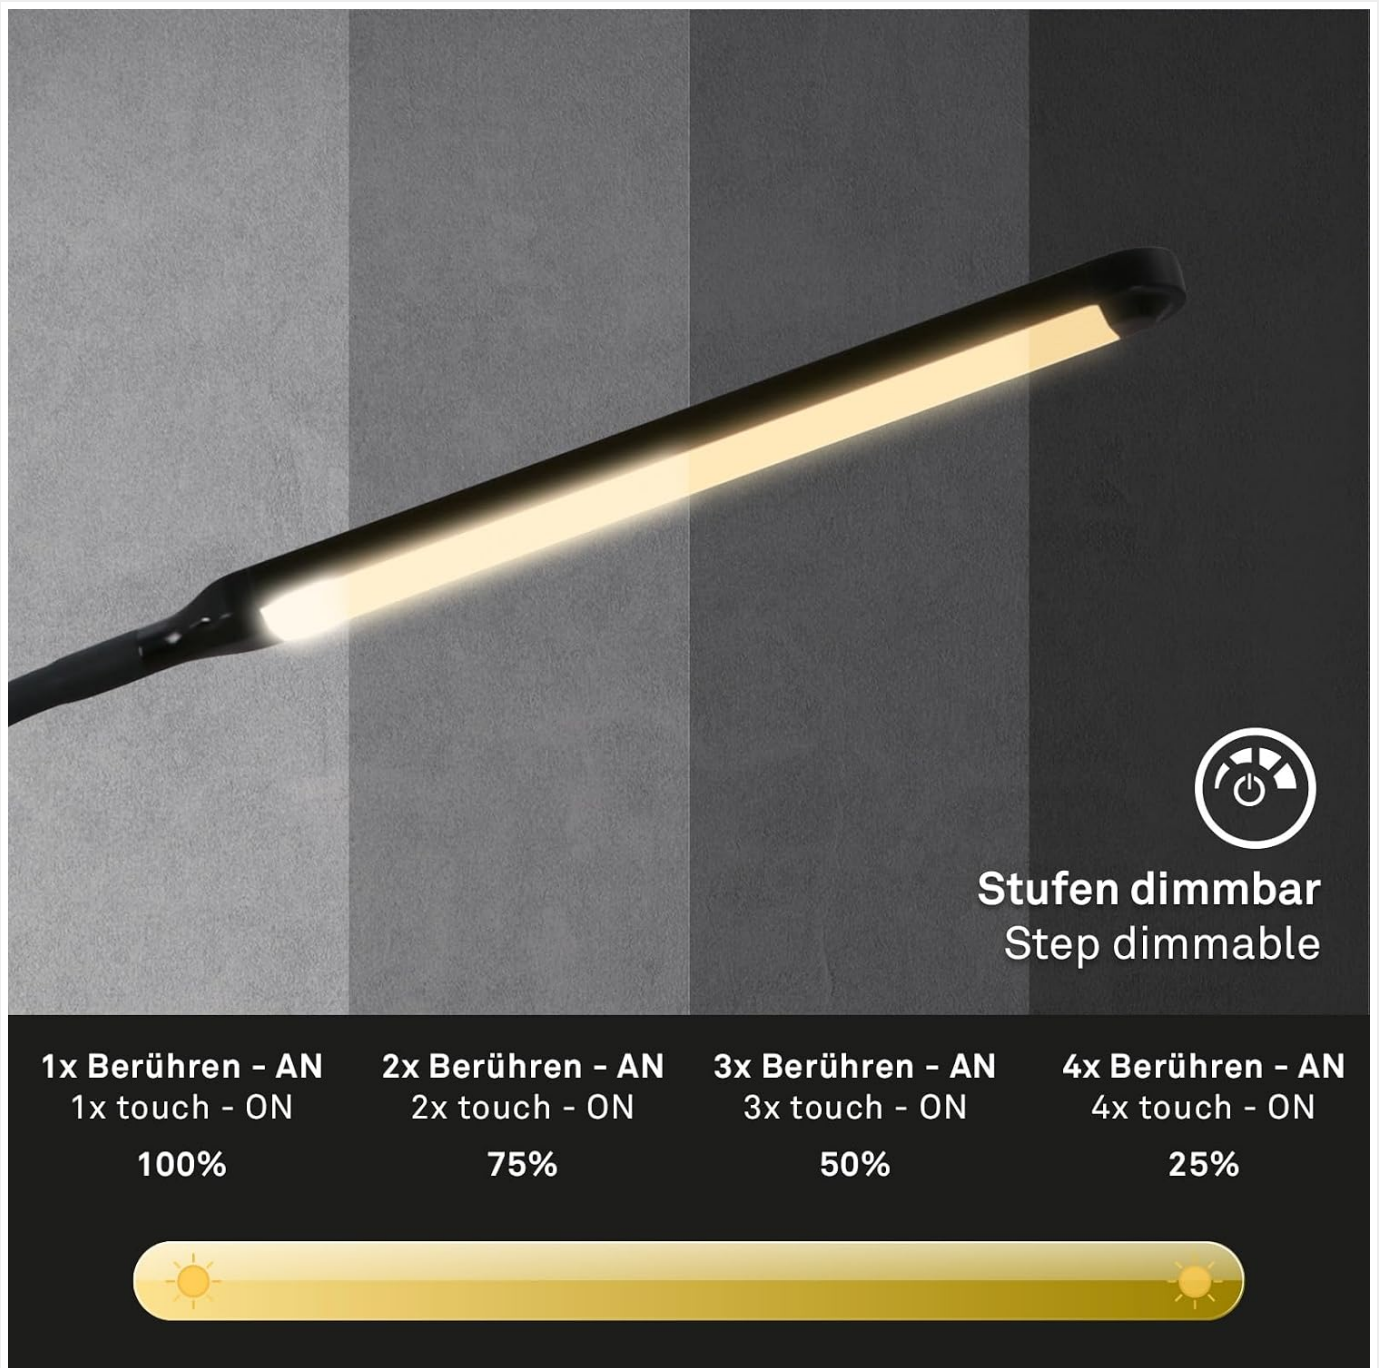


Figure 4: Dimming Levels. This image visually represents the four distinct brightness levels (100%, 75%, 50%, 25%) achievable by repeatedly touching the sensor.

Adjusting the Lamp Head

The lamp features a flexible and pivotable head, allowing you to direct the light precisely where needed. Gently adjust the lamp head to your desired angle.



Figure 5: Flexible Lamp Head. This image demonstrates the rotatable and pivotable nature of the lamp head, showing it adjusted to different angles.

CARE AND MAINTENANCE

- Always disconnect the lamp from the power outlet before cleaning.
- Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishing agents, as these may damage the finish.
- Ensure no liquid enters the electrical components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in. Power outlet is not active. Touch sensor not activated correctly.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another device. Lightly touch the sensor again.
Lamp flickers or dims unexpectedly.	Unstable power supply. Internal component issue.	Try plugging the lamp into a different outlet. Contact customer support if the issue persists.

TECHNICAL SPECIFICATIONS

Brand	Briloner
Model Number	1472015
Dimensions (H x Base Diameter x Arm Depth)	1265 mm x 210 mm x 660 mm
Weight	1.96 kg
Power Consumption	6.5 Watts
Luminous Flux	600 Lumens
Color Temperature	3000 Kelvin (Warm White)
Energy Efficiency Class	F
Material	Plastic (Shade, Base)
Switch Type	Touch Sensor
Voltage	230 Volts
Special Features	Dimmable (4 levels), Flexible/Pivotable Lamp Head, Memory Function
Intended Use	Living room, Bedroom, Office, Hallway

CONTACT AND SUPPORT

For further assistance, technical support, or warranty inquiries, please contact your retailer or the manufacturer directly.
Manufacturer: Briloner Leuchten
Please refer to the product packaging or the manufacturer's official website for the most up-to-date contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question