

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sokany](#) /
- › [Sokany 3-in-1 Breakfast Maker SK-145 User Manual](#)

Sokany SK-145

Sokany 3-in-1 Breakfast Maker SK-145 User Manual

Model: SK-145 | Brand: Sokany

1. INTRODUCTION

Thank you for purchasing the Sokany 3-in-1 Breakfast Maker. This versatile appliance is designed to simplify your morning routine by combining a toaster oven, frying pan, and coffee maker into one compact unit. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Figure 1: The Sokany 3-in-1 Breakfast Maker, a compact appliance featuring a toaster oven, a top-mounted frying pan, and a coffee maker with a glass carafe.

2. SAFETY INSTRUCTIONS

To prevent personal injury or property damage, always follow basic safety precautions when using electrical appliances.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or similar protection when handling hot items from the toaster oven or frying pan.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- **Important:** This oven gets hot. When in use, always use mitts or similar when touching an outer or inner surface of the oven grill.

3. PRODUCT OVERVIEW

The Sokany 3-in-1 Breakfast Maker integrates three essential breakfast appliances into one unit:

- **Toaster Oven:** For toasting bread, baking pastries, or small meals.
- **Frying Pan:** Non-stick surface for cooking eggs, bacon, sausages, and pancakes.
- **Coffee Maker:** Brews up to 4 cups of coffee.



Figure 2: Components of the 3-in-1 Breakfast Maker. No. 1 indicates the Fry Pan, No. 2 indicates the Oven, and No. 3 indicates the Coffee Machine.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Initial Cleaning:** Before first use, wipe down the exterior with a damp cloth. Wash the frying pan, coffee carafe, and filter basket with warm, soapy water. Rinse thoroughly and dry.
3. **Placement:** Place the appliance on a stable, heat-resistant, and level surface, away from walls or other appliances to allow for proper ventilation. Ensure there is sufficient space around the unit.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1. Toaster Oven Operation

The toaster oven features temperature and timer controls for various cooking needs.



Figure 3: Toaster Oven Control Panel. The top knob controls temperature from 100°C to 230°C. The bottom knob is the timer, with a 'Stay On' position and a power indicator light.

1. **Temperature Setting:** Turn the temperature setting knob to your desired temperature, ranging from 100°C to 230°C.
2. **Timer Setting:** To activate the timer, turn the timer knob past 30 minutes and then turn back or forward to the desired baking time. A bell will sound at the end of the programmed time.
3. **Continuous Operation:** To stop toasting at any time, turn the timer knob to the OFF position. For continuous operation, turn the timer knob to the 'Stay On' position.
4. **Power Indicator:** The indicator light illuminates whenever the oven is turned on.



Figure 4: Detailed view of the 30-minute rotation timer for the toaster oven, allowing precise control over baking time.



Figure 5: The oven utilizes a cycle heat transfer system, heating from both top and bottom elements to create a thermal cycle for even cooking.

5.2. Frying Pan Operation

The non-stick frying pan is ideal for various breakfast items.

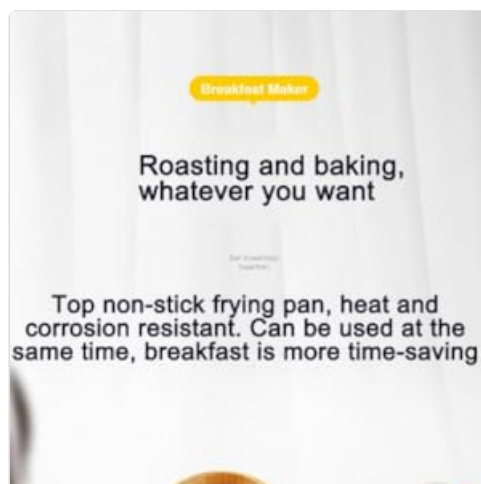


Figure 6: The frying pan features a non-stick surface and comes with a glass lid. It is suitable for cooking items like fried eggs.

1. **Preheat:** For best results, preheat the frying pan for 8 to 10 minutes at the desired frying temperature before

adding food.

2. **Temperature Control:** The frying pan's temperature is controlled by the toaster oven's temperature setting. Adjust the temperature knob (100°C-230°C) to achieve the desired heat for frying.
3. **Cooking:** Place food on the non-stick surface. Use the glass lid to cover if desired, to retain heat and moisture.
4. **Finish:** When cooking is complete, turn the temperature knob to the OFF position.



Figure 7: The top non-stick frying pan is heat and corrosion resistant, allowing for simultaneous cooking with the oven, saving time.

5.3. Coffee Maker Operation

The coffee maker brews up to 4 cups of coffee.



Figure 8: Coffee Maker Components. Includes a water tank, a removable coffee filter, and a 400ml glass carafe.

1. **Add Water:** Add water to the water tank, ensuring it is between the minimum (Min) and maximum (Max) 4-level markings.
2. **Add Coffee Grounds:** Place the ground coffee into the filter basket.
3. **Turn On:** Turn on the coffee maker.
4. **Collect Coffee:** Once brewing is complete, collect the coffee in the carafe.
5. **Turn Off:** Turn off the power to the coffee maker.

Important:

- The coffee maker cannot be operated with an empty water tank (dry burn).
- Do not immerse the coffee maker unit in liquid.

Your browser does not support the video tag.

Video 1: This video demonstrates the 3-in-1 Breakfast Maker in use, showing coffee brewing and items being baked in the oven, highlighting its convenience for a complete breakfast.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your appliance.

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Frying Pan:** The non-stick frying pan is removable for easy cleaning. Wash with warm, soapy water and a soft sponge. It is also dishwasher-safe.
- **Coffee Carafe and Filter Basket:** The coffee carafe and filter basket are removable and dishwasher-safe. Wash them after each use.
- **Toaster Oven Interior:** For crumbs, pull out the crumb tray and empty it. Wipe the interior with a damp cloth. For stubborn stains, a mild detergent can be used. Ensure the interior is dry before next use.
- Do not immerse the main unit in water or any other liquid.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the appliance is securely plugged into a working outlet. Check if the timer knob is set correctly or to 'Stay On'.
Coffee maker not brewing.	No water in tank; filter basket not properly seated.	Fill the water tank to the appropriate level. Ensure the filter basket is correctly placed.
Toaster oven not heating.	Temperature knob not set; timer not set.	Set the temperature knob to the desired temperature. Ensure the timer knob is set for the desired duration or to 'Stay On'.
Food not cooking evenly in oven.	Incorrect temperature or cooking time; food placement.	Adjust temperature and time as needed. Ensure food is placed centrally on the rack for even heat distribution.

8. SPECIFICATIONS

Feature	Detail
Brand	Sokany
Model Name	3 in 1 Breakfast Maker
Item Model Number	SK-145
Color	Black
Product Dimensions	9"D x 19"W x 10"H
Item Weight	4.4 pounds
Control Type	Knob
Power Source	AC adapter
Coffee Maker Capacity	Up to 4 cups
Toaster Oven Temperature Range	100°C to 230°C



Figure 9: Product dimensions for the Sokany 3-in-1 Breakfast Maker.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Sokany customer service directly. Keep your purchase receipt as proof of purchase.