

Manuals.plus /

› Elite Gourmet /

› Elite Gourmet EHB1300 Cordless Rechargeable Hand Blender Instruction Manual

Elite Gourmet EHB1300

Elite Gourmet EHB1300 Cordless Rechargeable Hand Blender

Model: EHB1300 | Brand: Elite Gourmet

[Introduction](#) [Safety Information](#) [Components Specifications](#) [Setup Warranty & Support](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)

1. Introduction

Thank you for choosing the Elite Gourmet EHB1300 Cordless Rechargeable Hand Blender. This versatile 200-watt immersion blender is designed for effortless blending and mixing of various soft foods. Its cordless design offers freedom of movement in the kitchen, making tasks like preparing smoothies, soups, sauces, and baby food simple and enjoyable. Featuring durable stainless-steel blades, variable speed control, and a comfortable ergonomic grip, this blender is a convenient addition to any kitchen.

2. Important Safety Information

- **General Safety:** Always read all instructions before use. Keep the appliance out of reach of children.
- **Electrical Safety:** Do not immerse the motor body in water or other liquids. Ensure the charging port is dry before connecting the charging cable.
- **Blade Safety:** The stainless-steel blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- **Overheating Prevention:** To prevent overheating and ensure longevity, **operate the hand blender in one-minute intervals or less**. Allow the appliance to cool down if it becomes warm during prolonged use.
- **Proper Use:** Use only the attachments provided by Elite Gourmet. Do not attempt to blend hard, unfrozen foods or ice without sufficient liquid, as this may damage the blades or motor.

3. Product Overview & Components

Your Elite Gourmet EHB1300 Hand Blender comes with the following components:

- **Main Motor Body:** The handheld unit containing the motor, battery, power button, variable speed control, and safety lock.
- **Detachable Stainless-Steel Blade Assembly:** The immersion blender shaft with sharp blades and a

splashguard.

- **USB Charging Cable:** For recharging the internal Li-ion battery.



Image 1: Main Motor Body Controls

This image displays the main motor body of the Elite Gourmet EHB1300 Hand Blender, highlighting the variable speed control knob at the top, the one-touch power button, and the safety lock button on the side. These controls allow for precise and safe operation.



Image 2: Detachable Blade Assembly

The image shows the detachable stainless-steel blade assembly, which is the immersion blender shaft. This part easily connects to the main motor body for blending and detaches for cleaning and storage.



Stainless Steel Blades

Precise, swift & durable stainless steel blade

Hooded Splash Guard

Designed to minimize splatter and maintain a clean kitchen

Image 3: Blades and Splash Guard

A detailed view of the finely honed sharp stainless-steel blades and the protective splash guard, designed to minimize mess during blending operations.

4. Setup & Initial Charging

4.1 Assembly

1. Align the detachable stainless-steel blade assembly with the main motor body.
2. Twist the blade assembly clockwise until it securely locks into place. You should hear a click.
3. To disassemble, press the unlock button on the side of the motor body and twist the blade assembly counter-clockwise to remove.

4.2 Initial Charging

Before first use, fully charge your hand blender.

1. Locate the USB charging port on the main motor body.
2. Connect the provided USB charging cable to the port and plug the other end into a compatible USB power adapter (not included).
3. The battery indicator lights will illuminate to show charging status. A full charge typically takes less

than 2 hours.

4. Once fully charged, disconnect the cable. The blender is now ready for use.



Image 4: Battery Indicator and Charging Port

This image illustrates the battery indicator lights on the main motor body, which show the charge level, and the location of the USB charging port for convenient recharging.

5. Operating Instructions

5.1 Basic Blending (Immersion Blender)

1. Ensure the blade assembly is securely attached to the motor body.
2. Immerse the blade assembly into the ingredients you wish to blend. The splashguard should be fully submerged to prevent splattering.
3. Press and hold the power button to start blending.
4. Rotate the variable speed control knob at the top of the motor body to adjust the blending speed.
5. Blend in short bursts, typically **no longer than one minute at a time**, to prevent overheating. Allow for brief pauses between intervals.
6. Release the power button to stop blending.

5.2 Using the Whisk Attachment (if applicable)

While the primary function is immersion blending, if a whisk attachment is acquired separately, it would attach similarly to the main body for whipping eggs, cream, or light batters.

5.3 Using the Chopper Attachment (if applicable)

Similarly, if a chopper attachment is acquired, it would connect to the main motor body to chop vegetables, nuts, or other ingredients.

Your browser does not support the video tag.

Video 1: Elite Gourmet EHB1300 Cordless Rechargeable Hand Blender in Action

This video demonstrates the Elite Gourmet EHB1300 Cordless Rechargeable Hand Blender being used to blend various ingredients, showcasing its ease of use, cordless operation, and effectiveness in preparing different food items.

6. Maintenance & Cleaning

6.1 Cleaning the Blade Assembly

- After each use, immediately detach the stainless-steel blade assembly from the motor body.
- The blade assembly is dishwasher safe. Alternatively, hand wash it with warm, soapy water and a brush to remove any food residue. Rinse thoroughly.
- Handle blades with extreme caution as they are very sharp.

6.2 Cleaning the Motor Body

- Wipe the main motor body with a soft, damp cloth.
- **Do not immerse the motor body in water or any other liquid.**
- Ensure the charging port is clean and dry before storage or recharging.

6.3 Storage

Store the blender and its attachments in a dry place, away from direct sunlight and heat. The detachable design allows for compact storage.

7. Troubleshooting

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is low or depleted.	Charge the blender fully (approx. 2 hours).
	Blade assembly not securely attached.	Ensure the blade assembly is twisted and locked into place.
Blender stops during operation.	Overheating protection activated.	Release the power button, allow the unit to cool down for a few minutes. Operate in 1-minute intervals.
	Battery is low.	Recharge the blender.
Ineffective blending.	Too little liquid or too many hard ingredients.	Add more liquid or reduce the amount of ingredients. Ensure ingredients are soft enough for blending.

8. Specifications

- **Brand:** Elite Gourmet
- **Model:** EHB1300
- **Color:** Grey
- **Special Feature:** Adjustable Speed Control
- **Capacity:** 16 Fluid Ounces (for typical blending tasks, not included beaker)
- **Product Dimensions:** 2.4"D x 2.4"W x 14.6"H
- **Included Components:** Hand Blender (Motor Body, Detachable Blade Assembly)
- **Style:** Immersion Blenders
- **Recommended Uses:** Blending (soups, smoothies, sauces, baby food)
- **Power Source:** Battery Powered (2000mAh Li-ion rechargeable battery)
- **Voltage:** 127 Volts
- **Blade Material:** Stainless Steel
- **Control Type:** Manual (Pressure Sensitive with Variable Speed Dial)
- **Item Weight:** 1.83 pounds

9. Warranty & Support

The Elite Gourmet EHB1300 Hand Blender comes with a **Limited Warranty**. For specific warranty details, please refer to the warranty card included in your product packaging or contact Elite Gourmet customer support.

As a trusted brand for 40 years, Elite Gourmet is committed to providing high-quality products and excellent customer service. If you have any questions, concerns, or require support, please contact our US-based support team via phone, email, or live chat. Our team responds quickly to all inquiries.

For further assistance, please visit the [Elite Gourmet Store on Amazon](#).