

Bosch 00674387

Bosch 00674387 Dishwasher AquaStop Hose Assembly Instruction Manual

INTRODUCTION

Welcome to the instruction manual for your Bosch 00674387 AquaStop Hose Assembly. This manual provides essential information for the safe and correct installation, function, and maintenance of your new hose assembly. Please read these instructions carefully before beginning installation and retain them for future reference.

PRODUCT OVERVIEW

The Bosch 00674387 is a genuine OEM AquaStop Hose Assembly designed for dishwashers. This component is crucial for preventing water damage by automatically shutting off the water supply if a leak is detected.

This hose assembly is approximately 5 feet long, not including connections.

It is compatible with dishwashers from brands including Kenmore, Bosch, Thermador, and Gaggenau.

This part replaces the original part number 674387.



An image showing the Bosch 00674387 AquaStop Hose Assembly. The hose is translucent white, coiled, with a brass-colored connector at one end and a plastic housing with a black C-clip at the other end, indicating its connection points.

SAFETY INFORMATION

Before proceeding with installation or any maintenance, always prioritize safety:

- Unplug the dishwasher from its power source.
- Shut off the main water supply to the dishwasher.
- Wear appropriate work gloves to protect your hands during installation.
- If you are unsure about any step, consult a qualified service professional or your appliance manufacturer.
- Refer to your appliance's service manual for specific instructions related to your dishwasher model.

Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

INSTALLATION INSTRUCTIONS

This section outlines the general steps for installing the Bosch 00674387 AquaStop Hose Assembly. Specific installation procedures may vary depending on your dishwasher model. Always refer to your dishwasher's service manual for detailed instructions.

1. Ensure the dishwasher is unplugged and the water supply is turned off.
2. Locate the existing water inlet hose connection at the back of the dishwasher and at the water supply valve.
3. Carefully disconnect the old hose, being prepared for any residual water.
4. Connect one end of the new Bosch 00674387 AquaStop Hose Assembly to the dishwasher's water inlet. Ensure a secure, watertight connection.
5. Connect the other end of the AquaStop Hose Assembly to the household water supply valve. Tighten securely to prevent leaks.
6. Slowly turn on the water supply and check for any leaks at both connection points. Tighten connections further if necessary.
7. Plug the dishwasher back into its power source.
8. Run a short cycle to confirm proper operation and check for leaks again.

It is recommended to either refer to your appliance service manual, contact your appliance manufacturer, or contact a service professional to validate the needed part number for your appliance prior to purchasing and for installation guidance.

OPERATION AND FUNCTION

The Bosch AquaStop Hose Assembly is an integral safety feature. Once correctly installed, it continuously monitors for water leaks. In the event of a leak, the AquaStop system is designed to automatically shut off the water supply to the dishwasher, preventing potential water damage to your home. No user intervention is required for its protective function during normal operation.

MAINTENANCE

The Bosch 00674387 AquaStop Hose Assembly requires minimal maintenance.

- Periodically inspect the hose for any visible signs of wear, cracks, or damage.
- Check the connections at both ends for any signs of leaks or corrosion.
- Ensure the hose is not kinked or pinched, which could impede water flow or compromise its integrity.
- If any damage or persistent leaks are observed, the hose assembly should be replaced immediately by a qualified technician.

TROUBLESHOOTING

If your dishwasher is not receiving water or if you suspect an issue with the AquaStop hose, consider the following:

- **No Water Supply:** Ensure the main water supply valve to the dishwasher is fully open. Check if the AquaStop system has activated due to a leak. If activated, the system will prevent water flow. Identify and resolve the leak before resetting or replacing the hose.
- **Visible Leaks:** If you observe water leaking from the hose or its connections, immediately shut off the water supply and power to the dishwasher. Inspect the connections for tightness. If the hose itself is damaged, it must be replaced.
- **Error Codes:** Refer to your dishwasher's user manual for specific error codes related to water supply or AquaStop system issues.

For complex issues or if troubleshooting steps do not resolve the problem, contact a certified appliance technician.

SPECIFICATIONS

Feature	Detail
Model Number	00674387
Brand	Bosch
Type	AquaStop Hose Assembly
Length	Approximately 5 feet (not including connections)

Feature	Detail
Material	Multi-Material
Replaces Part	674387
Compatible Brands	Kenmore, Bosch, Thermador, Gaggenau
Item Weight	1.32 pounds
Product Dimensions	1 x 1 x 1 inches (packaging/shipping dimensions)

Note: Product dimensions listed may refer to packaging or shipping size. The hose itself is approximately 5 feet long.

WARRANTY AND SUPPORT

For warranty information regarding your Bosch 00674387 AquaStop Hose Assembly, please refer to the documentation provided with your original dishwasher or contact Bosch customer service directly.

For technical support or to locate authorized service providers, visit the official Bosch website or contact their customer support line.