

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BOSCH](#) /

› [Bosch 00770199 Dishwasher Control Panel User Manual](#)

## BOSCH 00770199

# Bosch 00770199 Dishwasher Control Panel User Manual

Model: 00770199

## INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Bosch 00770199 Dishwasher Control Panel. The 00770199 is a genuine OEM Bosch component designed to house the selection buttons and display for compatible Bosch dishwashers. It functions as the primary interface for controlling dishwasher cycles and options.

This control panel is also known as a facia panel and is a direct replacement for part number 770199.

## IMPORTANT SAFETY INFORMATION

Before attempting any installation or repair, please observe the following safety guidelines:

- Always disconnect power to the dishwasher before beginning any service or installation procedures to prevent electric shock.
- It is highly recommended to refer to your specific appliance service manual for detailed instructions.
- Contact your appliance manufacturer or a qualified service professional to validate the correct part number and ensure proper installation.
- Wear appropriate personal protective equipment, such as gloves, during installation.

## PRODUCT OVERVIEW

The Bosch 00770199 Control Panel provides the user interface for selecting wash cycles and options. Below is an image of the control panel with its various buttons and display area.



**Image 1:** Front view of the Bosch 00770199 Dishwasher Control Panel. It features the Bosch logo on the left, an On/Off

button, a series of cycle selection buttons (Heavy, Auto, Normal, Express, Rinse), a central digital display, option buttons (Delay, Half Load, Delicate, Sanitize, Extra Shine), and a Start button on the right. The model name "SilencePlus 44 dBA" is also visible on the right side.

## Control Panel Features:

- **On/Off Button:** Powers the dishwasher on or off.
- **Cycle Selection Buttons:** Includes options for Heavy, Auto, Normal, Express, and Rinse cycles.
- **Digital Display:** Shows cycle status, time remaining, and error codes.
- **Option Buttons:** Provides additional wash options such as Delay, Half Load, Delicate, Sanitize, and Extra Shine.
- **Start Button:** Initiates the selected wash cycle.

## SETUP AND INSTALLATION

The Bosch 00770199 Control Panel is a replacement part. Installation typically involves removing the existing control panel and connecting the new one. Due to the electrical components and specific fitting requirements, it is strongly recommended that installation be performed by a qualified appliance service professional.

### General Steps (for reference only; consult a professional):

1. Ensure the dishwasher's power supply is disconnected at the circuit breaker.
2. Carefully open the dishwasher door and locate the screws or clips securing the existing control panel.
3. Disconnect any wiring harnesses from the old control panel, noting their positions if necessary.
4. Attach the new Bosch 00770199 Control Panel, ensuring all connections are secure and correctly seated.
5. Re-secure the panel with screws or clips.
6. Restore power to the dishwasher and test functionality.

*Failure to follow proper installation procedures can result in damage to the appliance or personal injury.*

## OPERATING INSTRUCTIONS

Once the control panel is installed and power is restored, you can operate your dishwasher using the following general steps:

1. **Power On:** Press the **On/Off** button to activate the dishwasher. The display will illuminate.
2. **Select a Cycle:** Choose the desired wash cycle by pressing one of the **Cycles** buttons:
  - **Heavy:** For heavily soiled dishes and pots.
  - **Auto:** Automatically adjusts wash time and temperature based on soil level.
  - **Normal:** For everyday dishwashing.
  - **Express:** A shorter cycle for lightly soiled dishes.
  - **Rinse:** For rinsing dishes that will be washed later.
3. **Select Options (Optional):** Press any of the **Options** buttons to customize your wash:
  - **Delay:** Delays the start of the cycle.
  - **Half Load:** For smaller loads, saves water and energy.
  - **Delicate:** Gentle wash for fragile items.
  - **Sanitize:** Uses higher temperatures to sanitize dishes.
  - **Extra Shine:** Enhances drying and reduces water spots.

4. **Start Cycle:** Press the **Start** button to begin the wash cycle. The display will show the remaining time.
5. **Pause/Cancel:** To pause a cycle, press the **Start** button again. To cancel, consult your dishwasher's main user manual, as this often involves holding the Start button or a specific combination.

## MAINTENANCE

To ensure the longevity and proper function of your control panel, follow these maintenance tips:

- **Cleaning:** Wipe the control panel surface with a soft, damp cloth. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electronic components.
- **Spills:** Immediately wipe away any spills on the control panel to prevent liquid from seeping into the electronics.
- **Inspection:** Periodically check for any signs of wear, cracks, or loose buttons. If any issues are observed, contact a service professional.

## TROUBLESHOOTING

If you experience issues with your dishwasher's control panel, consider the following general troubleshooting steps:

- **No Power/Display Off:**
  - Check if the dishwasher is properly plugged in.
  - Verify the circuit breaker for the dishwasher has not tripped.
  - Ensure the **On/Off** button has been pressed.
- **Buttons Unresponsive:**
  - Try pressing the button firmly.
  - Ensure the control panel is clean and free of debris.
  - If the issue persists, a reset (disconnecting power for a few minutes) might resolve minor glitches.
- **Error Codes on Display:**
  - Refer to your main dishwasher user manual for a list of error codes and their meanings.
  - If the code indicates a control panel malfunction, professional service may be required.

For complex issues or if troubleshooting does not resolve the problem, contact Bosch customer support or a certified service technician.

## SPECIFICATIONS

Feature	Detail
Brand	Bosch
Model Number	00770199
Replaces Part Number	770199
Product Dimensions	24.38 x 7.5 x 3.25 inches

Feature	Detail
Item Weight	1.6 pounds
Compatibility	Bosch Dishwashers (verify with appliance service manual)
Type	Genuine OEM Control Panel / Facia Panel

## WARRANTY AND SUPPORT

For information regarding the warranty of your Bosch 00770199 Control Panel, please refer to the documentation provided with your original dishwasher or contact Bosch customer service directly. As an OEM part, its warranty coverage may be tied to the appliance it is installed in.

For technical support, service appointments, or to purchase additional genuine Bosch parts, please visit the official Bosch website or contact their customer support line.

© 2023 Bosch. All rights reserved. This manual is for informational purposes only.