

cabaro DE-green printer

cabaro Mini Thermal Printer Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your cabaro Mini Thermal Printer. Please read this manual thoroughly before using the device to ensure proper function and longevity. This portable printer is designed for convenient printing of photos, notes, labels, and more directly from your smartphone or tablet.

2. PRODUCT OVERVIEW

The cabaro Mini Thermal Printer is a compact, inkless printing solution. It connects via Bluetooth and uses thermal paper to produce clear, monochrome prints. Its small size makes it ideal for on-the-go use, study, journaling, and creative projects.

Key Features:

- **Inkless Thermal Printing:** No need for ink cartridges or toner.
- **Bluetooth Connectivity:** Seamless pairing with Android (4.0+) and iOS (8.0+) devices.
- **High Resolution:** 203 dpi for clear images and text.
- **Portable Design:** Lightweight and compact for easy carrying.
- **Versatile Use:** Ideal for photos, memos, study notes, labels, and DIY crafts.

Package Contents:

- cabaro Mini Thermal Printer
- 3 Rolls of Thermal Sticker Paper (50mm-53mm)
- USB Charging Cable (not explicitly mentioned but standard for such devices)
- Instruction Manual (this document)



Image 2.1: The cabaro Mini Thermal Printer shown with three rolls of thermal paper and various printed examples, including a photo, a diagram, and cartoon images.

3. SETUP

3.1 App Installation

1. Locate the "Fun Print" app on your device's app store. You can find it on Google Play for Android devices or the App Store for iOS devices.
2. Download and install the "Fun Print" application.
3. Grant necessary permissions when prompted by the app to ensure full functionality.



Image 3.1: Screenshots illustrating the download of the "Fun Print" app from Google Play and the App Store, along with examples of the app's interface.

3.2 Loading Thermal Paper

1. Gently open the printer cover.
2. Insert a roll of thermal paper into the designated compartment, ensuring the paper feeds out smoothly.
3. Close the printer cover securely.

3.3 Bluetooth Connection

1. Ensure your cabaro Mini Thermal Printer is powered on.
2. Activate Bluetooth on your smartphone or tablet.
3. Open the "Fun Print" app.
4. Within the app, navigate to the connection settings and select your printer from the list of available Bluetooth devices. The printer's name might appear as "MX05" or similar.
5. Confirm the pairing request on your device.

HOW TO USE MINI PRINTER



01- Download "Fun Print" APP
turn on the mini printer



02- Turn on Bluetooth of your
phone & connect to the printer



03- Load the thermal paper into
the printer



04- Use the APP & start printing!

Image 3.2: A visual guide demonstrating the four main steps for using the mini printer: downloading the app, turning on Bluetooth and connecting, loading thermal paper, and starting printing.

4. OPERATING INSTRUCTIONS

Once connected, the "Fun Print" app provides various options for printing. You can print photos, text, web pages, labels, and more.

4.1 Printing Photos and Text

1. Open the "Fun Print" app.
2. Select the desired printing function (e.g., "Image Print," "Text Print," "Web Print").
3. Choose the content you wish to print from your device's gallery or input text directly.
4. Adjust print settings such as density or size if available within the app.
5. Tap the print button to initiate printing.

4.2 Using App Features

The "Fun Print" app offers a variety of fonts, filter effects, and themes to enhance your prints. Explore the

app's interface to discover features for:

- Creating custom labels and stickers.
- Organizing study notes and flashcards.
- Printing to-do lists and memos.
- Adding decorative elements to journals and DIY projects.

Self-Made Greeting Cards

Make Blessings More Sincere



Customized "To Do list"

Develop Children's Excellent Habits



Study Notes Extraction

Convenient to Remember Key Points



Daily Necessities Organization

Keep Life Organized from Childhood



Image 4.1: Examples of the printer's versatility, showing prints used for self-made greeting cards, customized to-do lists, study notes extraction, and daily necessities organization.



Fun print
Design & Piont APP

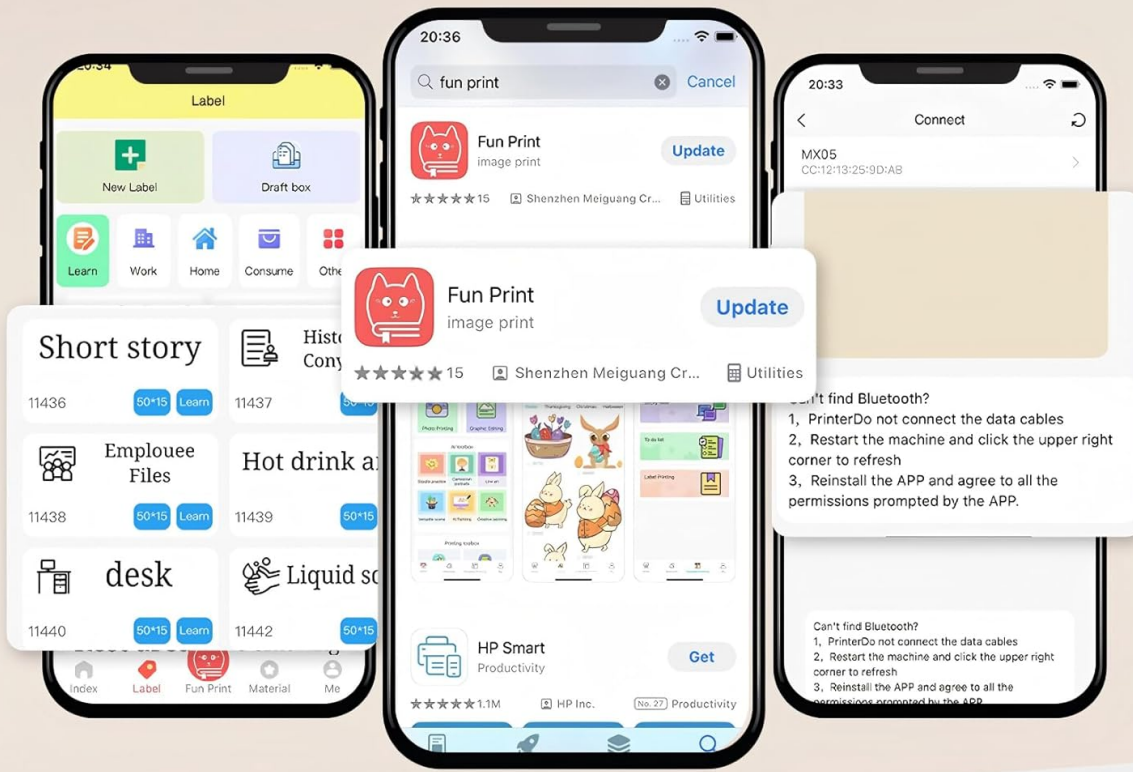


Image 4.2: Demonstrates different types of content that can be printed, such as labels for olive oil, personal pictures, excerpts from articles, and various templates.

Add Some Fun to Your Family Time



Image 4.3: A family engaging in printing activities with the mini printer, showcasing various printed designs like coloring pages and decorative labels.

Pocket Printer For Notes

Do your notes more efficient



Image 4.4: The mini printer being used to print science-related notes and diagrams, demonstrating its utility for educational purposes.

5. MAINTENANCE

5.1 Cleaning

To maintain optimal print quality, periodically clean the print head. Use a soft, lint-free cloth lightly dampened with isopropyl alcohol. Gently wipe the print head surface. Ensure the printer is turned off and disconnected from power before cleaning.

5.2 Battery Information

The printer is equipped with a Lithium-ion battery. Charge the printer using the provided USB cable. Avoid exposing the battery to extreme temperatures or physical damage. If the printer will not be used for an extended period, charge it periodically to maintain battery health.

6. TROUBLESHOOTING

If you encounter issues with your cabaro Mini Thermal Printer, refer to the following common problems and

solutions:

Problem	Possible Cause	Solution
Cannot find Bluetooth device	Bluetooth is off on printer or phone; app permissions not granted.	Ensure printer is on and Bluetooth is enabled on your phone. Restart the machine and click the upper right corner to refresh the device list in the app. Verify app permissions.
Printer not connecting	Loose cable connection; app issue.	Ensure data cables are securely connected. Reinstall the app and agree to all the permissions prompted by the app.
Poor print quality	Low battery; dirty print head; incorrect paper.	Charge the printer. Clean the print head (see Section 5.1). Ensure you are using thermal paper.
Paper jam	Improper paper loading.	Turn off the printer, open the cover, carefully remove any jammed paper, and reload correctly.

7. SPECIFICATIONS

Feature	Specification
Brand	cabaro
Model Number	DE-green printer
Connectivity Technology	Bluetooth
Printing Technology	Thermal
Print Output	Monochrome
Max Print Speed (Monochrome)	120 Pages per minute
Compatible Devices	Phone, Tablet
Special Feature	Portable
Battery Composition	Lithium-ion (included)
Item Weight	160 Grams

8. WARRANTY AND SUPPORT

Specific warranty information for the cabaro Mini Thermal Printer is not provided in this document. For details regarding warranty coverage, technical support, or replacement parts, please refer to the product packaging or contact the manufacturer directly through their official website or customer service channels.