

[Manuals.plus](#) /

> [G GX9](#) /

> G GX9 Portable Adjustable Basketball Hoop System (Model: Basic Basketball Hoop) - Instruction Manual

G GX9 Basic Basketball Hoop

G GX9 Portable Adjustable Basketball Hoop System (Model: Basic Basketball Hoop) - Instruction Manual

Model: Basic Basketball Hoop | Brand: G GX9

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your G GX9 Portable Adjustable Basketball Hoop System. Designed for versatility, this system features a 44-inch shatterproof backboard and an adjustable height range from 4.8 to 10 feet, making it suitable for players of all ages and skill levels. Its portable design allows for use in various outdoor and indoor settings.





Image: The G GX9 Portable Adjustable Basketball Hoop System, showcasing its full assembly with a clear backboard and red rim.

SAFETY INFORMATION

- Ensure all parts are securely fastened before use. Regularly check bolts and connections for tightness.
- Fill the base completely with water or sand to ensure maximum stability and prevent tipping.
- Do not hang on the rim or backboard, as this can cause injury or damage to the system.
- Supervise children during play to prevent accidents.
- Avoid using the system in strong winds or severe weather conditions.
- Keep hands and fingers clear of moving parts during height adjustment.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. Refer to the assembly video for visual identification of parts.

- Backboard (Shatterproof PC)
- Basketball Rim (18-inch, shock-absorbing)
- Net (All-weather polypropylene)
- Main Pole Sections (Rust-proof RECC steel)
- Base (Fillable for stability)
- Support Brackets and Arms
- Wheels (for portability)
- Hardware (bolts, nuts, washers, springs, tools)
- Height Adjustment Mechanism

SETUP AND ASSEMBLY

For a detailed visual guide, please refer to the official assembly video below. The following steps outline the general assembly process:

Your browser does not support the video tag.

Video: Official Basketball Hoop Assembly Video by Giantex. This video demonstrates the step-by-step process of assembling the portable basketball hoop system.

1. **Assemble the Main Pole:** Connect the various sections of the main pole and secure them with the provided bolts. Attach the pole support bracket.
2. **Attach Pole to Base:** Insert the assembled main pole into the base. Secure it using the appropriate hardware and attach the base support bars. Install the wheels onto the base.
3. **Assemble Backboard and Rim:** Attach the 18-inch shock-absorbing rim to the 44-inch shatterproof PC backboard. Ensure all springs and mounting hardware are correctly installed.
4. **Connect Backboard to Pole:** Carefully lift and connect the backboard and rim assembly to the upper section of the main pole using the designated bolts and brackets. This step may require assistance.
5. **Install Height Adjustment Mechanism:** Attach the height adjustment lever and associated components to the main pole, ensuring smooth operation.
6. **Secure Base Cover:** If your model includes a base cover, attach it to the base.
7. **Attach the Net:** Thread the all-weather polypropylene net through the hooks on the rim.
8. **Fill the Base for Stability:** Open the fill cap on the base and fill it with either 13.2 gallons of water or 143.3 lbs of sand. This is critical for the system's stability. Close the cap securely.

ENLARGED BASE TO ENSURE STABILITY



Can be filled
with 13.2 gallons
or 143.3 lbs sand



Basketball Storage

Image: Diagram showing how to fill the base with water or sand to ensure maximum stability during use.

OPERATING INSTRUCTIONS

Height Adjustment

The G GX9 basketball hoop features an adjustable height mechanism, allowing the rim to be set between 4.8 feet and 10 feet. To adjust the height, locate the adjustment lever on the main pole. Follow the instructions provided with the specific


mechanism to safely raise or lower the backboard to your desired height. Ensure the mechanism locks securely into place after adjustment.

4.8FT-10FT

ADJUSTABLE HEIGHT RANGE

Suitable for all ages

14-Levels

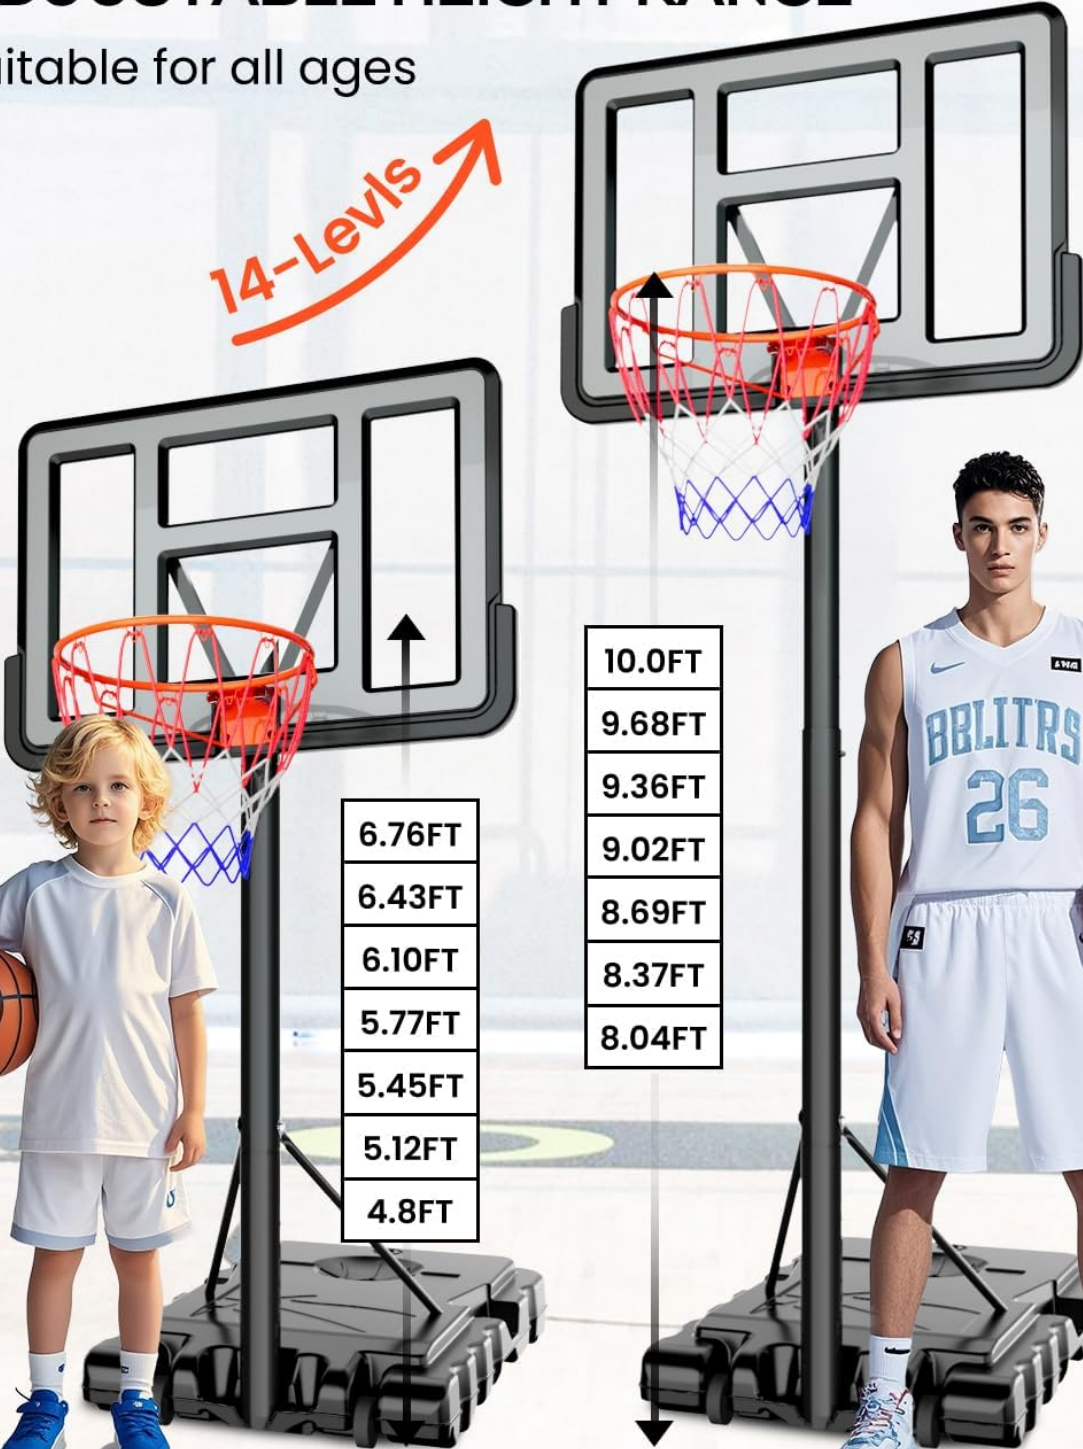

10.0FT
9.68FT
9.36FT
9.02FT
8.69FT
8.37FT
8.04FT
6.76FT
6.43FT
6.10FT
5.77FT
5.45FT
5.12FT
4.8FT



Image: Visual representation of the basketball hoop's adjustable height range, illustrating different settings for various age groups.

Portability

This basketball system is equipped with two integrated wheels on the base for easy relocation. To move the hoop, tilt the system forward slightly, lifting the back of the base off the ground. Roll the system to your desired location. Always

ensure the base is fully filled for stability before and after moving.

PORTABLE DESIGN

Equipped with **2 wheels**
for easy movement and storage



Image: Close-up of the base showing the integrated wheels, facilitating easy movement of the basketball system.

MAINTENANCE

- **Regular Inspection:** Periodically check all bolts, nuts, and connections to ensure they are tight. Tighten any loose hardware to maintain stability and safety.

- **Base Content:** Regularly check the water or sand level in the base, especially after heavy use or strong winds. Refill as necessary to maintain optimal stability.
- **Cleaning:** Clean the backboard and pole with a mild soap and water solution. Avoid abrasive cleaners that could scratch the backboard or damage the finish.
- **Rust Prevention:** The pole is made of rust-proof RECC steel, but regular cleaning and inspection can further extend its lifespan, especially in humid or coastal environments.
- **Net Replacement:** Replace the net if it becomes worn, torn, or damaged to ensure continued playability.

TROUBLESHOOTING

- **System Instability:** Ensure the base is completely filled with water or sand. Check all assembly bolts for tightness.
- **Difficulty Adjusting Height:** Inspect the height adjustment mechanism for any obstructions or damage. Ensure the locking pin or lever is fully disengaged before attempting to adjust.
- **Squeaking Noises:** Apply a small amount of lubricant to moving parts or pivot points if squeaking occurs during adjustment or play.
- **Damaged Net:** Replace the net with a new all-weather polypropylene net.

SPECIFICATIONS

Feature	Detail
Brand	G GX9
Model Name	Basic Basketball Hoop
Product Dimensions	111.76 x 74.93 x 304.8 cm (44 x 29.5 x 120 inches)
Item Weight	21 kg (46.3 lbs)
Colour	Gray
Adjustable Height Range	4.8 to 10 Feet
Backboard Size	44 inches
Backboard Material	Shatterproof Polycarbonate (PC)
Rim Size	18 inches
Frame Material	Polyethylene (PE)
Pole Material	Rust-proof RECC Steel
Base Capacity (Water)	13.2 Gallons
Base Capacity (Sand)	143.3 lbs
Special Features	Adjustable Height, Portable, Rust Resistant, Shatterproof
Usage	Indoor/Outdoor

WARRANTY AND SUPPORT

G GX9 is committed to customer satisfaction. For any questions regarding assembly, operation, or if you encounter any issues with your basketball hoop system, please contact our customer service team. We provide 24/7 after-sales service to assist with logistics, installation, and any product-related concerns.

Please retain your proof of purchase for warranty claims. Specific warranty details may vary; refer to your purchase documentation or contact customer support for more information.

© 2023 G GX9. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question