

[Manuals.plus](#) /

> [UPBRIGHT](#) /

> UpBright 12V AC/DC Adapter for Anker Soundcore Rave Party 2 A3399 Instruction Manual

UPBRIGHT Soundcore Rave Party 2 A3399 Charger

UpBright 12V AC/DC Adapter Instruction Manual

Compatible with Anker Soundcore Rave Party 2 A3399 Series Speakers

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your UpBright 12V AC/DC Adapter. This adapter is designed to provide power and charge compatible devices, specifically the Anker Soundcore Rave Party 2 A3399, A3399Z11, and AK-A3399Z11 portable party speakers. Please read this manual thoroughly before use and retain it for future reference.

2. PRODUCT OVERVIEW

2.1 Package Contents

- 1 x UpBright 12V AC/DC Adapter

2.2 Key Features

- **Wide Input Voltage:** Supports global input voltage from 100-240VAC, 50/60Hz, making it suitable for international use.
- **Safety Protections:** Equipped with Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to ensure safe and reliable power delivery.
- **Compatibility:** Specifically designed for Anker Soundcore Rave Party 2 II A3399, A3399Z11, AK-A3399Z11 portable party speakers requiring a 12V DC input.
- **Durable Design:** Constructed with high-quality, environmentally friendly TPE material for enhanced flexibility and durability.
- **Space-Saving Design:** Features a single-outlet design to keep adjacent outlets free for other devices.



Image 2.1: The UpBright 12V AC/DC Adapter, showing its compact design and barrel connector.

UpBright AC Adapter Power Supply Compatible with:

(Machine not Included)



Image 2.2: The UpBright AC Adapter shown alongside a compatible Anker Soundcore Rave Party 2 speaker, illustrating its intended use.



Image 2.3: Diagram illustrating the multiple security protection features integrated into the adapter, including overcharge, overvoltage, overheat, and short circuit protection.

3. SETUP

1. **Verify Compatibility:** Ensure your device, such as the Anker Soundcore Rave Party 2 A3399 speaker, requires a 12V DC input and has a compatible barrel round connector.
2. **Connect to Device:** Insert the barrel connector of the UpBright adapter firmly into the power input port of your Anker Soundcore Rave Party 2 speaker.
3. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard wall power outlet (100-240VAC).
4. **Power On:** Once connected, your device should begin charging or receive power. Refer to your device's manual for specific charging indicators.

Safety Precautions:

- Do not expose the adapter to water or excessive moisture.
- Avoid using the adapter in extreme temperatures.
- Do not attempt to disassemble or modify the adapter.
- Ensure the power outlet is easily accessible for quick disconnection if needed.

UpBright AC Adapter Power Supply Compatible with:



Image 3.1: A close-up view of the barrel round connector, highlighting its design for secure connection.



Image 3.2: Comparison illustrating the UpBright adapter's single-outlet design, which allows other outlets to remain accessible, unlike typical chargers that may block multiple sockets.

4. OPERATING INSTRUCTIONS

The UpBright 12V AC/DC Adapter functions as a power supply and charger for compatible devices. Once properly connected as described in the Setup section, the adapter will automatically provide power or initiate charging.

- **Charging:** When connected to a compatible device like the Anker Soundcore Rave Party 2 speaker, the adapter will supply the necessary power to charge its internal battery. The charging status (e.g., LED indicators) will typically be displayed on the device itself.
- **Direct Power:** If the device can operate directly from AC power without a battery, the adapter will provide continuous power.

Always ensure the adapter is securely connected to both the device and the power outlet during operation.

5. MAINTENANCE

5.1 Cleaning

- Disconnect the adapter from the power outlet and the device before cleaning.
- Wipe the adapter with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

5.2 Storage

- Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid tightly coiling the cable to prevent damage.



Image 5.1: Illustration highlighting the flexible and durable construction of the adapter's wire, designed for longevity and resistance to wear.

6. TROUBLESHOOTING

- **Device Not Charging/Powering On:**
 - Ensure the adapter is securely plugged into both the wall outlet and the device.
 - Check if the wall outlet is functional by plugging in another device.
 - Verify that the adapter's specifications (voltage, current) match your device's requirements.
 - **Note on Rechargeable Batteries:** Rechargeable batteries have a limited lifespan, typically 1 to 3 years. If your device's battery is old or faulty, it may not accept a charge, which is a device issue, not an adapter malfunction.
- **Adapter Overheating:**
 - A slight warmth is normal during operation. If the adapter becomes excessively hot, disconnect it immediately.
 - Ensure adequate ventilation around the adapter and avoid covering it.
 - Confirm the adapter is not overloaded by connecting it to an incompatible device.

7. SPECIFICATIONS

Feature	Detail
Brand	UPBRIGHT
Model Number	Soundcore Rave Party 2 A3399 Charger
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	12V DC
Connector Type	Barrel Round Connector
Compatible Devices	Anker Soundcore Rave Party 2 A3399, A3399Z11, AK-A3399Z11
Product Dimensions	4 x 3 x 2 inches
Item Weight	3.52 ounces
Special Feature	Short Circuit Protection

8. WARRANTY AND SUPPORT

UpBright offers a warranty for this product:

- **Refund Policy:** 30 days from the date of purchase.
- **Exchange Policy:** 24 months from the date of purchase.

For support or warranty claims, please refer to the contact information provided with your purchase or visit the official UpBright store on Amazon: [UpBright Amazon Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question