

ChunHee B0CGXD9QGY

ChunHee Solar Outdoor Motion Sensor Alarm Instruction Manual

Model: B0CGXD9QGY

INTRODUCTION

The ChunHee Solar Outdoor Motion Sensor Alarm is designed to provide security and deter unwanted intruders, including animals and humans, from your property. Utilizing solar power, this device features a motion sensor, a loud alarm (up to 130dB), a strobe light, and customizable sound options including dog barking and gunshot sounds. It is suitable for various outdoor environments such as homes, villas, farms, and barns.

PRODUCT FEATURES

- **Motion Sensor Activation:** Detects movement within a 5-8 meter range and a 110-degree angle, triggering the alarm and strobe light.
- **High Decibel Alarm:** Produces a loud 130dB sound to effectively deter intruders.
- **Customizable Sounds:** Supports recording your own alarm sound or choosing from default options like barking dog and gunshots. Adjustable volume ensures it does not disturb neighbors.
- **Multiple Work Modes:** Offers three operational modes: 24-hour flash and alarm, night-only flash and alarm, and cyclic flash and alarm every 5 minutes at night.
- **Solar Powered & Weatherproof:** Equipped with a high-capacity solar panel for continuous operation and an IP65 waterproof ABS housing to withstand various weather conditions.
- **Easy Installation:** Designed for simple setup in locations with sufficient sunlight.

PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- ChunHee Solar Outdoor Motion Sensor Alarm unit
- Remote Control
- USB Charging Cable
- Installation Kit (screws and wall plugs)

Charging Methods

High conservation solar charging

Solar charge >10 hours

 


DC Charge

Support USB charge

Please use DC5V*≤1A charger

DC charge <2hrs

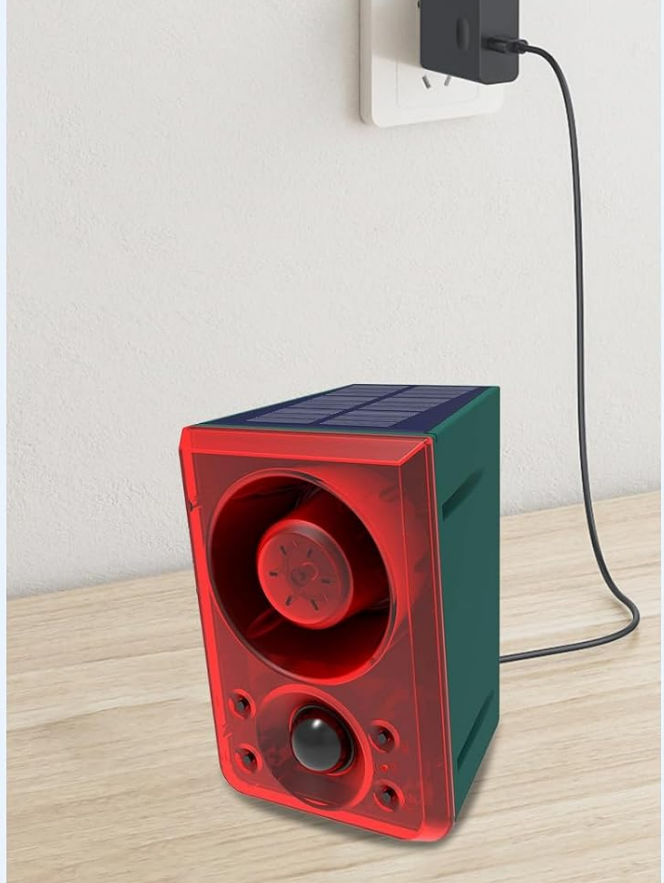

Charging efficiency will be affected by sunshine in different weather and season. Mounting place should be under directly sunshine more than 4 hours

Figure 1: Package Contents

PRODUCT OVERVIEW

Familiarize yourself with the components of your ChunHee Solar Outdoor Motion Sensor Alarm:

Deters "unwelcomer" with Different Working Modes



 
Mode A: Full day 24 hour flash and alarm

Alarm and flash when motion is detected 24 hours a day



Mode B: Night 12 hour flash and alarm

Alarm and flash when motion is detected at night

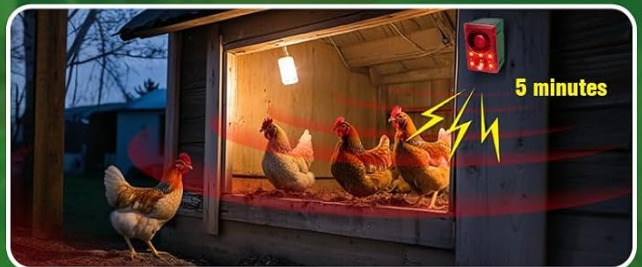

Mode C: Night 12 hour flash and alarm every 5 minutes

Alarm and flash every 5 minutes at night

Figure 2: Front View and Controls



Figure 3: Side/Back View with Mounting and Charging Ports

SETUP AND INSTALLATION

Follow these steps for optimal performance and placement:

1. **Initial Charge:** Before installation, ensure the solar alarm charges under direct sunlight for at least one full day. This activates the internal battery.
2. **Choose Location:** Select a location that receives ample direct sunlight throughout the day for the solar panel. The device should be positioned to face the direction from which animals or intruders are most likely to approach.
3. **Mounting:** Use the provided installation kit (screws and wall plugs) to securely mount the alarm unit. Ensure it is at a height where the PIR sensor can effectively detect motion.
4. **Remote Control Activation:** Before using the remote control, remove the battery isolation piece from the bottom. If the remote distance shortens or becomes insensitive, replace the battery.

2 Charging Methods

High conversion solar charging



DC charge

- Support USB charge
- Please use DC5V*≤1A charger
- DC charge<2Hrs



Figure 4: Example Installation in a Garden

Flexible sound modes



-  The alarm default gunshot sound & dog barking
-  You can set up any recording you want
-  Supports 3 levels of volume up/down



Figure 5: Multiple Units for Larger Areas

CHARGING METHODS

Your alarm unit can be charged via two methods:

- **Solar Charging:** The integrated solar panel converts sunlight into electricity to charge the internal battery. For optimal charging, ensure the panel receives direct sunlight for more than 4 hours daily. Charging efficiency may vary with weather and season.
- **DC Charging:** For faster charging or during periods of low sunlight, use the provided USB cable with a DC 5V ≤ 1A

charger. DC charging typically takes less than 2 hours.



Figure 6: Solar and DC Charging Options

OPERATING MODES

The alarm offers three distinct operating modes, selectable via the remote control or the unit's power button:

1. **Mode A (24H Motion Sensor Flash & Alarm):** The device will activate with both flash and sound whenever motion is detected, 24 hours a day.
2. **Mode B (Night Motion Sensor Flash & Alarm):** The device will activate with both flash and sound only when motion is detected during nighttime hours.
3. **Mode C (Night Cyclic Flash & Alarm):** The device will activate with flash and sound every 5 minutes during nighttime hours, regardless of motion detection.

To cycle through modes using the unit's power button:

- Press once: Whole day 24 hrs motion sensor flash and alarm (Mode A).

- Press twice: Night motion sensor flash and alarm (Mode B).
- Press three times: Night flash & alarm every 5 minutes (Mode C).
- Press four times: Power off.

Working modes

3 Working modes to select, meet your different requirement

Mode A:

24H motion sensor sound&flash alarm

Mode B:

Night motion sensor sound&flash alarm

Mode C:

Night sound & flash alarm every 5 minutes

Remark :The alarm default gunshot sound & dog barking OR can set your own recording

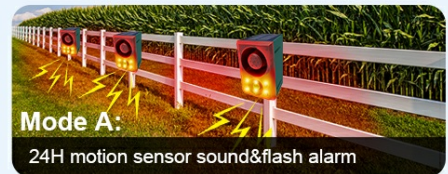 


Figure 7: Understanding the Working Modes

Your browser does not support the video tag.

Video 1: Demonstration of Outdoor Motion Sensor Alarm Functionality

RECORDING FUNCTION

The alarm allows you to record custom sounds:

1. **Initiate Recording:** Long press the recording button for 2 seconds. The indicator light will turn on.
2. **Record Sound:** Speak clearly into the microphone. The maximum recording time is 20 seconds. The device will automatically stop recording after 20 seconds or when you press the button again to finish.
3. **Overwrite:** A new recording will automatically overwrite the previous content.

The default sounds include dog barking and gunshots. You can adjust the volume using the volume buttons on the unit or remote.

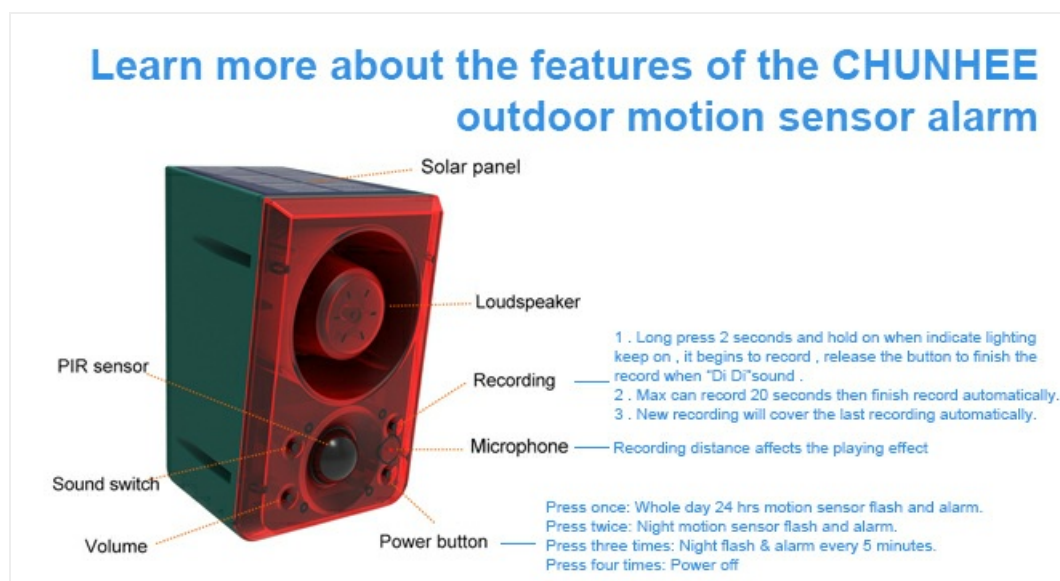 


Figure 8: Recording Custom Sounds

Your browser does not support the video tag.

Video 2: Demonstration of Barking Dog Alarm Sound

Your browser does not support the video tag.

Video 3: Solar Outdoor Motion Sensor Alarm with Dog Barking in action

REMOTE CONTROL

The included remote control provides convenient access to the alarm's functions:

- **Power On/Off:** Use the dedicated button to turn the alarm on or off.
- **Mode Selection:** Buttons A, B, and C correspond to the three operating modes (24H, Night Motion, Night Cyclic).
- **Recording:** Press the recording button to initiate or stop recording custom sounds.
- **Volume Adjustment:** Use the '+' and '-' buttons to increase or decrease the alarm volume.


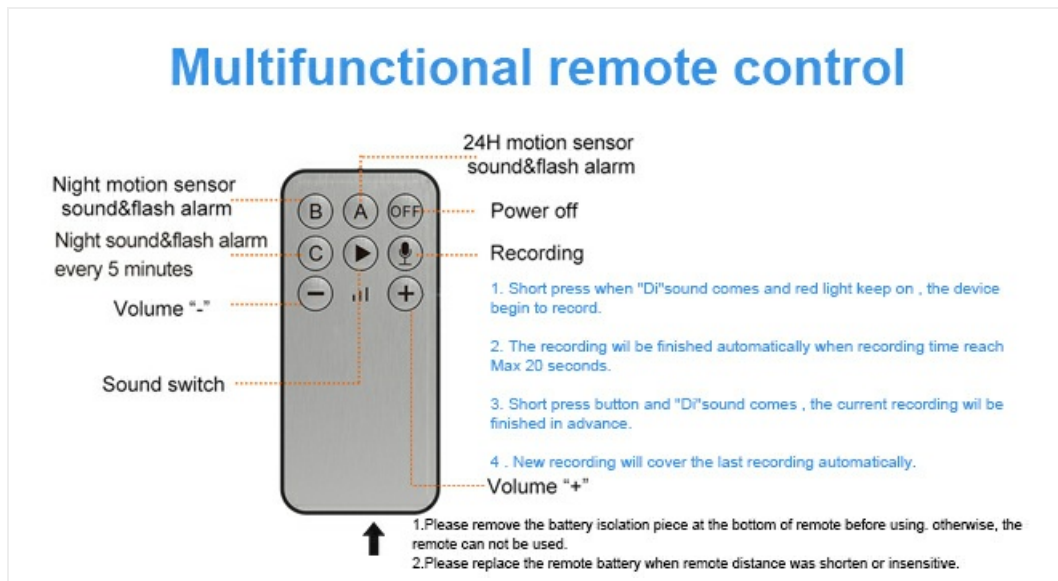 


Figure 9: Remote Control Functions

MAINTENANCE

To ensure the longevity and optimal performance of your ChunHee Solar Outdoor Motion Sensor Alarm:

 - **Clean Solar Panel:** Periodically wipe the solar panel with a soft, damp cloth to remove dust, dirt, or debris that may hinder charging efficiency.
- **Check Mounting:** Regularly inspect the mounting to ensure the unit remains securely attached and properly oriented.
- **Battery Life:** While solar-powered, prolonged periods of low sunlight may require occasional DC charging to maintain battery health.
- **Weather Resistance:** The IP65 rating ensures protection against dust and water jets. However, avoid submerging the device in water.

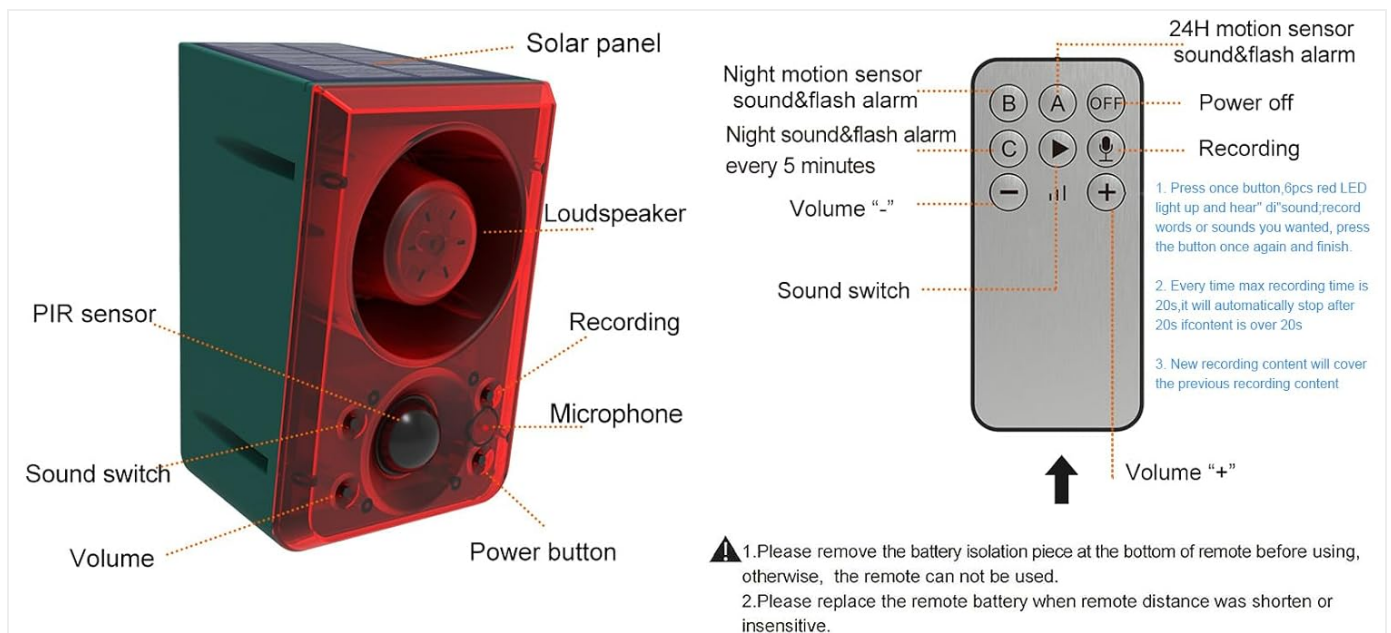

What's in the package



Solar Alarm



Remote



USB cable



Screws

Figure 10: IP65 Waterproof Design

TROUBLESHOOTING

Problem	Possible Cause	Solution
Alarm not charging via solar.	Insufficient sunlight; dirty solar panel.	Relocate to an area with more direct sunlight. Clean the solar panel. Ensure initial full charge via DC if needed.
Remote control not working.	Battery isolation tab still in place; low remote battery.	Remove the battery isolation tab. Replace the remote battery if necessary.
Motion sensor not detecting.	Incorrect placement; obstruction; low battery.	Ensure the sensor faces the detection area without obstructions. Check battery level and recharge.
Alarm triggers constantly without cause.	Sensor too sensitive; environmental factors (e.g., swaying branches).	Adjust sensor angle or relocate to avoid false triggers. Ensure no small animals are constantly triggering it.

Problem	Possible Cause	Solution
Animals not deterred.	Animals may need time to adapt; sound not loud enough.	It may take 2-4 weeks for some animals to be deterred. Increase volume if possible. Consider changing sound.

Your browser does not support the video tag.

Video 4: Customer Review Video demonstrating the alarm's effectiveness

SPECIFICATIONS

Feature	Detail
Brand	ChunHee
Model Number	B0CGXD9QGY
Power Source	Solar Powered
Product Dimensions (L x W x H)	5" x 3" x 5"
Voltage	12 Volts (DC)
Control Method	Remote
Audible Noise	129 Decibels
Mounting Type	Wall Mount
Maximum Range (Motion Sensor)	8 Meters
Sensor Technology	Motion Sensor
Waterproof Rating	IP65
Item Weight	1.07 Kilograms

WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your ChunHee Solar Outdoor Motion Sensor Alarm, please refer to the contact information provided with your purchase or visit the official ChunHee website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CGXD9QGY>

More documents and user manuals: <https://manuals.plus/>