

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Elmo Children's Wardrobe (Model 15010) Instruction Manual

Vicco 15010

Vicco Elmo Children's Wardrobe Instruction Manual

MODEL: 15010

Brand: Vicco

INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your Vicco Elmo Children's Wardrobe. Please read these instructions carefully before beginning assembly and retain them for future reference.

SETUP AND ASSEMBLY

The Vicco Elmo Children's Wardrobe requires assembly. Detailed step-by-step instructions and all necessary mounting materials are included in the product packaging. Please ensure all components are present before starting assembly.

Safety Precautions During Assembly:

- Assemble the wardrobe on a clean, soft surface to prevent scratches.
- Ensure all screws and fasteners are tightened securely. Do not overtighten.
- Keep small parts away from children during assembly.
- It is recommended to have two people for assembly for safety and ease.
- Secure the wardrobe to the wall using the provided anti-tip hardware to prevent accidental tipping.



Image: The Vicco Elmo Children's Wardrobe, fully assembled, featuring a hanging rail, adjustable shelves, and two lower drawers. This image illustrates the wardrobe's design and its integration into a child's room environment.

Assembly Tips:

- Identify all parts and hardware before starting.
- Follow the numerical sequence in the provided assembly instructions.
- Use appropriate tools as indicated in the assembly guide.

OPERATING INSTRUCTIONS

The Vicco Elmo Children's Wardrobe is designed for organized storage of children's clothing and accessories.

Storage Features:

- **Hanging Area:** Utilize the integrated hanging rod for garments that require hanging, such as dresses, shirts, and jackets.

- **Adjustable Shelves:** The wardrobe includes adjustable shelves. These can be repositioned to accommodate items of various sizes, from folded clothes to toys and books.
- **Drawers:** Two spacious drawers are located at the bottom for storing smaller items, underwear, socks, or other accessories. Ensure drawers slide smoothly and are not overloaded.



Image: An interior view of the wardrobe, demonstrating the practical use of the hanging space for clothes and the adjustable shelves for folded items and small decorative objects. The lower drawers are also visible.

Weight Capacity:

The maximum weight capacity for the wardrobe is 10 kilograms. Distribute weight evenly across shelves and the hanging rod to maintain stability and prevent damage.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your Vicco Elmo Children's Wardrobe.

Cleaning:

- Wipe surfaces with a soft, damp cloth.
- Use mild soap if necessary, then wipe dry immediately.
- Avoid abrasive cleaners, harsh chemicals, or rough sponges, as these can damage the melamine resin coating.

General Care:

- Periodically check all screws and fittings and tighten them if they have become loose.
- Avoid placing hot items directly on the surface.
- Protect the wardrobe from direct sunlight and excessive moisture to prevent material degradation.



Image: A detailed view of the wardrobe's exterior, showcasing its smooth white melamine resin coating. This finish is designed for easy cleaning and durability.

TROUBLESHOOTING

This section addresses common issues you might encounter with your wardrobe.

Common Issues and Solutions:

- Wobbly or Unstable Wardrobe:**
Ensure all assembly screws are fully tightened. Verify that the wardrobe is placed on a level surface. If applicable, use the wall-mounting hardware to secure it firmly.
- Drawers Not Sliding Smoothly:**
Check for any obstructions in the drawer runners. Ensure the drawer slides are correctly aligned and that the drawer is not overloaded. Verify that all screws holding the runners are tight.
- Scratches or Minor Damage:**
For minor scratches on the melamine surface, touch-up pens or repair kits designed for laminate furniture may be used. Consult the manufacturer for recommended products.

SPECIFICATIONS

Detailed technical specifications for the Vicco Elmo Children's Wardrobe.

Feature	Detail
Brand	Vicco
Model Number	15010
Color	White
Product Dimensions (D x W x H)	50 x 100 x 200 cm
Item Weight	65.1 kg
Maximum Weight Capacity	10 Kilograms
Material	Engineered Wood (Chipboard, 16 mm)
Finish	Melamine Resin Coating
Special Features	Removable Shelf
Mounting Type	Floor Mount (Wall-mounting recommended)
Room Type	Kid's Room

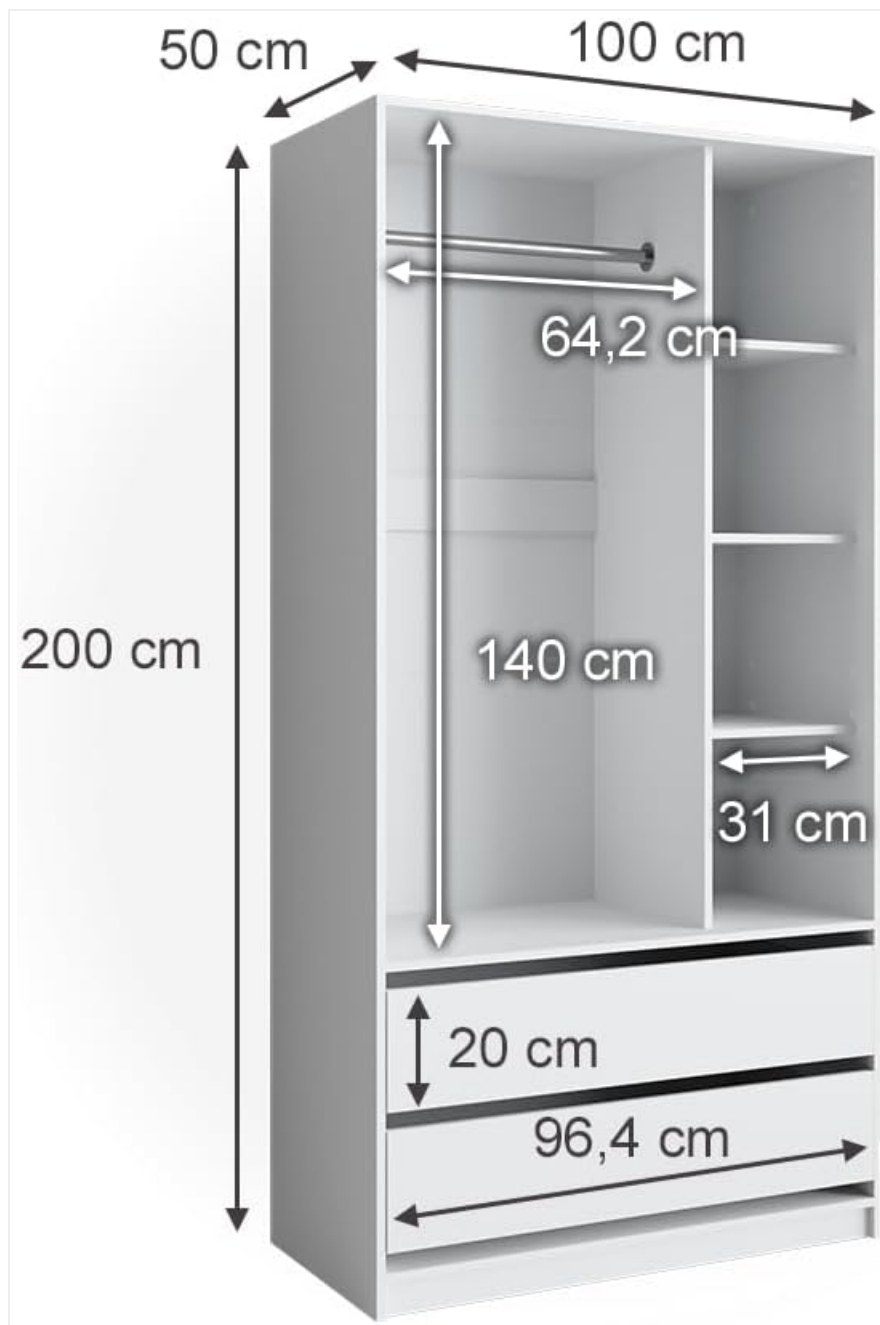


Image: A technical diagram illustrating the precise dimensions of the wardrobe, including overall height (200 cm), width (100 cm), depth (50 cm), and internal measurements for the hanging area, shelves, and drawers.

WARRANTY INFORMATION

Warranty details for the Vicco Elmo Children's Wardrobe are typically provided with the product packaging or can be obtained directly from the manufacturer. Please refer to the documentation included with your purchase for specific terms and conditions.

CUSTOMER SUPPORT

For further assistance, missing parts, or technical inquiries regarding your Vicco Elmo Children's Wardrobe, please contact Vicco customer support. Contact information can usually be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CGXH3CBZ>

More documents and user manuals: <https://manuals.plus/>