

AEG HRB32310CB

AEG Domino HRB32310CB Freestanding Ceramic Hob User Manual

Model: HRB32310CB

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your AEG Domino HRB32310CB Freestanding Ceramic Hob. Please read these instructions carefully before installation and operation, and retain them for future reference.

2. SAFETY INFORMATION

Always prioritize safety when operating electrical appliances. Failure to follow these instructions may result in electric shock, fire, or injury.

- Ensure the appliance is installed by a qualified person.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Supervise children when the appliance is in use. The hob features a child safety lock function to prevent unauthorized use.
- Do not store flammable materials on or near the hob.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- Do not use abrasive cleaners or sharp objects on the ceramic glass surface.

3. PRODUCT OVERVIEW

The AEG Domino HRB32310CB is a 30 cm freestanding ceramic hob designed for efficient cooking. It features two cooking zones and intuitive touch controls.

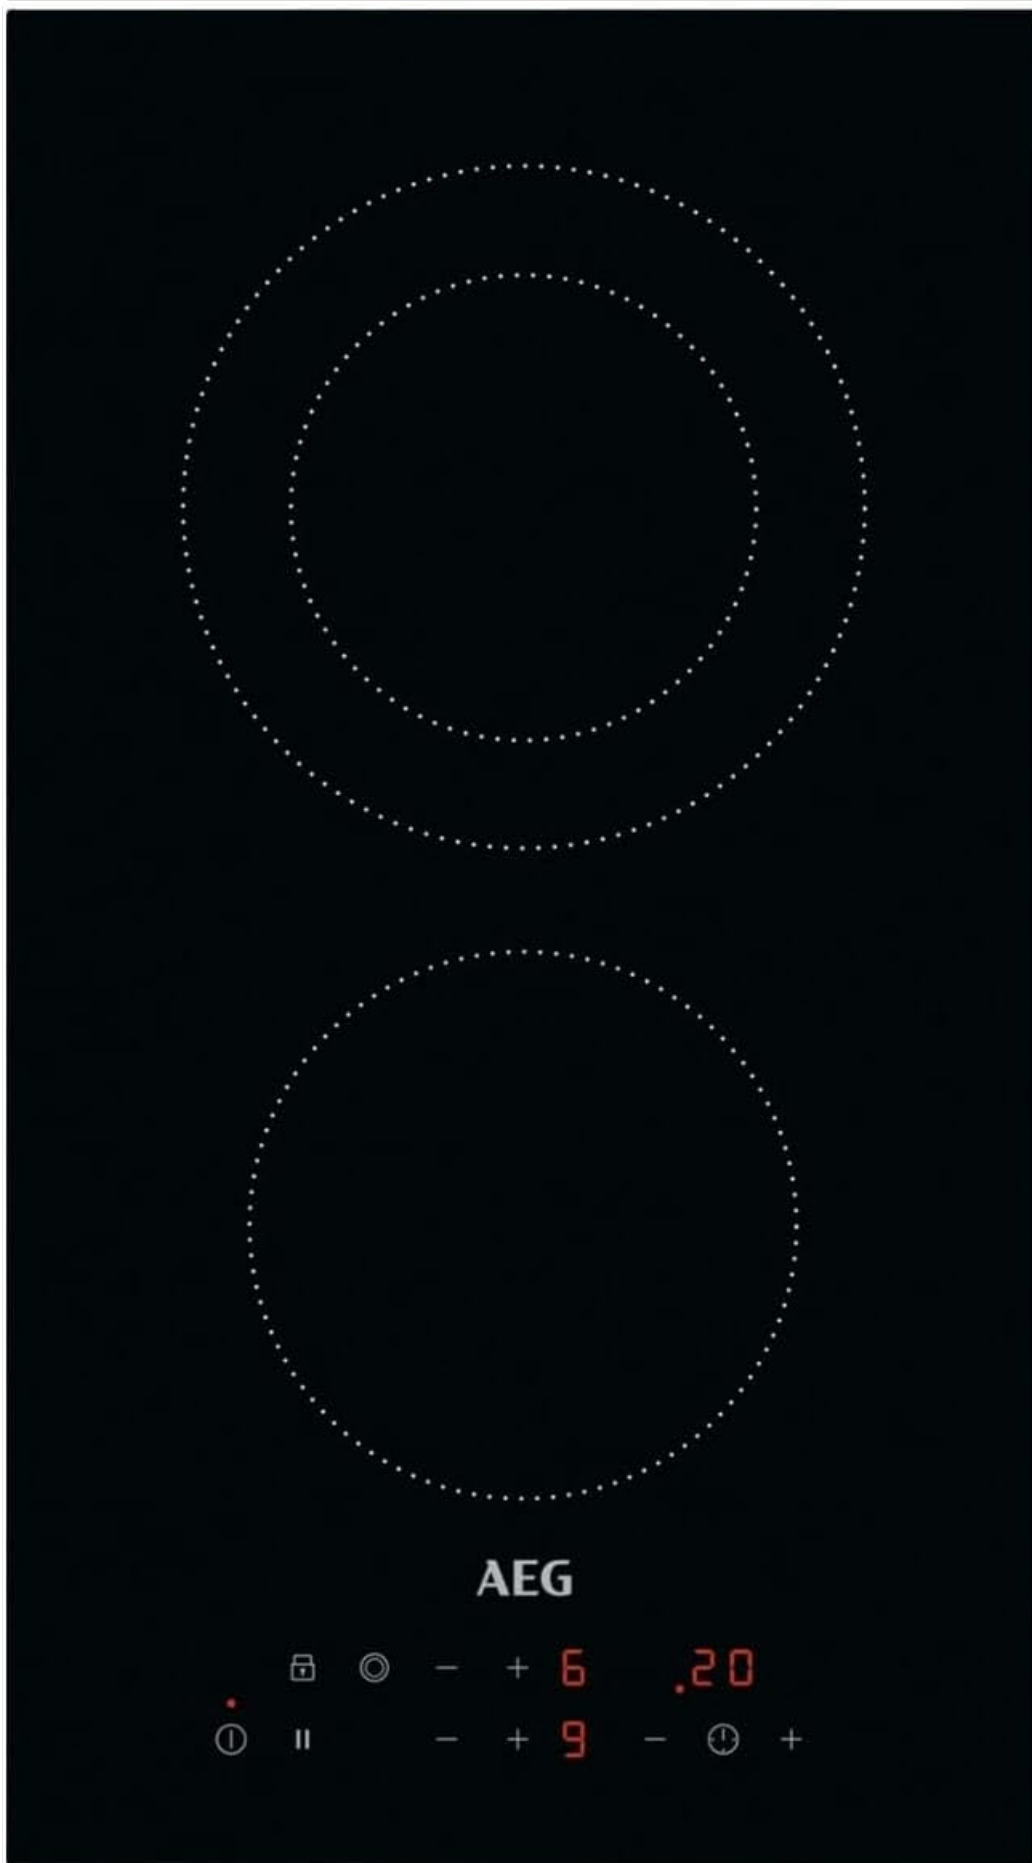


Figure 3.1: Top view of the AEG Domino HRB32310CB ceramic hob. This image displays the black glass ceramic surface with two circular cooking zones and the integrated touch control panel at the bottom. The AEG logo is visible above the controls.

3.1 Control Panel Features



Figure 3.2: Close-up of the touch control panel. This image highlights the various touch-sensitive buttons and digital displays. Key controls include power on/off, child safety lock, cooking zone selection, heat level adjustment (+/-), and timer functions.

- **Power On/Off:** Activates or deactivates the hob.
- **Child Safety Lock:** Prevents accidental operation.
- **Cooking Zone Selection:** Choose which cooking zone to adjust.
- **Heat Level Adjustment:** Use '+' and '-' buttons to set desired heat from 1 to 9.
- **Timer Function:** Set cooking duration for individual zones.

4. SETUP AND INSTALLATION

The AEG Domino HRB32310CB is designed for freestanding installation. Proper installation is crucial for safety and optimal performance. It is recommended that installation be performed by a qualified technician.

4.1 Installation Requirements

- **Power Supply:** The hob operates on electricity. Ensure the electrical supply meets the appliance's requirements.
- **Ventilation:** Adequate ventilation must be provided around the appliance.
- **Countertop Cut-out:** Refer to the installation diagram for precise dimensions.

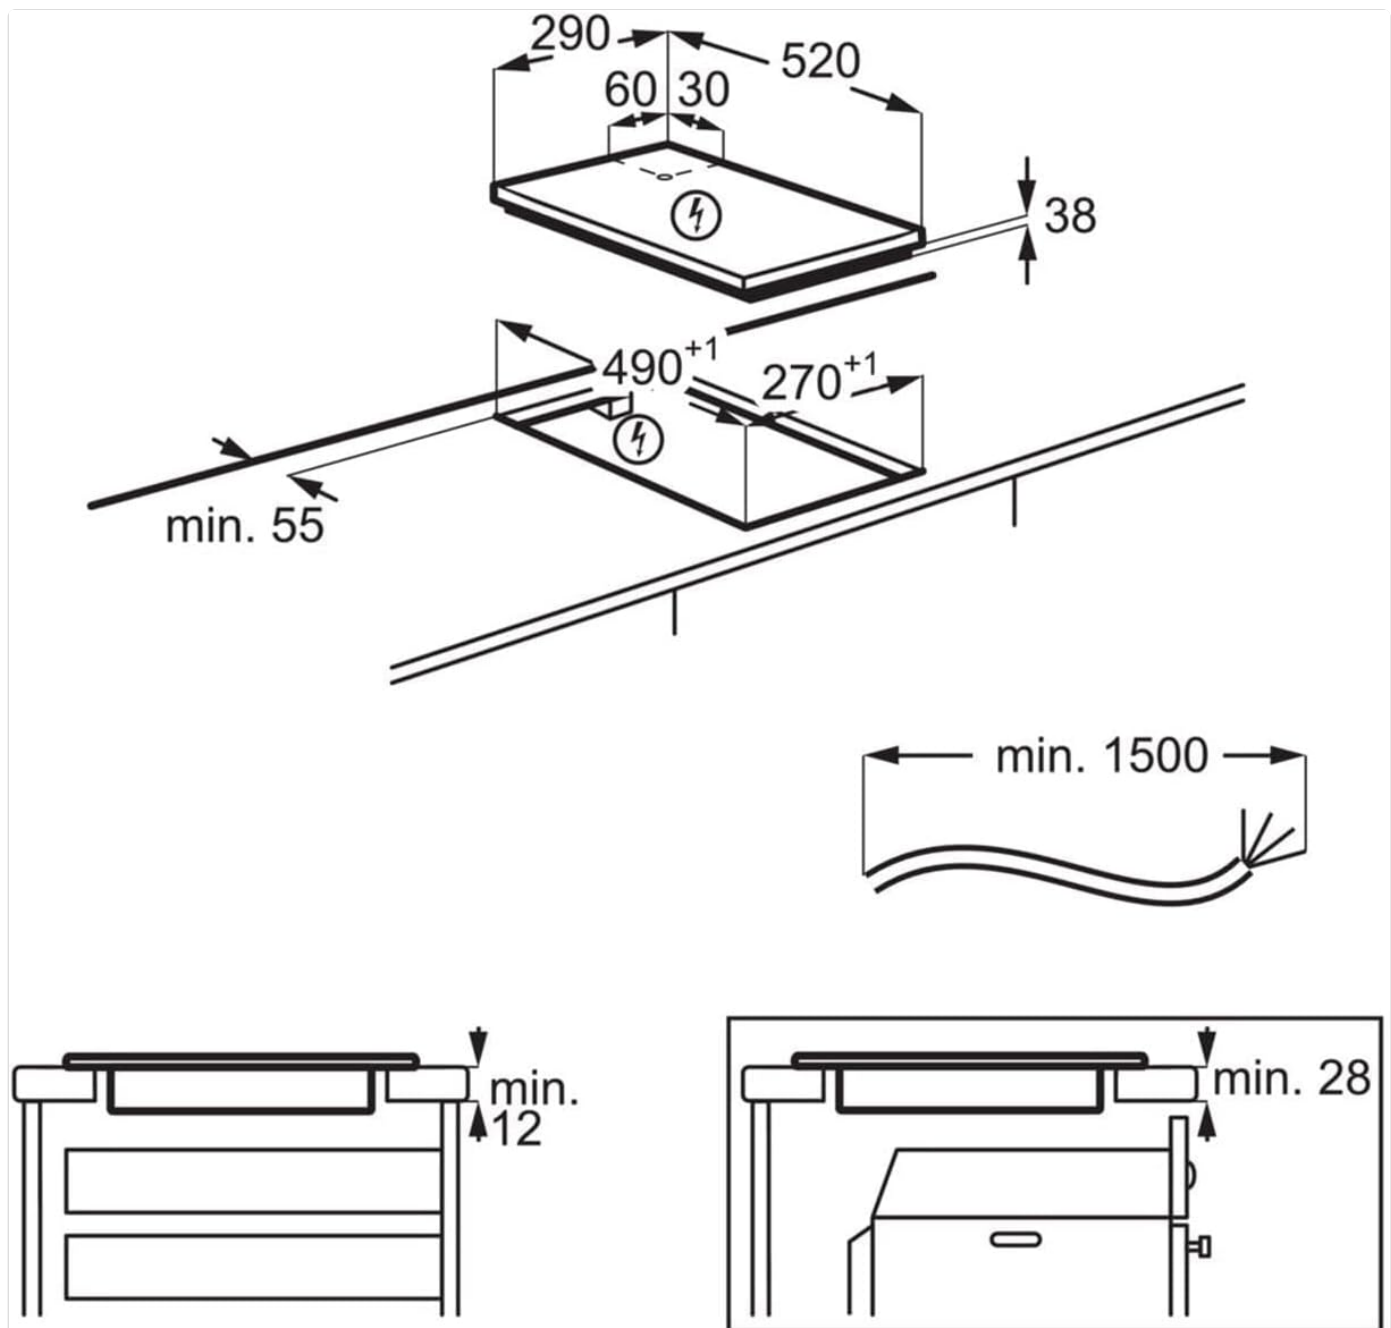


Figure 4.1: Installation diagram. This technical drawing illustrates the required dimensions for the countertop cut-out and minimum clearances for proper installation of the hob. It shows top-down and side views with measurements in millimeters.

4.2 Electrical Connection

The electrical connection must comply with local regulations. Ensure the appliance is properly earthed. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

5. OPERATING INSTRUCTIONS

This section details how to use your ceramic hob for cooking.

5.1 Switching On and Off

1. Touch the **Power On/Off** symbol (ⓘ) to activate the hob. The displays will light up.
2. To switch off, touch the **Power On/Off** symbol again.

5.2 Selecting a Cooking Zone and Setting Heat Level

1. Switch on the hob.



2. Touch the cooking zone selection symbol (e.g., ) for the desired zone.
3. Use the '+' or '-' buttons to adjust the heat level from 1 (low) to 9 (high).



Figure 5.1: User interacting with the touch controls. This image shows a finger pressing one of the touch-sensitive buttons on the control panel, demonstrating the ease of operation for setting heat levels or other functions.

5.3 Child Safety Lock

To activate the child safety lock:

 
1. Ensure the hob is switched off.
2. Touch and hold the **Lock** symbol () for a few seconds until an indicator light appears.

To deactivate the child safety lock:

1. Touch and hold the **Lock** symbol again until the indicator light turns off.

5.4 Timer Function

The timer can be used to set a cooking duration for a specific zone. Once the time expires, the zone will switch off automatically.

1. Select the desired cooking zone.
2. Touch the **Timer** symbol ().
3. Use the '+' or '-' buttons to set the desired cooking time.
4. The timer will start counting down.

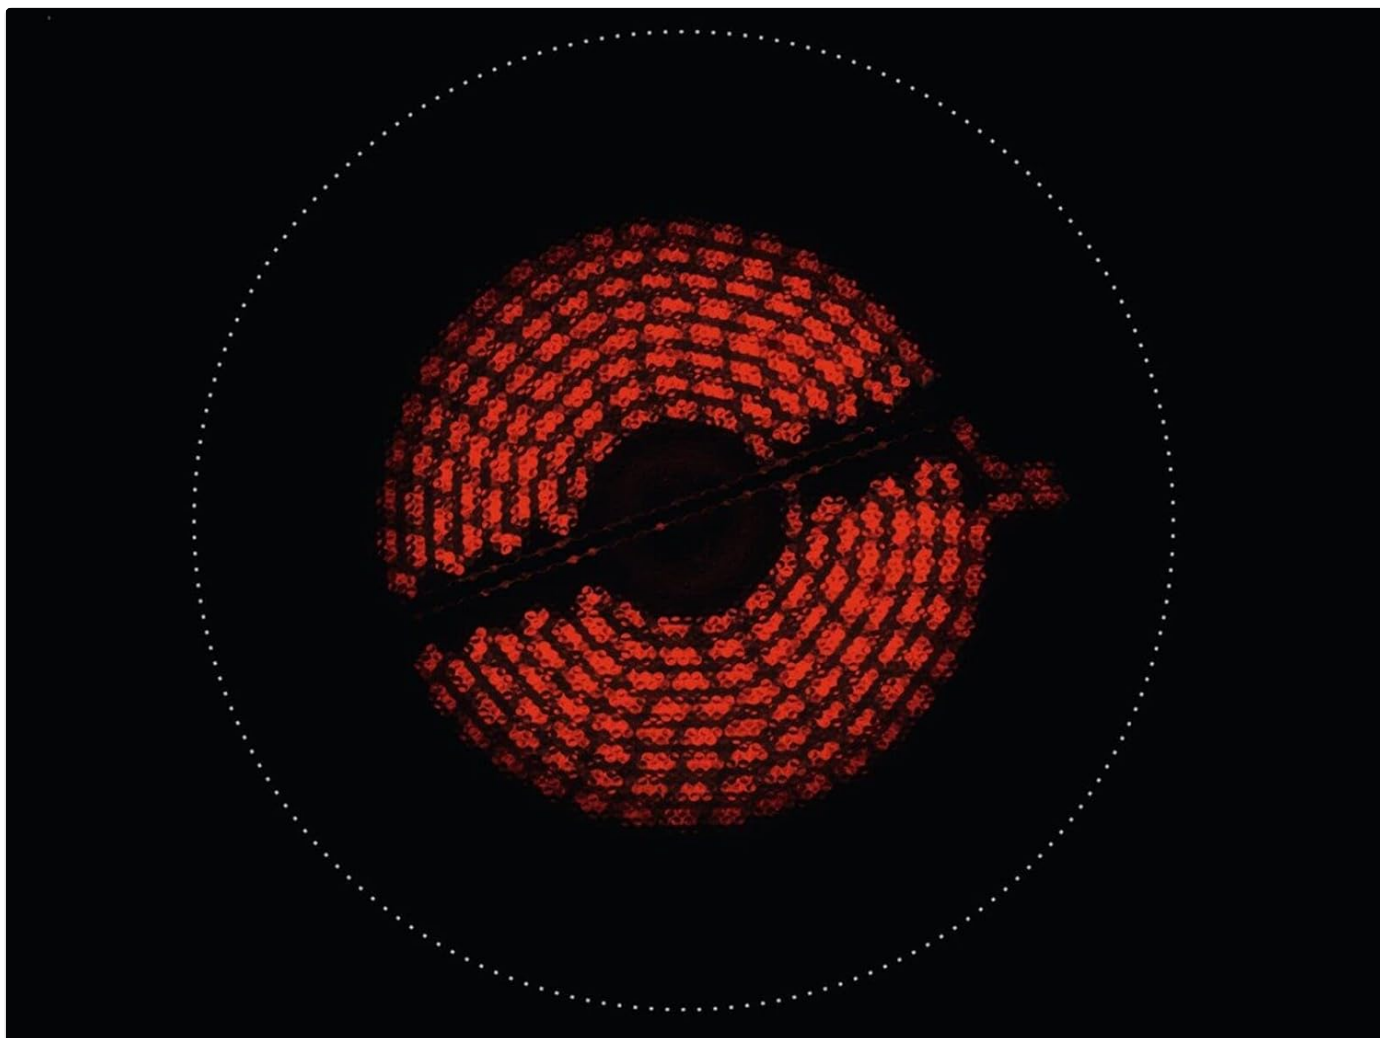


Figure 5.2: Illuminated ceramic heating element. This image shows one of the hob's cooking zones glowing red, indicating it is active and generating heat for cooking.

6. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your hob.

6.1 Cleaning the Ceramic Glass Surface

- Always allow the hob to cool down completely before cleaning.
- Use a soft cloth or sponge with a specialized ceramic hob cleaner.
- For stubborn stains, use a hob scraper designed for ceramic glass.
- Wipe dry with a clean cloth to prevent water marks.
- Do not use abrasive sponges, scouring pads, or harsh chemical cleaners.

6.2 Cleaning the Control Panel

The control panel can be cleaned with a damp cloth. Use the lock function to prevent accidental activation during cleaning.

7. TROUBLESHOOTING

Before contacting service, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hob does not switch on.	No power supply; Child safety lock active.	Check power connection; Deactivate child safety lock.
Cooking zone not heating.	Incorrect heat setting; Pan not suitable.	Adjust heat level; Ensure pan is flat-bottomed and suitable for ceramic hobs.
Display shows an error code.	Specific fault detected.	Refer to the full service manual or contact customer support with the error code.
Hob switches off unexpectedly.	Overheating; Automatic safety shut-off.	Allow hob to cool down; Ensure proper ventilation.

8. SPECIFICATIONS

 


 


Technical details for the AEG Domino HRB32310CB Ceramic Hob.

- Brand:** AEG
- Model:** HRB32310CB (Internal Model Info: 949492570)
- Type:** Freestanding Ceramic Hob
- Dimensions (Product):** 19.69 x 19.69 x 11.02 inches (approx. 50 x 50 x 28 cm)
- Item Weight:** 14.33 pounds (approx. 6.5 kg)
- Material:** Glass Ceramic
- Color:** Black
- Heating Elements:** 2 Ceramic Cooking Zones
- Burner Type:** Ceramic
- Special Features:** Auto Operation, Touch Controls, Button Lock, Timer, Frameless Design
- Fuel Type:** Electricity
- Included Components:** Touch controls

9. WARRANTY AND SUPPORT

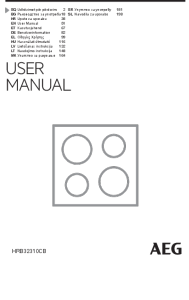For warranty information, please refer to the documentation provided with your purchase or visit the official AEG website. For technical support or service inquiries, please contact AEG customer service. You can typically find contact details on the manufacturer's website or in your purchase documentation.

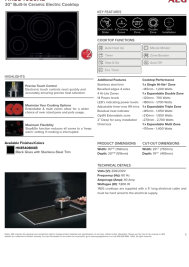Related Documents - HRB32310CB

 <p>HRB32310CB</p> <p>AEG</p>	<p>AEG HRB32310CB User Manual - Cooking Hob Instructions</p> <p>User manual and installation guide for the AEG HRB32310CB hob, providing instructions for safe operation, care, and troubleshooting. Learn about its features and benefits.</p>
 <p>IKB32300CB</p> <p>AEG</p>	<p>Manuali i Përdorimit AEG IKB32300CB - Udhëzime Sigurie dhe Përdorimi</p> <p>Ky manual përdorimi ofron udhëzime thelbësore për instalimin, përdorimin e sigurt dhe mirëmbajtjen e hobit tuaj me induksion AEG IKB32300CB. Mësoni rreth funksioneve, sigurisë dhe zgjidhjes së problemeve.</p>
 <p>tehnika</p> <p>Uputstvo za upotrebu AEG ugradna ploča IKB32300CB</p> <p>AEG</p>	<p>AEG IKB32300CB Ugradna ploča - Uputstvo za upotrebu</p> <p>Detaljno uputstvo za upotrebu AEG ugradne ploče modela IKB32300CB, sa sigurnosnim uputstvima, savetima za instalaciju, korišćenje i održavanje.</p>
 <p>HK854080XB</p> <p>AEG</p>	<p>AEG HK854080XB 30-Inch Built-In Ceramic Electric Cooktop: Features, Specifications, and Installation</p> <p>Detailed specifications, key features, and installation guidelines for the AEG HK854080XB 30-inch built-in ceramic electric cooktop, highlighting its precise touch control, extendable zones, and 2-year warranty.</p>
 <p>HRB32300CB</p> <p>AEG</p>	<p>AEG IKB32300CB Manual Përdorimi - Udhëzime për Hob me Induksion</p> <p>Manual përdorimi gjithëpërfshirës për hobin me induksion AEG IKB32300CB. Përmban udhëzime sigurie, instalimi, përdorimi, mirëmbajtje dhe zgjidhje problemesh nga AEG.</p>
 <p>AEG</p> <p>IKB32300CB</p>	<p>AEG IKB32300CB - Udhëzues Përdorimi dhe Sigurie</p> <p>Ky manual përdorimi ofron udhëzime thelbësore për instalimin, përdorimin e sigurt dhe mirëmbajtjen e induksionit tuaj AEG IKB32300CB. Përmban informacione të detajuara mbi funksionet, sigurinë dhe zgjidhjen e problemeve.</p>