

Dysead Dysead-230830255

Dysead DC Car Power Cord Adapter User Manual

Compatible with Coby TFDVD7389A TF-DVD7389A DVD/CD Player

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Dysead DC Car Power Cord Adapter. This adapter is designed to power compatible Coby TFDVD7389A and TF-DVD7389A DVD/CD players directly from your vehicle's 12V power outlet. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

Your safety is paramount. This power adapter incorporates multiple safety mechanisms to ensure reliable operation and protection for your devices. Adhere to the following guidelines:

- **Overvoltage Protection:** The adapter is designed to prevent damage from excessive voltage input.
- **Overcurrent Protection:** Safeguards against drawing too much current, which could harm the adapter or your device.
- **Short Circuit Protection:** Automatically shuts down in case of a short circuit to prevent electrical hazards.
- **Internal Overheating Protection:** Monitors internal temperature to prevent overheating.
- Ensure the adapter is fully inserted into the vehicle's 12V power outlet.
- Do not expose the adapter to moisture, rain, or extreme temperatures.
- Do not attempt to disassemble or modify the adapter.
- Keep out of reach of children.

3. PRODUCT FEATURES

The Dysead DC Car Power Cord Adapter offers robust performance and convenience:

- **Compatibility:** Specifically designed for Coby TFDVD7389A and TF-DVD7389A DVD/CD players.

- **Plug and Play:** Simple connection for immediate use in most vehicles.
- **Durable Construction:** Features high-quality copper core wire for extended lifespan and resistance to breakage.
- **Coiled Cable Design:** Provides sufficient length for flexible placement within your vehicle without tangling, and retracts for compact storage.
- **Upgraded Connector:** Equipped with an upgraded phone-type connector for a tighter and more secure connection to your device.
- **Certified Safety:** Complies with international quality certification standards.



Figure 3.1: The Dysead DC Car Power Cord Adapter is designed for plug-and-play use in various vehicles, including cars and trucks.

Plug and Play

compatible with most vehicles



Figure 3.2: The coiled cable offers flexibility and durability, capable of withstanding numerous extensions and retractions.

Upgraded Phone-type connector

Tighter and Stronger



Figure 3.3: The upgraded phone-type connector ensures a tighter and more reliable connection to your device.

4. SETUP

Follow these steps to set up your Dysead DC Car Power Cord Adapter:

1. **Locate Vehicle Power Outlet:** Identify the 12V DC power outlet (cigarette lighter socket) in your car, truck, or other compatible vehicle.
2. **Connect Adapter to Vehicle:** Insert the car plug end of the Dysead adapter firmly into the vehicle's 12V power outlet. Ensure it is fully seated for a stable connection. A small indicator light on the adapter may illuminate to confirm power.
3. **Connect Adapter to Device:** Plug the other end of the adapter (the phone-type connector) into the DC input port of your Coby TFDVD7389A or TF-DVD7389A DVD/CD player. Ensure a secure and snug fit.
4. **Verify Connection:** Once both ends are connected, your DVD/CD player should receive power.

5. OPERATING INSTRUCTIONS

Using your Dysead DC Car Power Cord Adapter is straightforward:

1. After completing the setup steps, turn on your Coby TFDVD7389A or TF-DVD7389A DVD/CD player using its power button.
2. The adapter will continuously supply power to your device as long as it is connected to a live 12V power outlet in your vehicle.
3. To disconnect, first turn off your DVD/CD player, then gently remove the adapter from the device, followed by removing the car plug from the vehicle's power outlet.

6. MAINTENANCE

Proper care will ensure the longevity and optimal performance of your adapter:

- **Cleaning:** Use a soft, dry cloth to wipe the adapter. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. The coiled cable design allows for compact storage.
- **Inspection:** Periodically inspect the cable and connectors for any signs of damage, fraying, or corrosion. If damage is observed, discontinue use and replace the adapter.
- Avoid bending the cable sharply or placing heavy objects on it.

7. TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on.	Adapter not fully inserted into vehicle outlet.	Ensure the car plug is firmly seated in the 12V power outlet.
	Adapter not fully connected to DVD player.	Check that the phone-type connector is securely plugged into the DVD player's DC input.
	Vehicle's 12V outlet is not active or fuse is blown.	Test the vehicle's 12V outlet with another known working device. Consult your vehicle's manual for fuse replacement if necessary.
Adapter feels warm during use.	Normal operation.	A slight warmth is normal. If it becomes excessively hot or emits smoke/odor, disconnect immediately and discontinue use.
Intermittent power supply.	Loose connection.	Ensure all connections are tight and secure. Avoid excessive movement of the adapter or device during use.

8. SPECIFICATIONS

- **Brand:** Dysead
- **Model Number:** Dysead-230830255
- **ASIN:** B0CGXMBL69
- **Connector Type:** Plug
- **Compatible Devices:** Coby TFDVD7389A, TF-DVD7389A DVD/CD Player

- **Input Voltage:** 12 Volts DC (from vehicle power outlet)
- **Power Source:** Battery Powered (via vehicle's 12V system)
- **Color:** Black
- **Item Weight:** Approximately 2 Ounces (56 grams)
- **Special Feature:** Travel-friendly, Coiled Cable

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.