

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [SOGO](#) /
- > [Sogo 5L 1400W Digital Air Fryer FRE-SS-10880 Instruction Manual](#)

SOGO FRE-SS-10880

Sogo 5L 1400W Digital Air Fryer FRE-SS-10880 Instruction Manual

Model: FRE-SS-10880 | Brand: SOGO

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep the appliance and its cord out of reach of children.
- Do not block any ventilation openings.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Surfaces may become hot during use. Use oven mitts when handling hot components.
- Do not place the appliance against a wall or other appliances. Leave at least 10 cm of free space on the back and sides and 10 cm of free space above the appliance.

2. PRODUCT OVERVIEW

The Sogo Digital Air Fryer (Model FRE-SS-10880) is designed for healthy cooking with minimal oil. It features a 5-liter capacity, 1400W power, and a user-friendly touch screen control panel.



Image: Front view of the Sogo 5L 1400W Digital Air Fryer, showcasing its sleek design and touch screen panel.



Image: The air fryer with its cooking basket partially pulled out, revealing the interior space.

Key Features:

- **Capacity:** 5 Liters, suitable for family meals.
- **Power:** 1400 Watts for efficient cooking.
- **Control:** Intuitive touch screen with LED display.
- **Programs:** 8 preset functions for various food types.
- **Temperature:** Adjustable thermostat for precise cooking.
- **Basket:** Non-stick coating for easy food release and cleaning.

3. SETUP

Before first use, follow these steps:

1. Remove all packaging materials and stickers from the appliance.
2. Clean the frying basket and grill plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry.
3. Wipe the inside and outside of the appliance with a damp cloth.

4. Place the air fryer on a stable, level, and heat-resistant surface, ensuring adequate ventilation around the unit.

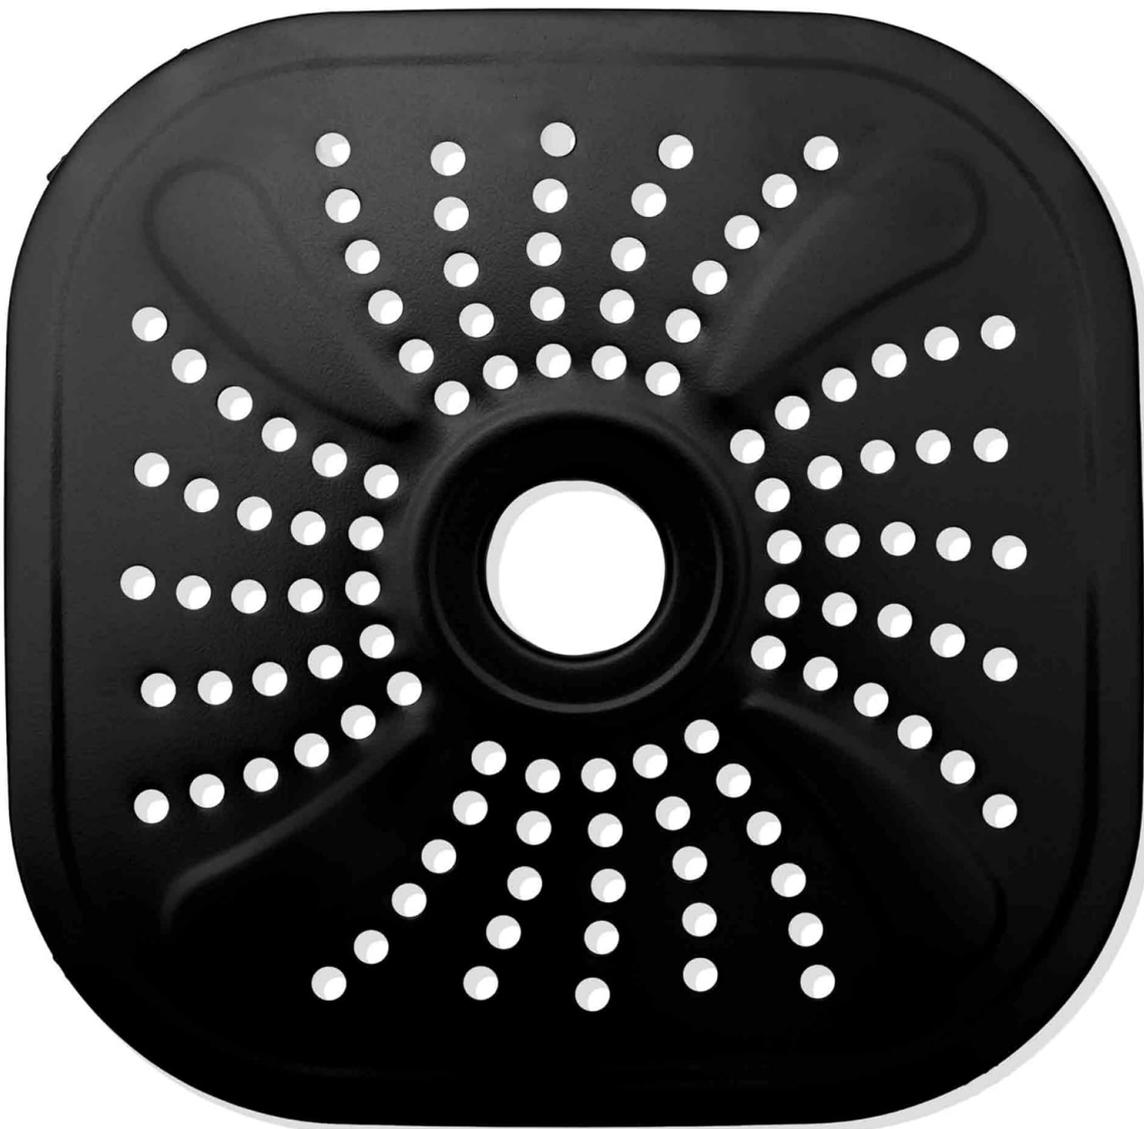


Image: Close-up of the air fryer's grill plate, designed for optimal air circulation.

4. OPERATING INSTRUCTIONS

The Sogo Digital Air Fryer offers simple operation through its touch screen interface.

Basic Operation:

1. Plug the appliance into a grounded electrical outlet.
2. Pull out the frying basket and place your ingredients inside. Do not overfill.
3. Slide the frying basket back into the appliance until it clicks into place.
4. Press the power button to turn on the display.
5. Select one of the 8 preset functions by tapping the corresponding icon, or manually adjust the temperature and time using the '+' and '-' buttons.
6. Press the start button to begin cooking.



Image: The air fryer with its basket containing crispy fries, ready for cooking.

Preset Functions:

The air fryer includes 8 preset functions for common dishes, allowing for quick and convenient cooking. These functions automatically set optimal temperature and time, which can be further adjusted manually if needed.

Temperature and Time Adjustment:

The temperature can be adjusted from 80°C to 200°C, and the cooking time can be set up to 60 minutes. Use the dedicated temperature and time adjustment buttons on the touch screen to customize your cooking settings.

5. COOKING GUIDE

The Sogo Digital Air Fryer uses rapid air circulation technology to cook food evenly and achieve a crispy texture with significantly less oil than traditional frying methods. It is versatile for various cooking tasks:

- **Frying:** Ideal for French fries, chicken wings, and other fried snacks.
- **Roasting:** Perfect for vegetables, chicken, or small cuts of meat.

- **Grilling:** Achieve grilled results for fish or steak.
- **Baking:** Suitable for small cakes, muffins, or pastries.

For best results, shake the basket halfway through the cooking process for items like fries or chicken nuggets to ensure even browning.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Clean the frying basket and grill plate with hot water, dish soap, and a non-abrasive sponge. These parts are also dishwasher safe.
3. Wipe the exterior of the appliance with a damp cloth. Do not use harsh abrasive cleaners.
4. Clean the heating element with a cleaning brush to remove any food residue.
5. Ensure all parts are completely dry before storing or reusing the appliance.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Check power cord connection; try a different outlet.
Food is not cooked evenly.	Basket overloaded; food not shaken.	Reduce food quantity; shake basket halfway through cooking.
White smoke coming from appliance.	Grease residue; fatty ingredients.	Clean the basket and heating element; drain excess fat from ingredients.
Food is not crispy.	Insufficient cooking time/temperature; too much moisture.	Increase time/temperature; pat food dry before cooking.

8. SPECIFICATIONS

Detailed technical information for your Sogo Digital Air Fryer.

Feature

Specification

Feature	Specification
Brand	SOGO
Model Number	FRE-SS-10880
Capacity	5 Liters
Power	1400 Watts
Dimensions (L x W x H)	40 x 40 x 40 cm
Weight	4 kg
Material	Metal, Stainless Steel finish
Special Features	Touch control, LED display, 8 programs, adjustable thermostat
Voltage	220-240V~ 50-60Hz

SOGO[®] SS-10880

DIGITAL AIR FRYER

220 – 240V~ 50-60Hz

1400W

Serial number:
SS-1088004240001

Sansan Appliances S.L,
C/Barcas 2, 2 46002
Valencia, Spain (Made in China)

Image: Product label showing model number FRE-SS-10880, power (1400W), and electrical specifications.

9. WARRANTY AND SUPPORT

Sogo products are manufactured under strict quality control processes.

- This product comes with a **3-year warranty** from the date of purchase.
- For warranty claims or technical support, please contact your retailer or the official Sogo customer service.
- Keep your proof of purchase for warranty validation.