

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEGO](#) /

› [LEGO Icons PAC-Man Arcade Building Set 10323 Instruction Manual](#)

## LEGO 10323

# LEGO Icons PAC-Man Arcade Building Set 10323 Instruction Manual

Brand: LEGO | Model: 10323

## INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your LEGO Icons PAC-MAN Arcade (10323) building set. Designed for adult builders, this set allows you to recreate the iconic 1980s maze-chase video game cabinet with retro design details and interactive features. The model contains 2,651 pieces and offers an immersive building experience.



Image: The fully assembled LEGO Icons PAC-Man Arcade set, showcasing its detailed design and interactive elements, with a person demonstrating its features.

## WHAT'S IN THE BOX

Your LEGO Icons PAC-Man Arcade set includes:

- All necessary LEGO Building Elements (2,651 pieces) to construct the PAC-MAN Arcade cabinet.
- Components for a display case with rotatable PAC-MAN, BLINKY, and CLYDE figures.
- Elements to build a 1980s arcade scene with a gaming minifigure.
- Printed building instructions. Digital building instructions are also available via the LEGO Builder app.

## SETUP AND ASSEMBLY

Follow the step-by-step instructions provided in the printed manual or the LEGO Builder app for assembly. Ensure all pieces are accounted for before beginning. Organize pieces by bag number to streamline the building process.

## Digital Building Instructions

The LEGO Builder app offers a digital version of the building instructions, providing an interactive and convenient

way to assemble your model. Download the app from your device's app store.

## OPERATING THE MODEL

The LEGO Icons PAC-Man Arcade model features several interactive elements:

- **4-Way Joystick:** The cabinet includes a functional 4-way joystick.
- **Illuminating Coin Slot:** A coin slot that illuminates, adding to the authentic arcade experience.
- **Adjustable Game Score Display:** Manually adjust the game score display.
- **Mechanical Maze:** Turn the handle on the side of the cabinet to activate a mechanical maze that simulates the classic chase between PAC-MAN and the ghosts.
- **Rear Panel Access:** Open the back panel of the cabinet to view the intricate mechanical elements that drive the maze-chase mechanism.
- **Display Case Figures:** Press a button on the display base to change the direction and demeanor of the rotatable PAC-MAN, BLINKY, and CLYDE figures.



**TURN A HANDLE TO RECREATE  
THE CLASSIC MAZE CHASE**

Image: A hand turning the side handle of the LEGO PAC-Man Arcade, demonstrating the activation of the mechanical maze.



## CHECK OUT THE JOYSTICK AND ILLUMINATING COIN SLOT

Image: A detailed view of the arcade's joystick and the illuminating coin slot, highlighting the retro features.

### Product Overview Video

Your browser does not support the video tag.

Video: A review of the LEGO Pac-Man Machine, showcasing its features and build quality.

### Interactive Features Demonstration

Your browser does not support the video tag.

Video: A demonstration of the realistic build and moving parts of the LEGO Pac-Man Arcade, including its light features.

### 360-Degree View

Your browser does not support the video tag.

Video: A 360-degree spin of the LEGO Icons PAC-MAN Arcade 10323, providing a comprehensive view of the model from all angles.

### MAINTENANCE

To ensure the longevity and appearance of your LEGO model:

- **Cleaning:** Dust regularly with a soft brush or cloth. For deeper cleaning, use a mild soap solution and rinse thoroughly with clean water. Allow to air dry completely.
- **Storage:** Store the model in a cool, dry place away from direct sunlight to prevent discoloration or warping of plastic elements.
- **Handling:** Handle the model with care, especially when moving it, to avoid accidental disassembly of delicate parts.

## TROUBLESHOOTING

- **Missing Pieces:** If you find any missing pieces during assembly, please visit the official LEGO Customer Service website to request replacement parts.
- **Difficulty with Assembly:** Refer to the digital instructions in the LEGO Builder app for 3D views and zoom functions that can assist with complex steps.
- **Mechanical Malfunction:** If the mechanical maze or other moving parts do not function as expected, carefully re-examine the assembly steps related to those mechanisms to ensure all connections are correct.

## SPECIFICATIONS

<b>Product Dimensions</b>	12.5 in. (32 cm) high, 10 in. (25 cm) wide and 7 in. (17 cm) deep
<b>Item Weight</b>	7.74 pounds
<b>Item Model Number</b>	10323 (6426514)
<b>Manufacturer Recommended Age</b>	18 years and up
<b>Number of Pieces</b>	2,651
<b>Release Date</b>	January 1, 2024

## SAFETY INFORMATION

This product contains small parts and is not suitable for children under 3 years of age due to choking hazards. Adult supervision is recommended during assembly and interaction, especially with younger individuals present.

## WARRANTY AND SUPPORT

LEGO products are manufactured to high-quality standards. For information regarding product warranty, replacement parts, or customer support, please visit the official LEGO Customer Service website at [www.lego.com/service](http://www.lego.com/service). You can also find additional support and community forums there.