

GreenPan d73aeac8-eaea-48d6-9c99-c63dd607b1fb

GreenPan Elite 8-in-1 Programmable 6 Quart Electric Slow Cooker User Manual

Model: d73aeac8-eaea-48d6-9c99-c63dd607b1fb

1. INTRODUCTION

Thank you for choosing the GreenPan Elite 8-in-1 Programmable 6 Quart Electric Slow Cooker. This appliance is designed to simplify your cooking process with its versatile functions and user-friendly interface. Please read this manual thoroughly before initial use to ensure safe operation and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

The GreenPan Elite Slow Cooker is designed for versatile cooking with its 8-in-1 functionality. Familiarize yourself with its components for optimal use.



Figure 3.1: Labeled components of the GreenPan Elite Slow Cooker, including the tempered glass lid, silicone side handles, Thermolon Volt nonstick coating, one-touch presets, and the slow cooker base unit.

Key Components:

- **Slow Cooker Base Unit:** Houses the heating element and control panel.
- **Removable 6-Quart Pot:** Crafted from hard anodized aluminum with Thermolon Volt ceramic nonstick coating.
- **Tempered Glass Lid:** Allows monitoring of cooking progress.
- **Silicone Side Handles:** Designed for comfortable and safe handling.
- **Control Panel with LCD Display:** Features an XL green backlit display and one-touch presets.
- **Stainless Steel Steamer:** Included for steaming various foods.



Figure 3.2: The GreenPan Elite Slow Cooker in Cream White, shown with its tempered glass lid and the included cookbook.

Thermolon Volt Ceramic Nonstick Coating:

The inner pot features Thermolon Volt, a diamond-infused ceramic nonstick coating. This coating is specifically engineered for modern appliances, offering durability, easy cleaning, and a PFAS-free cooking surface. It is free of PFAS, PFOA, lead, and cadmium.



THERMOLON™ VOLT

HEALTHY CERAMIC NONSTICK

Nonstick Reinvented

Healthy ceramic nonstick infused with diamonds and specially designed for kitchen electrics. Free of PFAS, PFOA, lead, and cadmium for worry-free cooking.



TOXIN-FREE

Our ceramic nonstick is free of PFAS, PFOA, Lead, and Cadmium



EXTRA TOUGH

Diamond-infused ceramic nonstick for power & performance



EASY TO CLEAN

Wipes clean & dishwasher safe

Figure 3.3: Illustration highlighting the benefits of Thermolon Volt ceramic nonstick: Toxin-Free, Extra Tough, and Easy to Clean.

4. SETUP

Before first use, follow these steps to prepare your slow cooker:

1. **Unpack:** Carefully remove all packaging materials, labels, and tags from the appliance.
2. **Clean:** Wash the removable inner pot, tempered glass lid, and stainless steel steamer in warm, soapy water. Rinse thoroughly and dry completely. The inner pot and lid are dishwasher safe.
3. **Wipe Base Unit:** Wipe the exterior of the slow cooker base unit with a damp cloth. Do not immerse the base unit in water.
4. **Placement:** Place the slow cooker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
5. **Insert Pot:** Place the clean, dry inner pot into the slow cooker base unit.

8 EASY MODES

POWERFUL ONE-TOUCH PRESETS

SLOW COOK, SAUTÉ, STEAM, SIMMER/BUFFET, REHEAT, HIGH, LOW, WARM



Figure 4.1: A person demonstrating the correct way to insert the removable inner pot into the slow cooker base unit.

5. OPERATING INSTRUCTIONS

The GreenPan Elite Slow Cooker features an intuitive control panel with 8 one-touch presets for various cooking methods.

SEAR TO START BUILT-IN BROWNING

BROWN YOUR FOOD IN THE POT, THEN GO LOW AND SLOW



Figure 5.1: Detailed view of the control panel with its LCD display and one-touch buttons for various cooking modes.

Control Panel Functions:

- **LCD Display:** Shows time, temperature, and selected mode.
- **Mode Buttons:** Dedicated buttons for Slow Cook, Brown/Sauté, Steam, Time, and Temp.
- **Start/Stop Button:** Initiates and cancels cooking cycles.
- **+/- Buttons:** Adjust time and temperature settings.

Cooking Modes:

The appliance offers 8 powerful one-touch presets:

1. **Slow Cook:** Ideal for tenderizing meats and developing rich flavors over extended periods.
2. **Sauté/Brown:** Allows you to sear or brown ingredients directly in the pot before slow cooking, enhancing flavor.
3. **Steam:** Use with the included stainless steel steamer for healthy steaming of vegetables, dumplings, and more.
4. **Simmer/Buffer:** Maintains food at a warm, serving temperature.

5. **Reheat:** Gently warms previously cooked food.
6. **High:** For faster cooking in slow cook mode.
7. **Low:** For slower cooking in slow cook mode.
8. **Warm:** Automatically activates after most cooking cycles to keep food warm until serving.

General Operation Steps:

1. **Prepare Ingredients:** Place your ingredients into the removable inner pot.
2. **Select Mode:** Press the desired cooking mode button (e.g., 'Slow Cook', 'Brown/Sauté', 'Steam').
3. **Adjust Settings:** Use the 'Time' and 'Temp' buttons along with the '+/-' buttons to set your desired cooking duration and temperature, if applicable.
4. **Start Cooking:** Press the 'Start' button to begin the cooking process.
5. **Monitor:** The tempered glass lid allows you to monitor your meal without releasing heat.
6. **Finish:** Once cooking is complete, the appliance may automatically switch to 'Warm' mode. Press 'Start' again to cancel and turn off.



Figure 5.2: A person using tongs to turn pieces of meat browning directly in the slow cooker pot, demonstrating the 'Brown/Sauté' function.

6. CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your GreenPan Elite Slow Cooker.

Cleaning:

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Removable Pot and Lid:** The removable inner pot and tempered glass lid are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Base Unit:** Wipe the exterior of the slow cooker base unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the base unit in water or any other liquid.
4. **Steamer:** The stainless steel steamer is also dishwasher safe or can be hand-washed.



Figure 6.1: A person washing the removable inner pot under running water, illustrating the ease of cleaning.

Storage:

Ensure all parts are clean and dry before storing. The cord wrap on the back panel allows for neat storage of the power cord. Store the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your GreenPan Elite Slow Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooking properly.	Incorrect mode or temperature selected; lid not sealed properly; insufficient cooking time.	Verify the selected cooking mode, temperature, and time settings. Ensure the lid is securely placed. Adjust cooking time as needed for your recipe.
Food sticks to the inner pot.	Insufficient oil/liquid; high heat for too long; coating damage.	Ensure adequate oil or liquid is used, especially for sautéing. Avoid using metal utensils that can scratch the nonstick surface. Clean the pot thoroughly after each use.
Error message on display.	Internal sensor issue; overheating.	Unplug the appliance, wait a few minutes, then plug it back in. If the error persists, contact customer support.

If the problem persists after attempting these solutions, please contact GreenPan customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	GreenPan
Model Number	d73aeac8-eaea-48d6-9c99-c63dd607b1fb
Capacity	6 Quarts
Color	Cream White
Material	Aluminum, Ceramic, Stainless Steel
Nonstick Coating	Thermolon Volt (PFAS-Free, PFOA-Free, Lead-Free, Cadmium-Free)
Control Method	Touch
Control Type	Programmable
Number of Settings	8 (Slow Cook, Sauté, Steam, Simmer/Buffer, Reheat, High, Low, Warm)

Feature	Detail
Dishwasher Safe Parts	Inner Pot, Glass Lid, Steamer

9. WARRANTY AND SUPPORT

GreenPan products are manufactured to high-quality standards. For information regarding warranty coverage, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official GreenPan website. Keep your proof of purchase for warranty claims.

For direct assistance, you may visit the [GreenPan Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question