

[Manuals.plus](#) /

› [Easyfone](#) /

› Easyfone DM70 Smart Watch User Manual

Easyfone DM70

Easyfone DM70 Smart Watch User Manual

Model: DM70

INTRODUCTION

The Easyfone DM70 Smart Watch is a compact and stylish fitness tracker designed for daily use. Featuring a vibrant AMOLED display and a range of health monitoring functions, it helps you stay connected and track your well-being. This manual provides essential information for setting up, operating, and maintaining your DM70 Smart Watch.

WHAT'S IN THE BOX

Please verify that all items are present in your package:

- 1 x Easyfone DM70 Smart Watch
- 1 x Free Quick Release Leather Band (additional to pre-installed band)
- 1 x Charging Cable
- 1 x User Manual (this document)



Image: The Easyfone DM70 Smart Watch packaging, showing the watch, charging cable, and user manual.

SETUP

1. Initial Charging

Before first use, fully charge your Easyfone DM70 Smart Watch. Connect the magnetic charging cable to the charging points on the back of the watch and plug the USB end into a compatible power adapter (not included).

- A full charge typically takes approximately 2 hours.
- The watch has a 10-day battery life under normal usage conditions.

2. App Installation and Pairing

To unlock the full features of your DM70 Smart Watch, download and install the companion app on your smartphone. The app is compatible with Android 7.0 and above, and iOS 12.0 and above devices.

1. Scan the QR code in the user manual or search for "FitCloudPro" (or specified app name) in your phone's app store.
2. Open the app and create an account or log in.
3. Ensure Bluetooth is enabled on your smartphone.
4. In the app, navigate to "Device" or "Add Device" and select the DM70 Smart Watch from the list of available devices.
5. Confirm the pairing request on both your phone and the watch.

Your browser does not support the video tag.

Video: An overview of the Easyfone DM70 Smart Watch, demonstrating its features and appearance. This video is provided by the seller.

OPERATING INSTRUCTIONS

Navigating the Interface

The DM70 Smart Watch features a 1.05" AMOLED touchscreen. Swipe left, right, up, or down to access different functions and menus. Press the side button to return to the home screen or wake the device.



Image: The Easyfone DM70 Smart Watch worn on a wrist, showcasing its compact and stylish design.

Customizing Watch Faces

Personalize your watch with multiple pre-installed watch faces or create your own using the companion app. Access watch face settings through the app to upload custom images or select from a gallery.



Image: The Easyfone DM70 Smart Watch displaying a vibrant floral watch face, highlighting customization options.

Calls and Notifications

Once paired with your phone, you can make, receive, and reject calls directly from the watch. You will also receive notifications for SMS, Facebook, WhatsApp, Instagram, and Twitter messages.

- To answer a call: Tap the green icon on the watch screen.
- To reject a call: Tap the red icon on the watch screen.
- To view notifications: Swipe down from the home screen or access the "Messages" menu.



Image: The Easyfone DM70 Smart Watch showing an incoming call with options to answer or reject.



Image: The Easyfone DM70 Smart Watch displaying a text message notification, demonstrating its smart notification feature.

Health and Fitness Tracking

The DM70 Smart Watch automatically tracks daily steps, calories burned, and sleep patterns. It also includes a heart rate monitor and supports over 100 sports modes, including walking, running, cycling, and swimming.

- Access workout modes from the main menu.
- View detailed health data and historical trends in the companion app.



Image: Two Easyfone DM70 Smart Watches, one with a green leather band and the other with a silver mesh band, showcasing different display modes like activity rings and weather.

MAINTENANCE

- **Cleaning:** Wipe the watch and bands regularly with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- **Water Resistance:** The watch is suitable for swimming, but avoid hot water, saunas, or diving. Do not press buttons underwater.
- **Storage:** Store the watch in a cool, dry place when not in use.
- **Band Care:** The quick-release leather band should be kept dry. The mesh band can be cleaned with a soft brush and mild soap if necessary.

TROUBLESHOOTING

Problem	Possible Solution
Watch not turning on	Ensure the watch is fully charged. Connect to the charging cable for at least 30 minutes.

Problem	Possible Solution
Cannot pair with phone	1. Ensure Bluetooth is enabled on your phone. 2. Make sure the watch is within range of your phone. 3. Restart both the watch and your phone. 4. Check if the app is updated to the latest version. 5. Forget the device in your phone's Bluetooth settings and try pairing again.
Notifications not received	1. Ensure the watch is connected to the app via Bluetooth. 2. Check notification permissions for the app in your phone's settings. 3. Verify that notification push is enabled within the watch's companion app.
Inaccurate fitness data	Ensure the watch is worn snugly on your wrist. Calibrate settings in the app (e.g., stride length for steps).

SPECIFICATIONS

Feature	Detail
Model Number	DM70
Display	1.04" / 1.05" Round AMOLED Touchscreen
Operating System	Easyfone OS
Connectivity	Bluetooth
Battery Type	Lithium Polymer
Battery Life	Up to 10 days (typical usage)
Memory Storage Capacity	1 GB
Dimensions	1.68 x 1.39 x 0.47 inches
Item Weight	1.06 ounces (30 Grams)
Compatibility	Android 7.0+ / iOS 12.0+
Special Features	Activity Tracker, Always On Display, Notifications, Phone Call

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Easyfone website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, visit the [Easyfone Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CGZRWX4B>

More documents and user manuals: <https://manuals.plus/>