

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Midea](#) /

› [Midea MGS30FS1LEAMG 30-inch Freestanding Gas Range User Manual](#)

Midea MGS30FS1LEAMG

Midea MGS30FS1LEAMG 30-inch Freestanding Gas Range - User Manual

Model: MGS30FS1LEAMG | Brand: Midea

INTRODUCTION

Thank you for choosing the Midea MGS30FS1LEAMG 30-inch Freestanding Gas Range. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read these instructions thoroughly before using the appliance and keep them for future reference.

This Midea Xtreme Chef gas range features a 100% stainless steel cover and a tempered glass lid, offering a modern aesthetic for your kitchen. It is equipped with 6 fully sealed stainless steel burners (3 super and 3 standard). The innovative 'Rotary Flame' technology ensures the flame rotates constantly, distributing heat more uniformly and efficiently, leading to faster cooking times and reduced gas consumption. The durable cast iron grates provide stable support for cookware, and the electronic ignition system works for both the burners and the oven, which can reach 200°C in approximately 5 minutes.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, burns, or injury to persons.

- Read all instructions before using the appliance.
- Ensure proper installation and grounding by a qualified technician.
- Do not store flammable materials near the appliance.
- Never use the appliance for space heating.
- Keep children away from the appliance during operation.
- Use only dry pot holders. Moist or damp pot holders on hot surfaces may result in burns from steam.
- Never leave surface burners or oven unattended at high heat settings.
- Clean the appliance regularly to prevent grease buildup.
- In case of a gas odor, immediately turn off the gas supply, open windows, and contact a qualified technician or gas company. Do not operate electrical switches.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your Midea gas range. It is recommended that installation be performed by a qualified installer or service agency.

Unpacking

Carefully remove all packaging materials, tape, and protective films from the range. Retain packaging for potential future transport or service.

Location Requirements

- The range must be installed on a level, stable surface.
- Ensure adequate clearance from combustible materials. Refer to local building codes.
- Provide proper ventilation for the cooking area.

Gas Connection

This appliance must be connected to the gas supply by a qualified technician. Ensure the gas type (Natural Gas or LP Gas) matches the appliance's specifications. A gas shut-off valve must be installed in an accessible location.

Electrical Connection

The range requires a standard electrical outlet for the electronic ignition system. Ensure the outlet is properly grounded and meets local electrical codes.

Leveling the Range

Adjust the leveling legs at the bottom of the range to ensure it is stable and level. This prevents spills and ensures even cooking.



Image 1: Dimensions of the Midea MGS30FS1LEAMG gas range. The image shows the front view of the stove with measurements indicating a width of approximately 75.69 cm, a depth of 67.49 cm, and a height of 93.6 cm.

OPERATING INSTRUCTIONS

Surface Burner Operation

1. Place cookware on the grate over the desired burner.
2. Push in and turn the corresponding burner knob counter-clockwise to the "LITE" position.
3. The electronic igniter will click, and the burner will ignite.
4. Once ignited, continue to hold the knob in for a few seconds, then adjust the flame to the desired size.
5. Ensure the flame does not extend beyond the edge of the cookware.

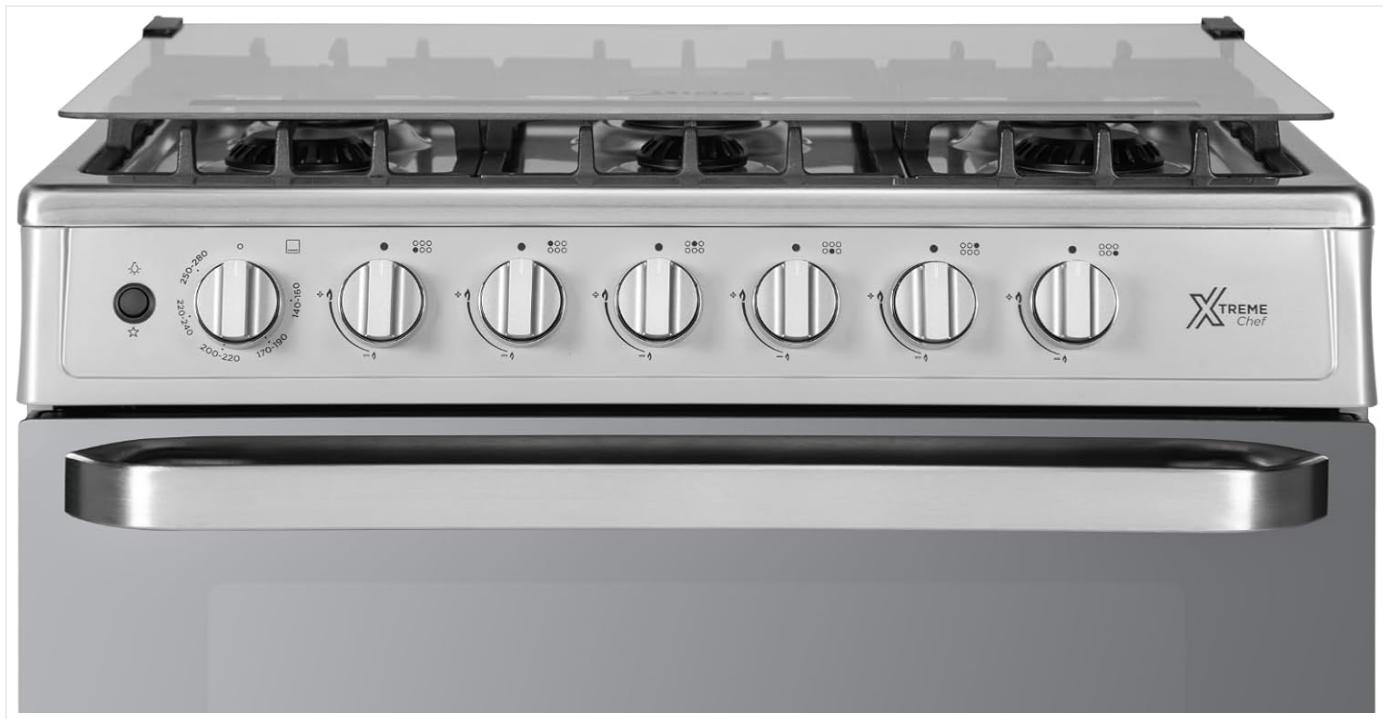


Image 2: Close-up view of the control panel and burners of the Midea MGS30FS1LEAMG gas range. It shows six control knobs for the burners and one for the oven, along with the "Xtreme Chef" branding and the tempered glass lid in the open position.

Oven Operation

1. Ensure oven racks are in the desired position before preheating.
2. Push in and turn the oven control knob to the desired temperature setting.
3. The electronic igniter will activate, and the oven burner will ignite.
4. Allow the oven to preheat to the set temperature. The oven can reach 200°C in approximately 5 minutes.
5. Place food inside the oven.
6. To turn off, turn the oven control knob to the "OFF" position.



Image 3: Interior view of the Midea MGS30FS1LEAMG oven with the door open. It shows two adjustable oven racks and the dark enamel interior.

Using the Glass Lid

The tempered glass lid can be used to cover the burners when not in use, providing a sleek appearance and protecting the cooktop. Ensure all burners are off and cool before closing the lid.

CARE AND MAINTENANCE

Cleaning the Cooktop

- Allow the cooktop and grates to cool completely before cleaning.
- Remove cast iron grates and burner caps. Wash them with warm, soapy water.
- Wipe the stainless steel cooktop surface with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive stainless steel cleaner.
- Ensure burner ports are clear of food debris.

Cleaning the Oven

- Remove oven racks. They can be cleaned with warm, soapy water.
- Wipe the interior of the oven with a damp cloth and mild detergent. For baked-on spills, a non-abrasive oven cleaner can be used, following the product instructions.
- Clean the oven door glass with a glass cleaner or warm, soapy water.

General Care

- Regularly inspect the gas supply line for any signs of damage or leaks.
- Keep the area around the range clean and free of obstructions.
- Avoid using abrasive cleaners or scouring pads on stainless steel surfaces to prevent scratching.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Burner does not ignite.	No power to the igniter; gas supply off; burner ports clogged; igniter wet.	Check power cord and circuit breaker; ensure gas valve is open; clean burner ports; dry igniter.
Uneven flame.	Burner ports clogged; burner cap not seated correctly.	Clean burner ports; reposition burner cap.
Oven not heating.	Gas supply off; igniter malfunction; incorrect temperature setting.	Ensure gas valve is open; contact service for igniter; verify temperature setting.
Gas odor.	Gas leak.	Immediately turn off gas supply, open windows, and contact a qualified technician or gas company. Do not operate electrical switches.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Midea customer service or a qualified service technician.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Midea
Model Number	MGS30FS1LEAMG
Color	Silver
Dimensions (L x W x H)	75.7 x 67.5 x 93.6 cm (29.8 x 26.6 x 36.8 inches)
Weight	46 kg (101.4 lbs)
Material	Stainless Steel

Feature	Detail
Burners	6 Sealed Burners (3 Super, 3 Standard)
Cooktop Grates	Cast Iron
Ignition Type	Electronic (Burners & Oven)
Oven Capacity	30 Liters (Approximate)
Oven Preheating	Reaches 200°C in 5 minutes
Special Features	Tempered Glass Lid, Rotary Flame Technology

WARRANTY AND SUPPORT


Midea products are designed for quality and reliability. For detailed warranty information, please refer to the warranty card included with your product or visit the official Midea website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance, service requests, or to order replacement parts, please contact Midea customer support. Contact details can typically be found on the Midea website or in the documentation provided with your appliance.

If you are not satisfied with the performance of your Midea product, you may be eligible for a return or exchange within a specified period, typically up to 60 days after delivery, by contacting the customer service center.

© 2023 Midea. All rights reserved.

Related Documents - MGS30FS1LEAMG

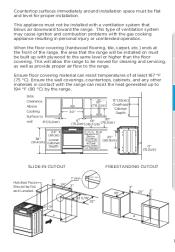	<p><u>Midea Gas Stove User Manual - MGS30FS1LEAMG / MGS30FS1LEAMSS</u></p> <p>Comprehensive user manual for Midea gas stoves, models MGS30FS1LEAMG and MGS30FS1LEAMSS. Covers installation, safety precautions, operation of burners, oven, grill, timer, cleaning, maintenance, and troubleshooting.</p>
	<p><u>Midea MGS30S2AST/MGS30S4AST Gas Range Installation and Specifications</u></p> <p>Detailed installation requirements, safety instructions, and technical specifications for Midea MGS30S2AST and MGS30S4AST slide-in and freestanding gas ranges.</p>

	<p>Midea 30-Inch Slide-In Gas Range User's Manual (Models MGS30S2AST, MGS30S4AST)</p> <p>This user manual provides comprehensive instructions for operating, maintaining, and troubleshooting the Midea 30-inch slide-in gas range, including models MGS30S2AST and MGS30S4AST. It covers safety precautions, cooktop and oven functions, cleaning procedures, and warranty information.</p>
	<p>Midea Gas Range Installation Instructions MGR30S2AST/MGR30S2AWW/MGR30S2ABB</p> <p>Comprehensive installation instructions for Midea MGR30S2AST, MGR30S2AWW, and MGR30S2ABB gas ranges, covering safety, setup, operation, and troubleshooting.</p>
	<p>Midea Gas Range LP Conversion Instructions for Models MGR30S2AST/AWW/ABB</p> <p>Detailed instructions for converting a Midea 30-inch stainless steel freestanding gas range from natural gas to LP gas, including parts list, tools required, and step-by-step installation procedures.</p>
	<p>Midea Gas Stove User Manual - MGS20FS1BIABB, MGS20FS1BIABG</p> <p>Comprehensive user manual for Midea gas stoves, models MGS20FS1BIABB and MGS20FS1BIABG. Covers safety instructions, installation, product introduction, operation, maintenance, technical specifications, and troubleshooting.</p>