

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Speck](#) /

› [Speck Gemtones Sport Wireless Earbuds User Manual - Model 150535-3232](#)

Speck 150535-3232

Speck Gemtones Sport Wireless Earbuds User Manual

Model: 150535-3232

1. INTRODUCTION

This manual provides comprehensive instructions for the proper use, setup, and maintenance of your Speck Gemtones Sport Wireless Earbuds. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in your product package:

- Speck Gemtones Sport Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Multiple Sizes of Silicone Ear Tips (XS, S, M, L)
- Quick Start Guide (separate document)

3. PRODUCT OVERVIEW

The Speck Gemtones Sport Wireless Earbuds are designed for active lifestyles, featuring a secure over-ear fit, water resistance, and extended battery life.



Image: Speck Gemtones Sport Wireless Earbuds resting in their open charging case, showcasing the black earbuds and the vibrant green interior of the case.

The charging case features a translucent, locking lid to help prevent accidental earbud loss. LED indicators on the case display the charging status.

Prevent Loss

with a Transparent, Locking Lid



Image: The Speck Gemtones Sport charging case with its transparent lid closed, showing the earbuds visible inside. One earbud is outside the case, illustrating the locking lid feature.

4. SETUP

4.1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB-C cable to the charging port on the case and to a power source. The LED indicators on the case will show charging progress. The case also supports wireless charging.

Wireless & USB-C Charging



Image: The Speck Gemtones Sport charging case resting on a white wireless charging pad, with a blue lightning bolt icon indicating wireless charging. Text overlay reads "Wireless & USB-C Charging."

4.2. Bluetooth Pairing

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), navigate to the Bluetooth settings.
4. Select "Speck Gemtones Sport" from the list of available devices.
5. Once connected, a confirmation sound will play, and the earbuds will be ready for use.

4.3. App Installation

Enhance your experience by downloading the free Speck Gemtones app. The app allows for customization of sound profiles, touch controls, and includes an earbud finder feature.

- For iOS devices, search for "Speck Gemtones" in the Apple App Store.
- For Android devices, search for "Speck Gemtones" in the Google Play Store.



Speck®



GEMTONES™ SPORT

True Wireless Earbuds • Vraiment Sans Fil



 **Wireless & USB-C Charging**
Chargement sans fil et USB-C

 **IPX5 Super Sweat & Water Resist**
Résistance à la sueur et à l'eau IPX6

 **40 Hours**
Max Music Playtime
Durée lecture maximale musique

 **Download the Free App!**
Comprend une application gratuite !

Image: A smartphone displaying icons for the Apple App Store and Google Play Store, with text encouraging users to "Download the Free App!" for Speck Gemtones.

5. OPERATION

5.1. Wearing the Earbuds

Select the ear tips that provide the most comfortable and secure fit. The Gemtones Sport earbuds come with

four sizes (XS, S, M, L) to ensure a custom comfort fit for extended wear during workouts or daily activities. Gently insert the earbud into your ear canal and rotate the over-ear hook to rest securely over your ear.

Touch Control Earbuds

with 4 Sizes of Silicone Eartips



Image: Two Speck Gemtones Sport earbuds displayed alongside four pairs of clear silicone ear tips in sizes XS, S, M, and L, highlighting the customizable fit.

5.2. Touch Controls

The earbuds feature integrated touch controls for managing audio playback and calls. Specific functions can be customized via the Speck Gemtones app.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud.
- **Activate Voice Assistant:** Triple tap on either earbud.

5.3. App Features

The Speck Gemtones app provides advanced control over your earbuds:

- **Equalization (EQ) Profiles:** Choose from various preset sound profiles or create your own custom EQ settings.
- **Volume Limiting:** Set a maximum volume level to protect hearing, especially useful for younger users.
- **Touch Control Customization:** Reassign touch control functions to suit your preferences.
- **Earbud Finder:** Locate misplaced earbuds by playing a sound through them.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Speck Gemtones Sport Wireless Earbuds, follow these maintenance guidelines:

- **Cleaning:** The earbuds are IPX5-rated for water and sweat resistance. After intense workouts or exposure to moisture, gently wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or immerse the case in water.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage. Store in a cool, dry place away from extreme temperatures.
- **Ear Tips:** Regularly remove and clean the silicone ear tips with mild soap and water. Ensure they are completely dry before reattaching them to the earbuds.

7. TROUBLESHOOTING

If you encounter issues with your Speck Gemtones Sport Wireless Earbuds, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	<ul style="list-style-type: none">• Ensure earbuds are charged.• Turn off and on your device's Bluetooth.• Forget "Speck Gemtones Sport" in your device's Bluetooth settings and re-pair.• Place earbuds back in the case, close the lid, wait 10 seconds, then open to re-enter pairing mode.
No sound or low volume	<ul style="list-style-type: none">• Check device volume and earbud volume.• Ensure earbuds are properly seated in your ears.• Clean ear tips and earbud mesh to remove debris.• Check app settings for volume limiting.
Charging issues	<ul style="list-style-type: none">• Ensure USB-C cable is securely connected.• Try a different USB-C cable and power adapter.• Ensure earbuds are correctly placed in the charging case.• For wireless charging, ensure the case is centered on the charging pad.

Problem	Possible Solution
Touch controls unresponsive	<ul style="list-style-type: none">• Ensure earbuds are clean and dry.• Restart the earbuds by placing them in the case and closing the lid for a few seconds.• Check app settings for touch control customization.

8. SPECIFICATIONS

Feature	Detail
Model Name	Gemtones Sport
Model Number	150535-3232
Connectivity	Bluetooth 5.3, Wireless
Earpiece Shape	Over Ear
Water Resistance	IPX5 (Water Resistant)
Battery Life	Up to 40 hours (with charging case)
Charging	USB-C, Wireless Charging
Control Method	Touch, Volume Control
Compatible Devices	Android Devices, iOS Devices, Bluetooth-enabled Devices
Material	Plastic
Item Weight	0.15 Kilograms (5.3 ounces)
Product Dimensions	3.16 x 1.57 x 1.32 inches
UPC	840168536672

9. WARRANTY AND SUPPORT

Speck Gemtones Sport Wireless Earbuds are backed by a **Two-Year Manufacturer's Warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims, technical support, or further assistance, please visit the official Speck website or contact their customer service department.

For more information, visit: www.speckproducts.com

