

SVAKOM Amy 2

SVAKOM Amy 2 Vibrator User Manual

Model: Amy 2 (54028240000)

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your SVAKOM Amy 2 vibrator. Please read this manual thoroughly before first use and retain it for future reference.

The SVAKOM Amy 2 is an ergonomically curved vibrator designed for targeted stimulation. Made from soft, silky silicone, it features a flattened tip. It offers 5 intensive vibration modes with 5 speeds and is waterproof for versatile use.

2. SAFETY INFORMATION

- **Read all instructions:** Before using the device, read and understand all instructions and warnings.
- **Personal use only:** This product is intended for personal use.
- **Material safety:** The device is made of body-safe silicone. Clean thoroughly before and after each use.
- **Lubricant compatibility:** Use only water-based lubricants with this device. Oil-based lubricants can damage the silicone material.
- **Charging:** Use only the provided USB charging cable. Do not use the device while it is charging.
- **Waterproof:** The device is waterproof, but ensure the charging port is completely dry before charging.
- **Storage:** Store in a cool, dry place away from direct sunlight and out of reach of children.
- **Discontinue use:** If you experience any discomfort or pain, discontinue use immediately and consult a medical professional.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- SVAKOM Amy 2 Vibrator
- USB Charging Cable
- User Manual
- Storage Pouch



Image: Contents of the SVAKOM Amy 2 package, showing the vibrator, charging cable, user manual, and a storage pouch.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your SVAKOM Amy 2 vibrator.



Image: Top view of the SVAKOM Amy 2 vibrator, highlighting the control panel with power and intensity buttons.

- **Power Button:** Located on the control panel, used to turn the device on/off.
- **Intensity Buttons (+/-):** Located on the control panel, used to adjust vibration intensity.
- **Charging Port:** Typically located at the base of the device, covered by a silicone seal.
- **Flexible Body:** The main silicone structure of the vibrator.
- **Flattened Tip:** The specially designed tip for targeted stimulation.

5. SETUP AND FIRST USE

5.1. Charging the Device

1. Before first use, fully charge the device.
2. Locate the charging port, usually at the base of the device, and gently open the silicone cover.
3. Insert the small end of the provided USB charging cable into the device's charging port.
4. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
5. The indicator light will illuminate during charging and change when fully charged (refer to specific light behavior in the manual if available, otherwise general statement). Charging typically takes 1.5 to 2 hours.
6. Once fully charged, disconnect the cable and ensure the silicone cover for the charging port is securely closed to maintain waterproofing.



Image: Angled view of the SVAKOM Amy 2 vibrator, indicating the location of the charging port and control buttons.

5.2. Cleaning Before First Use

Clean the device thoroughly with warm water and a mild, toy-safe soap before its initial use. Rinse well and pat dry with a lint-free cloth.

6. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button for approximately 2-3 seconds to turn the device on or off.
2. **Change Vibration Mode:** Once the device is on, short press the power button to cycle through the 5 different vibration modes.
3. **Adjust Intensity:** Use the '+' and '-' buttons to increase or decrease the vibration intensity within the selected mode. There are 5 intensity levels.
4. **Waterproof Use:** The device is waterproof and can be used in the bath or shower. Ensure the charging port is sealed.



Image: Close-up of the SVAKOM Amy 2 vibrator's control panel, showing the power button and intensity adjustment buttons.

7. MAINTENANCE

7.1. Cleaning

- Clean the device thoroughly with warm water and a mild, toy-safe soap after each use.
- Rinse the device completely to remove all soap residue.
- Pat dry with a lint-free cloth or allow it to air dry completely before storing.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

7.2. Storage

- Store the SVAKOM Amy 2 in its provided storage pouch.
- Keep it in a cool, dry place, away from direct sunlight and extreme temperatures.
- Ensure the device is fully charged before long-term storage to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device is locked.	Charge the device fully. Press and hold the power button for 2-3 seconds to unlock/power on.
Vibrations are weak.	Low battery or low intensity setting.	Recharge the device. Increase intensity using the '+' button.
Device not charging.	Cable not properly connected or faulty cable/adapter.	Ensure the USB cable is securely connected to both the device and the power source. Try a different USB port or adapter. Ensure the charging port is dry.
Device feels sticky or damaged.	Use of oil-based lubricants or harsh cleaners.	Only use water-based lubricants. Clean with mild, toy-safe soap. If damage persists, discontinue use.

9. SPECIFICATIONS

Feature	Detail
Model Name	Amy 2
Model Number	54028240000
Brand	SVAKOM
Material	Acrylonitrile Butadiene Styrene (ABS), Silicone
Color	Violet
Dimensions (L x W x H)	17.5 x 3.5 x 3 cm (175 x 35 x 30 mm)
Weight	115 grams
Battery Type	1 Lithium-polymer (included)
Vibration Modes	5 modes
Intensity Levels	5 speeds
Waterproof	Yes

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official SVAKOM website or contact your retailer. Keep

your proof of purchase for warranty claims.

Manufacturer: SVAKOM

ASIN: B0CH2TFYHW

International Article Code: 06959633102237

For further assistance, visit the [SVAKOM official website](#).

© 2024 SVAKOM. All rights reserved.
This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question