#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- **BONTEC** /
- > BONTEC 10x10 Pop-Up Canopy Tent Model ZP01-FBA Instruction Manual

#### **BONTEC ZP01-FBA**

# BONTEC 10x10 Pop-Up Canopy Tent Instruction Manual

Model: ZP01-FBA | Brand: BONTEC

#### 1. Introduction

This manual provides essential instructions for the safe and efficient setup, operation, and maintenance of your BONTEC 10x10 Pop-Up Canopy Tent. Please read all instructions carefully before assembly and use. Retain this manual for future reference.



Image 1: The BONTEC 10x10 Pop-Up Canopy Tent in Beige.

#### 2. SAFETY INFORMATION

#### **WARNING:**

Always ensure the canopy is properly anchored to the ground using the provided sandbags to prevent it from tipping over in windy conditions. Do not use the canopy in high winds or during thunderstorms.

- Keep all flame and heat sources away from the canopy fabric.
- Do not leave the canopy unattended in adverse weather conditions.
- Ensure all locking mechanisms are fully engaged during setup and before use.
- Keep children and pets away from the canopy during assembly and disassembly.

# 3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

• 1 x Pop-Up Canopy Frame (Pre-assembled)

- 1 x Canopy Top Fabric (Silver-coated 150D)
- 1 x Wheeled Storage Bag
- 4 x Sandbags (empty, for filling with sand/weight)
- 8 x Ground Stakes
- 4 x Ropes



Image 2: All components included in the BONTEC 10x10 Pop-Up Canopy Tent package.

#### 4. SETUP INSTRUCTIONS

The BONTEC 10x10 Pop-Up Canopy Tent features an easy one-person setup with a central locking system. Follow these steps for quick assembly:

- 1. **Unfold the Frame:** Place the folded frame in the desired location. Gently pull the outer legs apart to partially open the frame.
- 2. Attach Canopy Top: Drape the canopy top fabric over the partially opened frame. Secure the corners of

the fabric to the frame using the attached Velcro fasteners.

- 3. **Extend the Frame:** From underneath the canopy, push up the central lock hub until it clicks into place. This will fully extend the canopy top.
- 4. **Extend Legs:** Extend each leg downwards until it locks into the desired height setting. Use the height-adjustment button design for easy adjustment.
- 5. **Secure the Canopy:** Fill the provided sandbags with sand or other suitable weight and attach them to each leg. Use the ground stakes and ropes to further secure the canopy, especially in breezy conditions.



Image 3: Visual guide for the three main installation steps.

#### **Setup Video Guide**

Your browser does not support the video tag.

Video 1: Official BONTEC 10x10ft Pop Up Canopy Tent Setup Guide (Model ZP02, similar to ZP01-FBA).

Your browser does not support the video tag.

Video 2: General 10x10 Pop Up Canopy Tent Setup Instructions from a seller.

## **Height Adjustment**

The canopy offers three adjustable height settings. To adjust the height, locate the red height-adjustment button on each leg. Press the button and slide the leg to the desired height, ensuring the button clicks securely into one of the pre-drilled holes.



Image 4: Detail of the height-adjustment button design.

#### **Securing the Canopy**

For optimal stability, especially in outdoor environments, utilize all provided anchoring accessories:

- **Sandbags:** Fill the four sandbags with sand, small stones, wet soil, or bottled water. Attach one sandbag to each leg of the canopy using the integrated straps.
- Ground Stakes: Insert the ground stakes through the footplates of each leg and into the ground.
- **Ropes:** Attach the ropes to the canopy's corners and secure them to the ground using additional stakes, pulling taut to provide extra stability against wind.

# 6. MAINTENANCE

- Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners.
- Ensure the fabric is completely dry before folding and storing to prevent mold and mildew.
- Inspect the frame and fabric regularly for any signs of wear or damage. Replace damaged parts as needed.

# 7. STORAGE

To store your canopy tent:

- 1. Disassemble the canopy by reversing the setup steps.
- 2. Ensure all components, especially the fabric, are clean and dry.
- 3. Fold the frame compactly and place it into the wheeled storage bag.
- 4. Store the bag in a cool, dry place away from direct sunlight.



Image 5: Dimensions of the canopy tent.

# 8. SPECIFICATIONS

Feature	Specification
Brand	BONTEC
Model Number	ZP01-FBA
Product Dimensions	118.1"L x 118.1"W x 114.6"H (10ft x 10ft x 9.55ft)
Floor Area	100 Square Feet
Frame Material	Metal (High-strength steel)
Canopy Fabric	Silver-coated 150D Fabric
UV Protection	UPF 50+

Water Resistance Level	Water Resistant (78.7 inches)
Item Weight	37.4 pounds
Assembly Required	Yes

## 9. TROUBLESHOOTING

- Canopy not standing securely: Ensure all legs are fully extended and locked. Verify that sandbags are filled and attached, and ground stakes/ropes are properly installed.
- **Difficulty extending/collapsing frame:** Check for any obstructions in the frame's scissor mechanism. Ensure the central locking hub is fully released or engaged as appropriate.
- Water pooling on canopy top: Ensure the canopy top is taut and properly secured to the frame. Adjust leg heights if necessary to create proper tension and allow water runoff.

# 10. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact BONTEC customer service directly through their official website or the retailer where the product was purchased. Please have your model number (ZP01-FBA) and purchase date available.

 
© 2025 BONTEC. All rights reserved.

#### Related Documents - ZP01-FBA



#### BONTEC Mobile Workstation Assembly Instructions MWS-001BK

Detailed assembly instructions for the BONTEC MWS-001BK Mobile Workstation, a height-adjustable stand suitable for podium, lectern, and laptop use.



#### **BONTEC Universal Floor TV Stand Assembly Instructions**

Comprehensive guide for assembling the BONTEC Universal Floor TV Stand, suitable for 30-70 inch TVs. Includes component checklist, step-by-step instructions, and safety tips.

