

[Manuals.plus](#) /

> [onerbl](#) /

> onerbl 6V AC/AC Adapter Instruction Manual for Disney Mr. Christmas Models 27802 and 27807

**onerbl 27802, 27807**

# onerbl 6V AC/AC Adapter Instruction Manual

Compatible with Vintage Disney Mr. Christmas Mickey's Holiday Carousel Models 27802 and 27807

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective use of your onerbl 6V AC/AC Adapter. This power supply is designed to be compatible with Vintage Disney Mr. Christmas Mickey's Holiday Carousel Models 27802 and 27807, providing a reliable 6VAC 1200mA (1.2A) Class 2 power source.



Image 1: The onerbl brand logo, indicating a superior power supply solution.

Please read this manual thoroughly before using the adapter and retain it for future reference.

## 2. SAFETY INFORMATION

---

To ensure safe operation and prevent damage, observe the following safety precautions:

- **Voltage Compatibility:** Ensure the adapter's output voltage (6V AC) matches the requirements of your device (Disney Mr. Christmas Models 27802, 27807).
- **Current Rating:** Verify that the device's current draw does not exceed the adapter's 1.2A (1200mA) output.
- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to water, moisture, or extreme temperatures.
- **Proper Ventilation:** Do not cover the adapter during use, as this may lead to overheating.
- **Damage Inspection:** Before each use, inspect the adapter and cord for any signs of damage. Do not use if damaged.
- **Unplug When Not in Use:** Disconnect the adapter from the power outlet when not in use for extended periods.
- **Children and Pets:** Keep the adapter out of reach of children and pets.



Image 2: Illustration of the adapter's smart chip providing multiple safety protections, including short-circuit, over-voltage, and over-current protection.

The adapter features built-in protections for short-circuit, over-voltage, and over-heat to safeguard your devices.

### 3. PRODUCT FEATURES

---

The onerbl 6V AC/AC Adapter offers the following key features:

- **Universal Input:** AC 100-240V 50/60Hz auto-sensing input, suitable for worldwide use.
- **Stable Output:** Provides a consistent 6V AC, 1.2A (1200mA) output.
- **Safety Protections:** Equipped with Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, and Over Current Protection.
- **Durable Construction:** Features a robust design with quality materials, including copper wire and a PVC jacket for enhanced durability.

- **Extended Cord Design:** Available with various cord lengths for flexible placement.

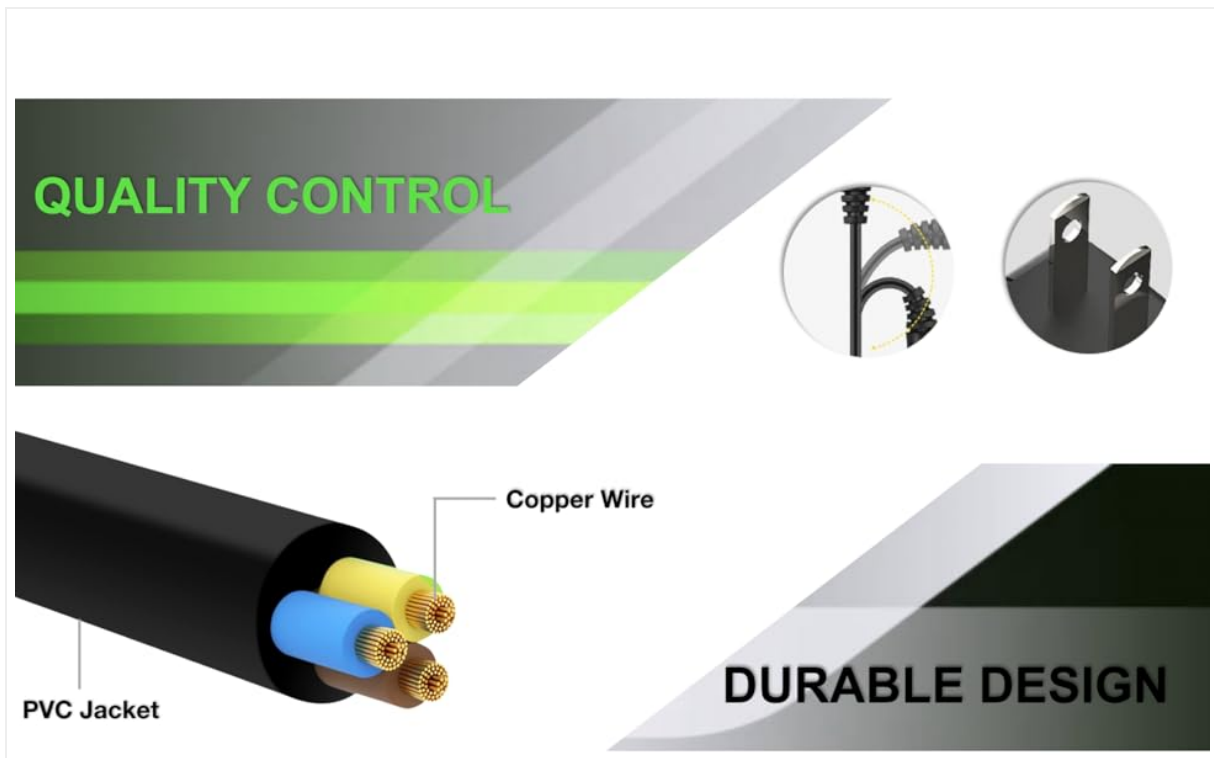


Image 3: Depicts the quality control and durable design of the adapter, highlighting the copper wire and PVC jacket for longevity.



Image 4: Shows examples of extended cord designs, illustrating the flexibility provided by different cable lengths (e.g., 10 ft and 6.6 ft).

## 4. SETUP INSTRUCTIONS

---

1. **Verify Compatibility:** Confirm that your device (Disney Mr. Christmas Models 27802 or 27807) requires a 6V AC power input and a current draw of 1.2A or less.
2. **Connect to Device:** Plug the output connector of the onerbl 6V AC/AC Adapter into the power input port of your Disney Mr. Christmas device. Ensure a secure connection.
3. **Connect to Power Outlet:** Insert the adapter's plug into a standard AC 100-240V wall outlet.
4. **Power On Device:** Once connected, power on your Disney Mr. Christmas device according to its own instructions.



Image 5: Illustrates the wide range of applications for this type of power adapter, including various electronic devices, emphasizing its versatility.

## 5. OPERATING INSTRUCTIONS

Once properly set up, the adapter will continuously supply power to your compatible device. No further operational steps are required for the adapter itself.

- Ensure the adapter is always plugged into a functional power outlet.
- Avoid bending or crimping the power cord excessively.
- If the device is not functioning, first check the power connections before troubleshooting the device itself.

## 6. MAINTENANCE

The onerbl 6V AC/AC Adapter requires minimal maintenance:

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and moisture. Avoid wrapping the cord too tightly around the adapter.
- **Inspection:** Periodically check the adapter and its cable for any signs of wear, cuts, or damage.

## 7. TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                 | Possible Cause  | Solution  |
|-------------------------|---|---|
| Device not powering on. | Adapter not plugged in, faulty outlet, or damaged adapter.  | <ul style="list-style-type: none"> <li>◦ Ensure adapter is securely plugged into both the device and a working wall outlet.</li> <li>◦ Test the outlet with another device.</li> <li>◦ Inspect the adapter and cord for visible damage. If damaged, discontinue use.</li> </ul> |
| Adapter feels hot.      | Normal operation, or insufficient ventilation, or overload. | <ul style="list-style-type: none"> <li>◦ A slight warmth is normal.</li> <li>◦ Ensure the adapter is not covered and has adequate airflow.</li> <li>◦ Verify the device's power requirements do not exceed 1.2A.</li> </ul>   |
| Intermittent power.     | Loose connection or damaged cable.                          | <ul style="list-style-type: none"> <li>◦ Check all connections for tightness.</li> <li>◦ Inspect the cable for kinks or breaks.</li> </ul>  |

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

| Feature                   | Detail   |
|---------------------------|--|
| Brand                     | onerbl   |
| Compatible Devices        | Vintage Disney Mr. Christmas Mickey's Holiday Carousel Models 27802, 27807 |
| Input Voltage             | AC 100-240V, 50/60Hz   |
| Output Voltage            | AC 6V  |
| Current Rating            | 1.2 Amps (1200mA)  |
| Power Source              | Corded Electric  |
| Main Power Connector Type | 2 Pin (US Standard)  |
| Special Feature           | Travel (Universal Input)   |
| Mounting Type             | Wall Mount   |
| Manufacturer              | Shenzhen Waweis Technology Co., Ltd  |

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your purchase receipt as proof of purchase. For further assistance, you may contact onerbl customer service through the platform where the product was purchased.

