

[Manuals.plus](#) /

› [Yomeie](#) /

› Yomeie Fabric Shaver (Model M22-G Blue) Instruction Manual

Yomeie M22-G

Yomeie Fabric Shaver (Model M22-G Blue) Instruction Manual

Efficient Lint and Fuzz Removal for Clothing & Furniture

INTRODUCTION

Thank you for choosing the Yomeie Fabric Shaver. This electric lint remover is designed to effectively remove pilling, fuzz, and lint from various fabrics, restoring the fresh appearance of your clothing and furniture. Please read this manual carefully before use to ensure safe and optimal performance.



Image: Yomeie Fabric Shaver, designed to refresh fabrics.

PRODUCT FEATURES

- **Efficient and Versatile:** Powered by 2 AA batteries (not included) with a large suction motor for high-speed rotation, effectively removing pilling, fuzz, and lint from sweaters, woolen coats, sofas, and furniture.
- **Sharp Three-Blade System:** Features a three-blade system that automatically grinds to maintain sharpness. The intelligent floating design ensures quick lint removal without damaging clothes.
- **Dual Protection:** High-strength stainless steel mesh protects fabrics from cuts or snags. A safety switch automatically turns off the device if the mesh cover is loose, preventing accidental injury.

- **Battery Operated:** Cordless design for convenient use anytime, anywhere.
- **Comfortable and Lightweight:** Compact and ergonomically designed for easy handling and portability, ideal for travel or home use.

SETUP

1. **Unpack:** Carefully remove the fabric shaver and all accessories from the packaging.
2. **Install Batteries:** The Yomeie Fabric Shaver requires 2 AA batteries (not included).
 - Locate the battery compartment on the bottom of the device.
 - Gently slide off the blue clear plastic collector to reveal the battery compartment.
 - Insert 2 AA batteries, ensuring correct polarity (+/-).
 - Replace the plastic collector until it clicks securely into place.

Powered By AA Batteries



Battery Not Included

OPERATING INSTRUCTIONS

1. **Prepare Fabric:** Lay the garment or fabric flat on a hard, smooth surface. Ensure the fabric is taut to prevent snagging.
2. **Turn On:** Slide the power switch to the 'ON' position. The blades will begin to rotate.
3. **Apply to Fabric:** Gently press the shaver head onto the pilled area of the fabric. Move the shaver in small, circular motions or back and forth, applying light and even pressure. Avoid pressing too hard to prevent damage.
4. **Observe Results:** Continue shaving until the desired smoothness is achieved. The removed lint and fuzz will collect in the transparent container.
5. **Turn Off:** Once finished, slide the power switch to the 'OFF' position.



**Comfortable Grip
Easy To Use**

Image: User holding the Yomeie Fabric Shaver, highlighting its comfortable grip and application on fabric.

Yomeie

Fabric Shaver

Keep your clothes looking new

Designed for removing fuzz, pills, and lint.



Image: A visual comparison demonstrating the shaver's effectiveness in removing lint from fabric.

MAINTENANCE

1. **Empty Lint Collector:** Regularly empty the transparent lint collector when it is full or after each use. Slide off the collector and discard the accumulated lint.
2. **Clean Blades:** Use the provided cleaning brush to remove any remaining lint or debris from the blades and the protective mesh. Ensure the device is turned off before cleaning.
3. **Replace Blades:** The shaver comes with extra blades. If you notice a decrease in performance, carefully replace the old blades with new ones. Refer to the diagram below for guidance.
4. **Storage:** Store the fabric shaver in a dry place, away from direct sunlight and moisture.

Battery Not Included



Image: Cleaning the shaver blades with the included brush.

Image: Emptying the lint collector after use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity or replace with new AA batteries.
Shaver stops during use.	Lint collector is full, or protective mesh is loose.	Empty the lint collector. Ensure the protective mesh is securely attached.
Poor lint removal performance.	Blades are dull or clogged with lint.	Clean the blades and mesh. Replace blades if necessary.
Fabric gets damaged.	Excessive pressure applied, or fabric is too delicate.	Use lighter pressure. Test on an inconspicuous area first, especially for delicate fabrics. Ensure fabric is taut.

SPECIFICATIONS

Brand: Yomeie
Model Number: M22-G Blue
Power Source: 2 x AA Batteries (not included)
Material: Plastic, Stainless Steel
Color: Blue
Operation Mode: Automatic
Item Weight: 6.4 ounces
Package Dimensions: 5.98 x 3.03 x 2.52 inches
UPC: 787505891561

WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your Yomeie Fabric Shaver, please contact our customer support team. Refer to your purchase documentation for specific warranty details and contact information.

You can also visit the official Yomeie store for more information and support:[Yomeie Store](#)