



[Manuals.plus](#) /

› [SUBAY](#) /

› Subay Nail Drill Machine Electric File User Manual

SUBAY SBY0386

Subay Nail Drill Machine Electric File User Manual

Model: SBY0386

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective operation, maintenance, and troubleshooting of your Subay Nail Drill Machine Electric File. Please read this manual thoroughly before first use and retain it for future reference.

SAFETY INFORMATION

Your safety is paramount. Adhere to the following precautions:

- Always wear safety glasses when using the nail drill to protect your eyes from flying debris or dust.
- Be cautious when using the rotating bit or motor to avoid burns.
- Keep the nail drill away from heat sources and liquids to prevent damage and potential hazards.
- Ensure the device is unplugged before cleaning or changing accessories.
- Do not operate the device with a damaged cord or plug.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Subay Nail Drill Machine Base Unit
- Nail Drill Handpiece
- Power Adapter
- Assorted Nail Drill Bits
- Sanding Bands
- User Manual (this document)



Image: The Subay Nail Drill Machine, including the base unit, handpiece, and a collection of drill bits and sanding bands.

PRODUCT FEATURES

The Subay Nail Drill Machine is designed for efficient and precise nail care:

- **Effortless Nail Care:** Designed for shaping, smoothing, and polishing nails with ease.
- **Powerful Performance:** High-torque motor with consistent power and multiple speed settings (up to 20000 RPM Max).
- **Innovative Design:** Features a convenient storage compartment for attachments and 28 bit holders. Ergonomic handpiece for comfortable use.
- **Customizable Experience:** Interchangeable attachments allow tailoring to specific nail types and desired outcomes.
- **Compact and Portable:** Lightweight design for easy transport and storage.

Easy to Storage



2 Storage Compartments
For Collecting Nail Art Tools

28 Bits Holders
For Collecting
Different Nail Bits



Image: Detailed view of the nail drill machine highlighting its two storage compartments and 28 bit holders for organized storage of nail art tools and bits.

Small but Powerful



Low Noise



Low Consumption



Stable Circuit



Easy to Storage



F/R Direction

Adjustable Speeds

20000 RPM Max

Image: Close-up of the nail drill handpiece, illustrating its maximum speed of 20000 RPM, adjustable speed settings, and F/R direction control.

1. Unpack all components and ensure they are free from damage.
2. Place the main unit on a stable, flat surface.
3. Connect the handpiece cable to the designated port on the main unit (DC Out).
4. Insert the desired nail drill bit firmly into the chuck of the handpiece. Ensure it is securely locked in place.
5. Connect the power adapter to the main unit and then plug it into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for proper operation of your nail drill machine:

1. **Power On:** After connecting the power, the red light indicates standby mode. Press the ON/OFF switch; the light will turn green, indicating the unit is powered on.
2. **Select Direction:** Use the F/R (Forward/Reverse) switch to select the desired rotation direction for the drill bit.
3. **Adjust Speed:** Rotate the speed knob to adjust the rotation speed of the drill bit. Start with a lower speed and gradually increase as needed.
4. **Begin Operation:** Gently apply the rotating drill bit to the nail surface for shaping, filing, or polishing. Avoid excessive pressure.
5. **Changing Bits:** Turn off the machine and unplug it before changing drill bits. Ensure the new bit is securely inserted.
6. **Storage:** After use, place the handpiece back into its socket. The machine features an auto-sensing shut-off function; it will automatically stop and restart after 1-3 seconds if pressure is applied, or you can manually turn it off. Store bits in the designated holders.



Image: Visual guide demonstrating the six steps for operating the nail drill: connecting power, selecting direction, adjusting speed, using the handpiece, changing bits, and storing the device.

MAINTENANCE

Regular maintenance ensures longevity and optimal performance:

- **Cleaning:** After each use, wipe the handpiece and main unit with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Bit Cleaning:** Clean drill bits after each use to remove dust and debris. Use a small brush or ultrasonic cleaner if available.

- **Storage:** Store the machine and all accessories in a clean, dry place away from direct sunlight and extreme temperatures.
- **Cord Care:** Do not wrap the power cord tightly around the unit. Avoid kinking or twisting the cord.

TROUBLESHOOTING

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Power cord not properly connected; power outlet issue.	Ensure power cord is securely plugged into the unit and a working outlet.
Handpiece stops during use.	Excessive pressure applied (overload protection activated); loose bit.	Reduce pressure. The machine may automatically restart after 1-3 seconds. Check if the drill bit is securely inserted.
Drill bit wobbles or vibrates excessively.	Bit not inserted correctly; bent bit.	Re-insert the bit firmly. Replace bent or damaged bits.
Reduced performance or speed.	Accumulated dust/debris; worn-out bit.	Clean the handpiece and bits. Replace worn-out bits.

SPECIFICATIONS

Feature	Detail
Model Number	SBY0386
Brand	SUBAY
Material	Plastic
Power Source	Corded Electric
Max RPM	20000 RPM
Package Dimensions	6.73 x 5.83 x 2.72 inches
Item Weight	1.26 Pounds

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact SUBAY customer service directly. Keep your purchase receipt as proof of purchase.

