

[Manuals.plus](#) /

› [Kircuit](#) /

› Kircuit 35V AC/DC Adapter User Manual for Kogan Cordless Stick Vacuum Cleaners

Kircuit AC/DC Adapter B0CH3GJ1F1

Kircuit 35V AC/DC Adapter User Manual

Model: AC/DC Adapter B0CH3GJ1F1

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Kircuit 35V AC/DC Adapter. This adapter is designed to provide power and charge 29.6V Li-ion batteries for compatible Kogan Cordless Stick Vacuum Cleaners, including models such as MX11, C10, T10, Z11, V11 Pro, Z6, V6, KAVACSTM11X, KAVACSTC10A, KAVACSTT10B, and KAVACSTV11A. Please read this manual thoroughly before use and retain it for future reference.



Image: The Kircuit 35V AC/DC Adapter, displaying its label with input (100-240V AC) and output specifications. The adapter is black with a standard US 2-pin plug.

SAFETY INFORMATION

To ensure safe operation and prevent damage, always adhere to the following safety guidelines:

- Use the adapter only with compatible devices as specified in this manual.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to disassemble or modify the adapter. This may void the warranty and pose safety risks.
- Ensure the power outlet voltage matches the adapter's input specifications (100-240V AC).
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep out of reach of children.

SETUP

Follow these steps to set up your Kircuit AC/DC Adapter:

1. **Inspect the Adapter:** Before first use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
2. **Connect to Device:** Insert the barrel plug connector of the adapter firmly into the charging port of your compatible Kogan Cordless Stick Vacuum Cleaner.
3. **Connect to Power Outlet:** Plug the adapter's 2-pin power plug into a standard 100-240V AC wall outlet.



Image: The Kircuit AC/DC Adapter plugged into a white power strip on a desk, demonstrating a typical connection scenario. The adapter's cable is coiled neatly.

OPERATING INSTRUCTIONS

Once connected, the adapter will begin to power or charge your device. The charging indicator on your vacuum cleaner (if present) will show the charging status.

- **Charging:** Allow the vacuum cleaner's battery to charge fully before its first use or after prolonged storage. Refer to your vacuum cleaner's manual for specific charging times.
- **Overcharge Protection:** The adapter features built-in protection against overcharging, ensuring the longevity of your device's battery.
- **Disconnection:** To disconnect, first unplug the adapter from the wall outlet, then disconnect the barrel plug from your vacuum cleaner.



Image: The Kircuit AC/DC Adapter with its power cord extended, highlighting the 6.5 ft (approximately 2 meters) cord length for convenient reach.

MAINTENANCE

Proper maintenance ensures the adapter's longevity and safe operation:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Cable Care:** Do not bend, twist, or pull the cable excessively. Regularly check the cable for cuts, fraying, or exposed wires. If any damage is observed, discontinue use immediately.

TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Adapter not powering device/charging	◦ Loose connection ◦ Faulty power outlet ◦ Incompatible device ◦ Damaged adapter/cable	◦ Ensure all connections are secure. ◦ Test the power outlet with another device. ◦ Verify your vacuum cleaner model is listed as compatible. ◦ Inspect adapter and cable for damage. If damaged, discontinue use.
Adapter feels hot during use	◦ Normal operation (slight warmth) ◦ Overload or poor ventilation	◦ A slight warmth is normal. ◦ Ensure the adapter is in a well-ventilated area. If it becomes excessively hot, disconnect immediately and contact support.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Brand	Kircuit
Model	AC/DC Adapter B0CH3GJ1F1
Input Voltage	100-240V AC, 50/60Hz
Output Voltage	35V DC (compatible with 29.6V Li-ion batteries)
Connector Type	Barrel Plug
Power Source	Corded Electric
Special Features	Dynamic IC, Charger IC & Power fuse for rapid charging and overcharge protection.
Compatible Devices	Kogan MX11, C10, T10, Z11, V11 Pro, Z6, V6, KAVACSTM11X, KAVACSTC10A, KAVACSTT10B, KAVACSTV11A 29.6V Li-ion Battery Cordless Stick Vacuum Cleaners.

WARRANTY AND SUPPORT

This product is covered by standard manufacturer warranties. For specific warranty details, please refer to the documentation provided with your purchase or contact the seller directly.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact the seller, EPtech, through your purchase platform. You may also refer to the Kircuit brand's official support channels if available.

- **Return Policy:** The product typically includes a 30-day return/replacement policy from the date of purchase.
- **Protection Plans:** Extended protection plans may be available for purchase separately.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question