

MASINGO C10

MASINGO Burletta C10 Portable Karaoke Machine User Manual

Model: C10 | Brand: MASINGO

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your MASINGO Burletta C10 Portable Karaoke Machine. Please read this manual thoroughly before use and retain it for future reference. The MASINGO Burletta C10 is a versatile portable speaker system designed for karaoke and audio playback, featuring LED lights, multiple input options, and two microphones.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Burletta C10 Karaoke Machine
- 1 Wireless Microphone
- 1 Wired Microphone
- USB Charging Cable
- Shoulder Strap
- User Manual (this document)

PERFORM A DUET WITH THE ONES YOU LOVE



The image displays the complete contents included with the MASINGO Burletta C10 package, including the main unit, two microphones, charging cable, and strap.

PRODUCT OVERVIEW

The MASINGO Burletta C10 features a compact design with various controls and ports for audio input and output. Familiarize yourself with the components before operation.

CONTROL THE FLOW AND CONNECT ON THE GO



This image highlights the control panel of the Burletta C10, detailing the functions of each button and port, including the master volume, mode selection, LED controls, bass boost, and various input/output connections.

Controls and Ports:

- **Master Volume Knob:** Adjusts the overall sound output level.
- **Play/Pause Button:** Controls media playback.
- **Next/Previous Buttons:** Navigates tracks.
- **Mode Button:** Switches between input modes (Bluetooth, USB, AUX, FM Radio, Micro-SD, PA Portable).
- **LEDs Button:** Controls the integrated LED lighting effects.
- **Bass Boost Button:** Enhances low-frequency audio.
- **AUX Input (3.5mm):** Connect external audio devices.
- **MIC Input (6.5mm):** Connect the wired microphone.
- **DC 5V Charging Port:** For charging the unit.
- **TF Card Slot (MicroSD):** Insert a MicroSD card for audio playback.
- **USB Port:** Insert a USB drive for audio playback.
- **Power Switch:** Turns the unit ON/OFF.

- **Charging Indicator Light:** Indicates charging status.

SETUP

1. Charging the Unit

1. Connect the provided USB charging cable to the DC 5V charging port on the unit.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate during charging.
4. A full charge takes approximately 4 hours and provides up to 2.5 hours of playback with LEDs active.

2. Microphone Setup

- **Wired Microphone:** Insert the 6.5mm plug of the wired microphone into the MIC input port on the unit.
- **Wireless Microphone:** Ensure the wireless microphone has charged batteries. Turn on the wireless microphone. It should automatically pair with the karaoke machine.

OPERATING INSTRUCTIONS

1. Power On/Off

Slide the Power Switch to the "ON" position to turn on the unit. Slide it to "OFF" to power down.

2. Selecting Input Mode

Press the **Mode** button repeatedly to cycle through the available input modes:

- **Bluetooth:** For wireless connection to smartphones, tablets, etc.
- **USB:** For playing audio from a USB flash drive.
- **AUX:** For connecting external devices via a 3.5mm audio cable.
- **FM Radio:** For listening to FM radio stations.
- **Micro-SD (TF Card):** For playing audio from a MicroSD card.
- **PA Portable:** For public address functionality.



This image visually represents the six different audio playback modes supported by the Burletta C10, making it easy to understand the versatility of the device.

3. Bluetooth Connection

1. Turn on the karaoke machine and select Bluetooth mode using the **Mode** button.
2. On your device (smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "MASINGO C10" (or similar) from the list to pair.
4. A confirmation sound will indicate successful pairing.

4. Using Microphones

Once connected, adjust the microphone volume using the dedicated controls on the unit or the microphones themselves (if available). Sing into the microphone while playing music from your chosen source.

5. TWS (True Wireless Stereo) Function

If you have two Burletta C10 units, you can pair them for a stereo sound experience:

1. Ensure both Burletta C10 units are powered on and in Bluetooth mode.
2. On one unit, press and hold the **Mode** button.

3. The units will attempt to pair with each other. A confirmation sound will indicate successful TWS pairing.
4. Connect your device to the primary Burletta C10 via Bluetooth. Audio will now play through both units in stereo.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the unit before long periods of storage and recharge it every 3-6 months.
- **Microphone Care:** Store microphones in a safe place to prevent damage. Avoid dropping them.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the unit using the provided USB cable.
No sound from speaker	Volume is too low; incorrect input mode; device not connected.	Increase master volume. Select the correct input mode. Ensure Bluetooth device is paired or AUX/USB/TF is properly connected.
Microphone not working	Microphone is off; wired mic not fully plugged in; wireless mic not paired or low battery.	Ensure microphone is switched ON. For wired mic, check connection. For wireless mic, check battery and ensure it's paired.
Bluetooth pairing issues	Device too far; incorrect mode; interference.	Ensure device is within range (10 meters). Select Bluetooth mode on the unit. Restart both devices.

SPECIFICATIONS

- **Model:** C10
- **Brand:** MASINGO
- **Speaker Size:** 6.5 inches
- **Output Power:** 10 Watts
- **Battery Capacity:** 1500mAh (Lithium Ion)
- **Charge Time:** Approximately 4 hours
- **Battery Life:** Up to 2.5 hours with LEDs active
- **Connectivity:** Bluetooth, AUX, USB, Micro-SD (TF Card), FM Radio
- **Dimensions (L x W x H):** 7.64 x 7.44 x 11.4 inches
- **Item Weight:** 2.84 pounds
- **Power Source:** Battery Powered
- **Microphones:** 1 Wireless, 1 Wired

SUPERIOR SPEAKER: Groove to the Compact yet Powerful Sound



Speakers	6.5 inch
Speaker Output Power	10 watts
Battery Capacity	1500mAh
Charge Time	4 hours to full charge
Battery Time	2.5 hours with LEDs

This visual provides a quick reference for the technical specifications of the Burletta C10, such as its 6.5-inch speaker, 10-watt output, and 1500mAh battery.

WARRANTY AND SUPPORT

The MASINGO Burletta C10 comes with a 60-day warranty. For warranty claims, technical support, or any inquiries, please contact MASINGO customer service through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for warranty validation.

© 2025 MASINGO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CH3JJBSR>

More documents and user manuals: **<https://manuals.plus/>**