

Snakebyte SB922459

Snakebyte Xbox Gamepad Pro X (Schwarz) User Manual

Model: SB922459

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Snakebyte Xbox Gamepad Pro X (Schwarz). This wired controller is officially licensed for Xbox and compatible with PC, offering advanced features for an enhanced gaming experience.



Image 1.1: Front view of the Snakebyte Xbox Gamepad Pro X (Schwarz) controller, showcasing its black design with green accents on the thumbsticks and buttons, and the Xbox logo.

2. SETUP

Follow these steps to connect your Gamepad Pro X to your console or PC:

1. **Connect the USB Cable:** Locate the USB-C port on the top of the controller and connect the provided 3-meter USB cable.
2. **Plug into Device:** Insert the standard USB-A end of the cable into an available USB port on your Xbox console or PC.
3. **System Recognition:** Your console or PC should automatically detect the controller. For PC, drivers may install automatically. If not, ensure your operating system is up to date.
4. **Ready for Use:** Once recognized, the controller is ready for immediate use.

3. OPERATING INSTRUCTIONS

The Gamepad Pro X offers several advanced features for precise control and customization.

3.1 Hall Effect Sensors

The controller is equipped with Hall Effect sensors for both triggers and analog sticks. This technology uses magnetic fields to detect movement, providing increased precision, faster reaction times, and reduced wear compared to traditional potentiometers, minimizing stick drift.



Image 3.1: An exploded view diagram illustrating the Hall Effect sensor mechanism within a controller's thumbstick, highlighting its magnetic components for precise input.

3.2 Assignable Additional Buttons (Paddles)

Two freely assignable paddles are located on the back of the controller. These can be mapped to any standard button function without the need for external software or applications.

- **Mapping Process:** Next to each paddle, you will find a 'Command Slide' switch. Slide this switch to the desired button function (e.g., A, B, X, Y, RB, LB, RSB, LSB) you wish to assign to the corresponding paddle.
- **Instant Assignment:** The assignment is instant and stored on the controller, allowing for quick customization during gameplay.



Image 3.2: Rear view of the Snakebyte Xbox Gamepad Pro X, highlighting the two assignable paddles and the 'Command Slide' switches used for on-the-fly button remapping.

3.3 Trigger Stops

The Gamepad Pro X features adjustable trigger stops, allowing you to shorten the travel distance of the triggers. This is particularly useful in games where rapid firing or quick inputs are crucial.

- **Adjustment:** Switches on the back of the controller allow you to toggle between a full 8mm trigger pull and a super-fast 2mm trigger length.
- **Optimized Gameplay:** Select the 2mm setting for shooters to achieve quicker response times, or the 8mm setting for racing games to maintain precise acceleration control.

TRIGGER STOPS



Image 3.3: A close-up of the rear of the controller, illustrating the trigger stop mechanisms engaged to reduce trigger travel distance.

3.4 Audio Panel

An integrated audio panel on the controller provides direct control over your headset's audio settings.

- **Volume Control:** Adjust the overall volume of your headset.
- **Chat/Game Balance:** Independently control the balance between in-game audio and chat audio.
- **Mute Function:** Quickly mute your microphone.

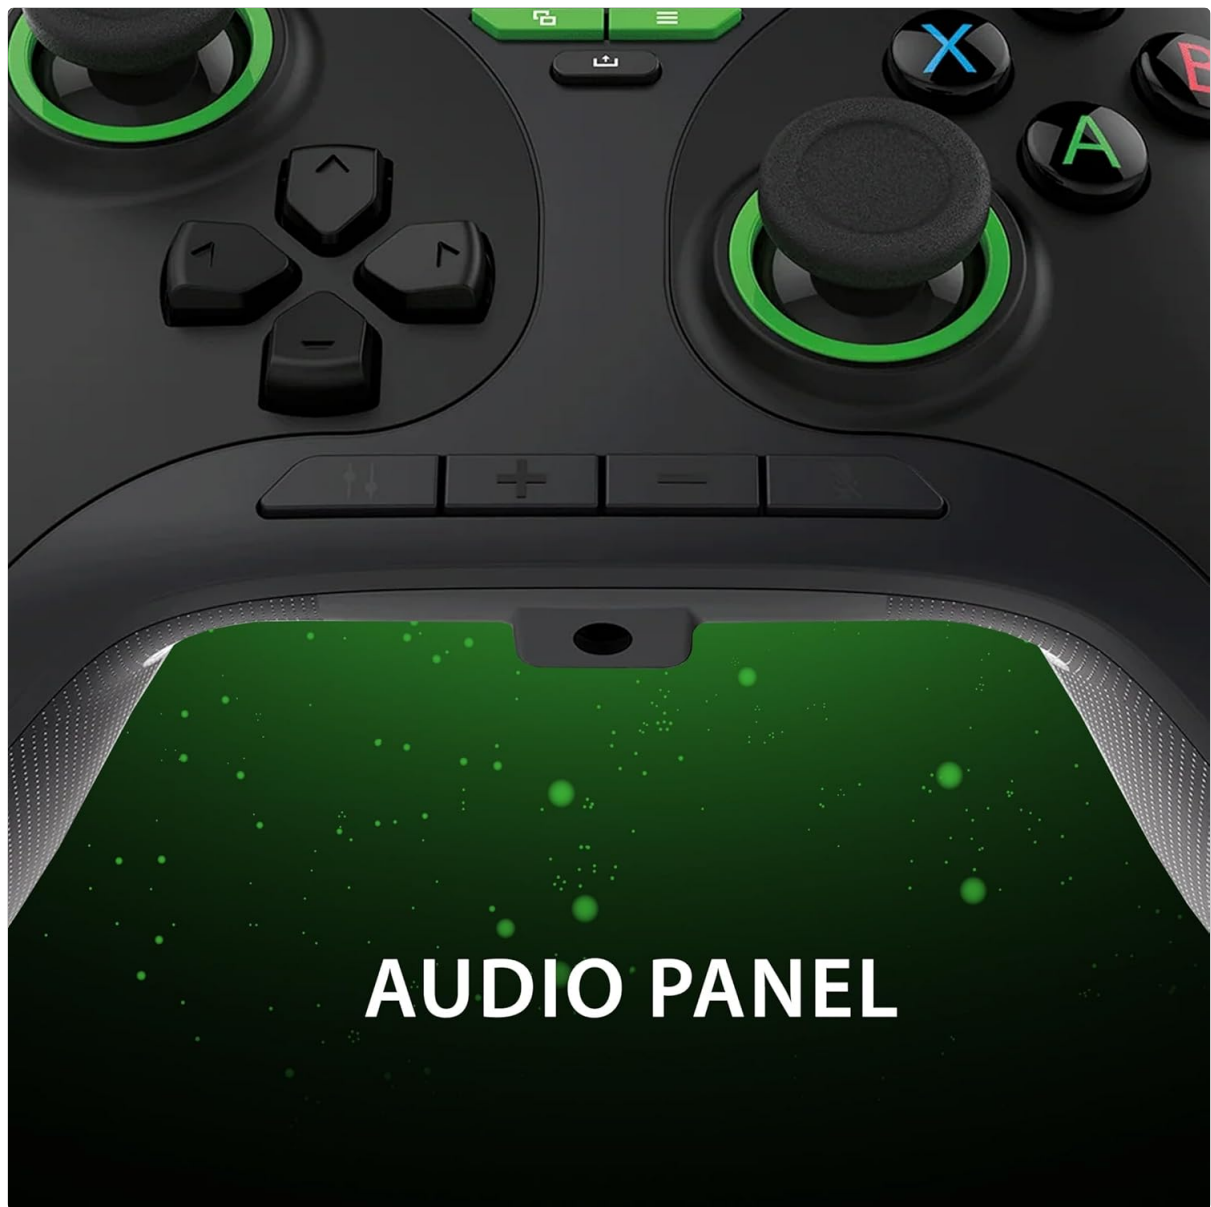


Image 3.4: A detailed view of the audio control panel located on the front of the controller, showing buttons for volume adjustment, chat/game balance, and microphone mute.

4. FEATURES OVERVIEW

- **Officially Licensed:** Designed for Xbox, ensuring full compatibility and optimal performance.
- **Wired Connection:** 3-meter cable length for a stable, lag-free connection to Xbox and PC.
- **Hall Effect Sensors:** Provides incredible precision and durability for analog sticks and triggers, reducing drift.
- **Assignable Paddles:** Two rear paddles for easy, on-the-fly button remapping without software.
- **Trigger Stops:** Adjustable trigger travel (8mm to 2mm) for optimized response in various game genres.
- **Audio Panel:** Integrated controls for headset volume, chat/game balance, and microphone mute.
- **Laser Structure Grip:** Textured surface on the controller's handles for enhanced grip and comfort during extended play sessions.



Image 4.1: A close-up view of the controller's handle, showcasing the 'Laser Structure' textured grip designed for improved handling and comfort.

5. MAINTENANCE

Proper care will ensure the longevity and optimal performance of your Gamepad Pro X.

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.
- **Cable Care:** Do not sharply bend or pull the USB cable. Store it neatly to prevent tangles and damage.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your Gamepad Pro X, try the following solutions:

- **Controller Not Responding:**
 - Ensure the USB cable is securely connected to both the controller and the console/PC.
 - Try connecting the controller to a different USB port.
 - Restart your console or PC.
 - Test the controller on another compatible device if possible to rule out a device-specific issue.
- **Buttons/Sticks Not Working Correctly:**
 - Check for any physical obstructions or debris around the buttons or sticks.
 - Ensure the 'Command Slide' switches for the paddles are set correctly if you are experiencing issues with assigned functions.
 - For PC, ensure your operating system and game drivers are up to date.
- **Audio Issues:**
 - Ensure your headset is properly plugged into the controller's 3.5mm jack.
 - Check the volume and chat/game balance settings using the audio panel on the controller.
 - Verify your headset is functioning correctly by testing it with another device.

7. SPECIFICATIONS

Feature	Detail
Model Number	SB922459
Compatibility	Xbox Series X S, Xbox One, PC
Connection Type	Wired (USB-C to USB-A)
Cable Length	3 meters
Sensor Technology	Hall Effect (Sticks & Triggers)
Additional Buttons	2 Assignable Rear Paddles (Command Slide)
Trigger Adjustment	Trigger Stops (8mm / 2mm)
Audio Features	Integrated Audio Panel (Volume, Chat/Game Balance, Mute)
Dimensions	3.94 x 1.97 x 0.5 inches
Weight	8.5 ounces

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Snakebyte website or contact their customer service directly. Warranty terms may vary based on region and retailer. It is recommended to retain your proof of purchase for any warranty claims.

For further assistance, visit the [Snakebyte Store on Amazon](#).

Related Documents



[Snakebyte GAMES: TOWER 5 for PS5 - Assembly and Safety Guide](#)

Comprehensive guide for assembling and safely using the Snakebyte GAMES: TOWER 5 storage and accessory solution for PlayStation 5. Includes product information, content list, assembly instructions, and safety precautions in multiple languages.