

[manuals.plus](#) /

› [SVAKOM](#) /

› [SVAKOM B.V. Full Body Electric Massager \(Model VIBGZ233\) User Manual](#)

SVAKOM VIBGZ233

SVAKOM B.V. Full Body Electric Massager User Manual

Model: VIBGZ233

1. INTRODUCTION

Thank you for choosing the SVAKOM B.V. Full Body Electric Massager. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before first use and retain it for future reference.

Product Overview

The SVAKOM B.V. Full Body Electric Massager is designed for personal relaxation, featuring 10 speed modes for a customizable experience. Its compact and ergonomic design makes it suitable for various body areas.



Figure 1: Svakom B.V. Full Body Electric Massager in its retail packaging.



Figure 2: The SVAKOM B.V. Full Body Electric Massager, showcasing its violet color and ergonomic shape.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x SVAKOM B.V. Full Body Electric Massager (Model VIBGZ233)
- 1 x USB Charging Cable
- 1 x Custom Suede Pouch
- 1 x User Manual (this document)

3. SAFETY INFORMATION

To ensure safe operation, please observe the following precautions:

- This device is intended for personal use only. Do not use for medical purposes.
- Consult a physician before use if you have any medical conditions, are pregnant, or have a pacemaker.
- Do not immerse the device in water. Clean with a damp cloth as instructed.

- Keep out of reach of children.
- Do not use on broken, swollen, or inflamed skin areas.
- Discontinue use immediately if you experience any discomfort or pain.
- Use only the provided USB charging cable.

4. SETUP

4.1 Initial Charging

Before the first use, it is recommended to fully charge the massager. This typically takes approximately 2 hours.

1. Connect the small end of the USB charging cable to the charging port on the massager.
2. Connect the larger end of the USB charging cable to a standard USB power adapter (not included) or a computer USB port.
3. The indicator light on the massager will illuminate during charging and change or turn off when fully charged (refer to specific product indicator behavior if available).

Note: Ensure the charging port is dry before connecting the cable.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

1. To turn the massager **ON**, press and hold the power button for approximately 3 seconds. The device will start vibrating.
2. To turn the massager **OFF**, press and hold the power button for approximately 3 seconds again. The device will stop vibrating.

5.2 Mode Selection

The massager features 10 distinct speed and vibration modes. Once the device is powered on:

- Short press the power button to cycle through the available 10 speed and vibration modes.
- Each short press will advance to the next mode. Find the mode that best suits your preference.

6. MAINTENANCE AND CARE

6.1 Cleaning

Proper cleaning ensures hygiene and extends the lifespan of your massager.

1. Before and after each use, wash the massager with water and mild soap.
2. Rinse thoroughly to remove all soap residue.
3. Dry the device completely with a clean, soft towel.

Caution: Do not use alcohol, petroleum-based cleaners, or abrasive materials, as these may damage the silicone material.

6.2 Storage

Store the massager properly to protect it from dust and damage.

- After cleaning and drying, store the massager in its custom suede pouch.
- Keep the device in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter any issues with your massager, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Massager does not turn on.	Battery is depleted.	Charge the massager for at least 2 hours.
Massager does not turn on.	Power button not pressed correctly.	Press and hold the power button for 3 seconds.
Weak or inconsistent vibration.	Low battery.	Recharge the massager.
Charging indicator light not working.	Charging cable or adapter issue.	Ensure cable is securely connected. Try a different USB port or adapter.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	SVAKOM
Model	VIBGZ233
Dimensions (L x W x H)	14.5 x 7.6 x 6.3 Centimeters
Weight	170 g
Material	Silicone
Color	Violet
Speed Modes	10
Power Source	Rechargeable (USB)
Country of Origin	United Kingdom

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This SVAKOM B.V. product is covered by a manufacturer's warranty against defects in materials and workmanship. Specific warranty terms and duration may vary by region and retailer. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your SVAKOM B.V. Full Body Electric Massager, please contact the retailer where you purchased the product or visit the official SVAKOM website for support contact details.



Figure 3: Back of the retail box with product details and certifications.

