

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Daewoo](#) /

› [Daewoo DSM-9743 Sandwich Maker User Manual](#)

## Daewoo DSM-9743

# Daewoo DSM-9743 Sandwich Maker User Manual

Model: DSM-9743

## IMPORTANT SAFEGUARDS

Please read all instructions carefully before using your Daewoo DSM-9743 Sandwich Maker. Keep this manual for future reference.

- Do not touch hot surfaces. Always use the handle when opening or closing the appliance.
- To protect against electrical shock, do not immerse the power cord, plugs, or the appliance itself in water or any other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug the appliance from the electrical outlet when not in use and before cleaning. Allow it to cool completely before handling or cleaning.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use the appliance outdoors.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to the 'off' position (if applicable), then remove the plug from the wall outlet.
- Do not use the appliance for purposes other than its intended use.

## PRODUCT OVERVIEW

The Daewoo DSM-9743 Sandwich Maker is designed for preparing delicious sandwiches quickly and easily. It features non-stick plates for effortless food release and cleaning, an indicator light to signal when the appliance is ready for use, and a compact design for convenient storage.



Image: The Daewoo DSM-9743 Sandwich Maker with its lid open, revealing the two non-stick triangular cooking plates.

## Components:

- **Non-stick Cooking Plates:** Designed for easy food release and cleaning.
- **Power/Ready Indicator Lights:** Signal when the appliance is powered on and when it has reached the optimal cooking temperature.
- **Cool-Touch Handle:** Ensures safe handling during operation.
- **Latching Mechanism:** Secures the lid during cooking.
- **Non-slip Feet:** Provides stability on your countertop.
- **Stainless Steel Housing:** Durable and easy to clean exterior.



Image: Top view of the Daewoo DSM-9743 Sandwich Maker, showing the Daewoo logo and the red (power) and green (ready) indicator lights.

## BEFORE FIRST USE

---

1. Unpack the sandwich maker and remove all packaging materials.
2. Wipe the cooking plates with a damp cloth or sponge. Dry thoroughly.
3. Wipe the exterior of the appliance with a damp cloth.
4. For the first use, it is recommended to lightly grease the non-stick plates with a small amount of cooking oil or butter. This helps condition the non-stick surface.
5. Plug in the appliance and allow it to preheat for approximately 5 minutes. A slight odor or smoke may be noticed during the first use; this is normal and will dissipate.
6. Unplug the appliance and allow it to cool completely before wiping the plates clean again.

## SETUP

---

1. Place the sandwich maker on a stable, flat, heat-resistant surface. Ensure there is adequate space around the appliance for ventilation.
2. Ensure the appliance is closed and the latching mechanism is secure.

3. Plug the power cord into a standard electrical outlet. The power indicator light (usually red) will illuminate, indicating the appliance is receiving power.

## OPERATING INSTRUCTIONS

---

1. **Preheating:** After plugging in, allow the sandwich maker to preheat. The ready indicator light (usually green) will illuminate when the appliance has reached the optimal cooking temperature.
2. **Preparing Sandwiches:**
  - Once preheated, carefully open the sandwich maker using the cool-touch handle.
  - Place your bread slices onto the bottom cooking plate.
  - Add your desired fillings. Do not overfill, as this may prevent the appliance from closing properly.
  - Place the top slices of bread.
  - Gently close the lid and secure the latching mechanism. Do not force the lid shut.
3. **Cooking:** Allow the sandwiches to cook for approximately 3-5 minutes, or until golden brown and the filling is heated through. Cooking time may vary depending on the type of bread and fillings used. The ready indicator light may cycle on and off during cooking, which is normal as the appliance maintains its temperature.
4. **Removing Sandwiches:** Once cooked, carefully open the lid. Use a heat-resistant plastic or wooden spatula to remove the sandwiches. Avoid using metal utensils, as they can damage the non-stick coating.
5. **After Use:** Unplug the appliance from the outlet and allow it to cool completely before cleaning or storing.



Image: The Daewoo DSM-9743 Sandwich Maker open, showing two sandwiches being cooked on the non-stick plates.

### Operational Video Demonstration:

**Video:** This video demonstrates the general operation of a multi-function sandwich maker, including preheating, adding ingredients, and cooking. Note that the Daewoo DSM-9743 features fixed non-stick plates, not interchangeable ones as shown in parts of this general demonstration.

**Video:** This video illustrates the process of making various items with a multi-function appliance, highlighting non-stick surfaces and indicator lights. The Daewoo DSM-9743 is specifically designed for sandwiches with its fixed non-stick plates.

### CLEANING AND MAINTENANCE

---

1. **Always unplug** the sandwich maker and allow it to cool completely before cleaning.
2. **Cleaning Plates:** The non-stick cooking plates can be wiped clean with a damp cloth or sponge. For stubborn food residue, use a small amount of mild dish soap. Do not use abrasive cleaners or scouring pads, as these can damage the non-stick surface.
3. **Cleaning Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Storage:** Once clean and dry, the Daewoo DSM-9743 Sandwich Maker can be stored vertically to save space. Ensure the cord is neatly wrapped.



Image: A close-up view of the non-stick cooking plates, emphasizing their easy-to-clean surface.

## TROUBLESHOOTING

---

- **Appliance does not turn on:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the electrical outlet is receiving power.

- **Sandwiches are not cooking evenly:**

- Ensure the appliance is fully preheated before adding sandwiches.
- Check that the bread and fillings are evenly distributed.

- **Food sticks to the plates:**

- Ensure the non-stick plates were lightly greased before use, especially for the first few uses.
- Avoid using metal utensils that can scratch the non-stick coating.

- **Lid does not close properly:**

- Do not overfill the sandwiches. Reduce the amount of filling.

## SPECIFICATIONS

---

Feature	Detail
Model	DSM-9743
Brand	Daewoo
Power	127 Watts
Voltage	120V~ (Standard for Mexico)
Frequency	60Hz (Standard for Mexico)
Dimensions (L x W x H)	22.5 x 22 x 9 cm
Weight	3 kg
Material	Stainless Steel Housing, Non-stick Cooking Plates

Special Features	Power/Ready Indicator Lights, Non-slip Base, Vertical Storage Capability, Automatic Temperature Control
------------------	---



Image: Visual representation of the Daewoo DSM-9743 Sandwich Maker's dimensions.

## WARRANTY AND SUPPORT

**Warranty:** This Daewoo DSM-9743 Sandwich Maker comes with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. Keep your purchase receipt as proof of purchase.

**Support:** For technical assistance, spare parts, or warranty claims, please contact Daewoo customer service. Contact details can typically be found on the product packaging or the official Daewoo website. You may also visit the [Daewoo Brand Store](#) for more information.