

[Manuals.plus](#) /

> [TUITA](#) /

> User Manual: TUITA Compatible Tri-Active Plus Vacuum Cleaner Brush

TUITA 432200424791-432200426091

User Manual: TUITA Compatible Tri-Active Plus Vacuum Cleaner Brush

Model: 432200424791-432200426091

1. PRODUCT OVERVIEW

Thank you for choosing the TUITA Compatible Tri-Active Plus Vacuum Cleaner Brush. This high-quality accessory is designed to enhance your vacuuming experience, providing efficient cleaning for various floor types while protecting your household surfaces. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new vacuum cleaner brush.

Key Features:

- **Durable Construction:** Made from new environmentally friendly materials, ensuring a lightweight yet robust design for ease of use and longevity.
- **Advanced Cleaning:** Features a high-quality turbo brush with rotatable joints, smooth-rolling large wheels, and durable PP bristles for effective dirt and debris collection.
- **Wet Cleaning Capability:** Equipped with a soft wiper at the bottom, facilitating easy collection of sewage during wet cleaning tasks.
- **Floor Protection:** Designed to take good care of various house floors and furniture, preventing scratches and damage.
- **Ergonomic Design:** The ergonomic handle design (referring to the overall brush structure for attachment) saves time and effort, making tough household cleaning tasks easier to manage.



Figure 1: Front view of the TUITA Compatible Tri-Active Plus Vacuum Cleaner Brush, showing the main brush head and connection point.



Figure 2: Side view of the brush, illustrating the smooth-rolling large wheels and the soft wiper at the bottom.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the vacuum cleaner brush. Failure to follow these instructions may result in damage to the product, property, or personal injury.

- Always ensure your vacuum cleaner is unplugged before attaching, detaching, or cleaning the brush.
- Do not use the brush on wet surfaces unless your vacuum cleaner is specifically designed for wet vacuuming and the brush's wiper feature is intended for such use.
- Keep fingers, hair, and loose clothing away from the rotating brush and moving parts during operation.
- Do not use the brush to pick up large, sharp, or hot objects (e.g., glass, nails, hot ashes) as this may damage the brush or vacuum.
- Store the brush in a dry, safe place away from extreme temperatures and direct sunlight.
- This product is an accessory and should only be used with compatible vacuum cleaner models.

3. SETUP AND INSTALLATION

Follow these steps to properly attach the Tri-Active Plus Vacuum Cleaner Brush to your compatible vacuum cleaner.

1. **Ensure Power Off:** Before beginning, ensure your vacuum cleaner is turned off and unplugged from the power outlet.
2. **Identify Connection Point:** Locate the attachment point on your vacuum cleaner's wand or hose. This brush is designed for standard vacuum cleaner connections.
3. **Align and Insert:** Align the connection end of the Tri-Active Plus brush with the vacuum's wand/hose opening. Gently push the brush onto the wand/hose until it clicks securely into place. Do not force the attachment.
4. **Verify Secure Fit:** Once attached, give the brush a gentle tug to ensure it is firmly connected and will not detach during use.

If you encounter difficulty, refer to your vacuum cleaner's instruction manual for specific attachment procedures for accessories.

4. OPERATING INSTRUCTIONS

The Tri-Active Plus Vacuum Cleaner Brush is designed for versatile cleaning. Here are general guidelines for its operation:

- **General Cleaning:** For everyday vacuuming on hard floors or low-pile carpets, simply move the brush head back and forth over the surface. The rotating bristles and smooth wheels ensure efficient debris collection.
- **Edge Cleaning:** The design of the brush allows for effective cleaning along edges and baseboards. Angle the brush slightly to reach these areas.
- **Wet Cleaning (if applicable):** If your vacuum cleaner supports wet vacuuming, the integrated soft wiper can assist in collecting liquids. Ensure the vacuum is set to wet mode and follow its specific instructions.
- **Maneuverability:** The rotatable joints provide excellent maneuverability, allowing you to easily navigate around furniture and obstacles.

Always operate your vacuum cleaner according to its manufacturer's instructions. This brush is an accessory and its performance is dependent on the vacuum cleaner it is attached to.

5. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your Tri-Active Plus Vacuum Cleaner Brush.

Cleaning the Brush:

1. **Disconnect:** Always disconnect the brush from the vacuum cleaner before cleaning.
2. **Remove Debris:** Regularly check the bristles for tangled hair, threads, or other debris. Use scissors or a brush cleaning tool to carefully cut and remove any obstructions.
3. **Wipe Down:** Use a damp cloth to wipe down the exterior of the brush head and the soft wiper. Do not immerse the entire brush in water.
4. **Check Wheels:** Ensure the wheels are free from debris and rotate smoothly. Remove any obstructions if necessary.
5. **Air Dry:** Allow all parts to air dry completely before reattaching the brush to your vacuum cleaner.

Storage:

Store the brush in a clean, dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

6. TROUBLESHOOTING

If you experience issues with your Tri-Active Plus Vacuum Cleaner Brush, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Brush not picking up debris effectively.	• Bristles are tangled with hair/debris. • Vacuum cleaner suction is low. • Brush is not securely attached.	• Clean bristles as per Maintenance section. • Check vacuum cleaner's dustbin, filter, and hose for blockages. • Re-attach the brush, ensuring a secure connection.
Brush making unusual noise.	• Debris caught in rotating parts or wheels. • Brush is damaged.	• Inspect and remove any debris from bristles, wheels, and rotating joints. • If damaged, discontinue use and consider replacement.
Brush not moving smoothly.	• Wheels are obstructed or damaged. • Surface is too rough for smooth gliding.	• Clean wheels and check for damage. • This brush is optimized for smooth surfaces; adjust expectations for very rough textures.

If the problem persists after attempting these solutions, please contact customer support or refer to your vacuum cleaner's manual.

7. SPECIFICATIONS

Attribute	Detail
Model Numbers	432200424791-432200426091
Brand	TUITA
Item Weight	0.035 ounces
Manufacturer	xieliqing
Material	Environmentally friendly material, PP bristles
Features	Rotatable joints, smooth rolling large wheels, soft wiper

8. WARRANTY AND SUPPORT

This product is designed for durability and performance. Specific warranty details are typically provided by the retailer or manufacturer at the time of purchase. Please retain your proof of purchase for any warranty claims.

For technical support, questions regarding compatibility, or assistance with troubleshooting beyond the scope of this manual, please contact the seller or the manufacturer directly through the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CH4H1RLG>

More documents and user manuals: <https://manuals.plus/>