

[manuals.plus](#) /

› [MASINGO](#) /

› [MASINGO Bicanto C7 Karaoke Machine User Manual](#)

MASINGO Bicanto C7

MASINGO Bicanto C7 Karaoke Machine User Manual

Model: Bicanto C7

1. INTRODUCTION

Thank you for choosing the MASINGO Bicanto C7 Karaoke Machine. This portable system is designed to deliver crystal-clear sound with its 25W speaker and vibrant LED lights, perfect for any party or family gathering. Equipped with two wireless microphones, it supports various connection modes including Bluetooth, FM Radio, USB, and MicroSD, ensuring a versatile and enjoyable singing experience.



Image: The MASINGO Bicanto C7 Karaoke Machine, showcasing its compact design, colorful front LED panel, and two accompanying wireless microphones.

2. WHAT'S IN THE Box

Please check the contents of your package to ensure all items are present:

- Bicanto C7 Karaoke Machine
- 2 Wireless Microphones
- USB Cable (for charging)
- User Manual (this document)

EVERYTHING YOU NEED FOR KARAOKE

8.7"



2x wireless microphones



1x USB-C to USB-A charging cable



1x user manual

Image: A visual representation of all items included in the Bicanto C7 package: the karaoke machine, two wireless microphones, a USB-C to USB-A charging cable, and the user manual.

3. SETUP GUIDE

3.1 Charging the Karaoke Machine

Before first use, fully charge the Bicanto C7. Connect the provided USB cable to the DC 5V charging port on the unit and to a compatible USB power adapter (not included). The charging indicator light will show the charging status.

3.2 Microphone Battery Installation

The wireless microphones require AA batteries (not included). Open the battery compartment on each microphone and insert the batteries, ensuring correct polarity (+/-). Close the compartment securely.

DUAL CRYSTAL-CLEAR WIRELESS MICS



QUICK SYNC

Instantly connect,
just power on
and sing on



BATTERY

Easy setup, power
with AA batteries
for instant use!



Image: Two hands holding the wireless microphones, highlighting their quick sync capability and easy battery setup using AA batteries.

3.3 Powering On and Initial Pairing

1. Press and hold the Power button on the Bicanto C7 unit to turn it on.
2. Turn on each wireless microphone by pressing its power button. The microphones will automatically connect to the karaoke machine.

3.4 Bluetooth Connection

1. Ensure the Bicanto C7 is in Bluetooth mode (indicated by the display or voice prompt). If not, press the 'Mode' button to cycle through modes until Bluetooth is selected.
2. On your smart device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "MASINGO C7" from the list to pair. A confirmation sound will indicate successful pairing.

3.5 Other Connection Modes

- **USB Input:** Insert a USB flash drive containing MP3 files into the USB port. The unit will automatically switch to USB mode and begin playback.

- **MicroSD Input:** Insert a MicroSD card containing MP3 files into the MicroSD slot. The unit will automatically switch to MicroSD mode and begin playback.
- **AUX Input:** Connect an external audio device using a 3.5mm AUX cable (not included) to the AUX input port. Select AUX mode using the 'Mode' button.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview



Image: A detailed view of the Bicanto C7's top control panel, showing the 6.5mm mic input, USB input, MicroSD input, DC 5V charging port, EQ button, Mode button, and volume/skip controls.

- **Power Button:** Press and hold to turn the unit on/off.
- **Mode Button:** Short press to cycle through input modes (Bluetooth, FM, USB, MicroSD, AUX).
- **Play/Pause Button:** Play or pause audio playback.
- **Previous/Volume Down (-):** Short press for previous track; long press to decrease volume.
- **Next/Volume Up (+):** Short press for next track; long press to increase volume.
- **EQ Button:** Adjust equalization settings (if available).
- **LED Button:** Cycle through different LED light patterns or turn them off.

4.2 Using the Microphones

Once paired, the wireless microphones are ready for use. Speak or sing into the microphone. Adjust the microphone volume using the controls on the unit or the microphone itself (if applicable).

4.3 Duet Functionality

With two wireless microphones, the Bicanto C7 is ideal for duets. Both microphones will transmit audio simultaneously, allowing two users to sing together.

PERFORM A DUET

With the ones you love



Image: A mother and child enjoying a karaoke duet, demonstrating the ease of use for all ages with the Bicanto C7's dual wireless microphones.

4.4 LED Light Patterns

The Bicanto C7 features a front-facing ring LED light with four pre-installed patterns. Press the 'LED' button on the control panel to cycle through these patterns and enhance the ambiance of your performance.

4.5 FM Radio Mode

To use the FM Radio function, press the 'Mode' button until FM Radio is selected. Use the skip buttons to scan for stations. The unit will automatically save found stations.

5. MAINTENANCE

5.1 Cleaning

Wipe the unit and microphones with a soft, dry cloth. Do not use abrasive cleaners or solvents. Avoid getting moisture into any openings.

5.2 Storage

When not in use, store the karaoke machine and accessories in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the unit is fully charged and periodically recharge it to maintain battery health.

5.3 Battery Care

For optimal battery life, avoid fully discharging the unit frequently. Recharge the unit when the battery indicator is low. Remove batteries from microphones if they will not be used for a long time to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the unit using the provided USB cable.
No sound from speaker	Volume is too low; incorrect mode selected; device not connected properly.	Increase volume; ensure correct input mode; re-pair Bluetooth or re-connect cable.
Microphone not working	Microphone batteries are low or incorrectly inserted; microphone not powered on.	Replace microphone batteries; ensure microphone is powered on.
Bluetooth connection issues	Device is too far; interference; unit not in pairing mode.	Move device closer; avoid obstacles; ensure unit is in Bluetooth pairing mode.

7. SPECIFICATIONS

Feature	Detail
Model	Bicanto C7
Output Wattage	25 Watts
Speaker Size	4-inch
Microphones	2 Wireless Microphones (AA battery powered)
Connectivity Technology	Bluetooth
Input Options	USB, MicroSD, AUX/MIC in
Power Source	Battery Powered (1 Lithium Ion battery included)

Feature	Detail
Battery Run Time	4-5 hours
Item Weight	3.89 pounds (1.77 Kilograms)
Product Dimensions (L x W x H)	7.09 x 7.09 x 8.66 inches
Color	Black
Manufacturer	MASINGO amasing
GTIN	05060893143937



8. WARRANTY AND SUPPORT


For warranty information and customer support, please refer to the documentation included with your purchase or visit the official MASINGO website. You can also find additional resources and contact information on the [MASINGO Brand Store on Amazon](#).

A digital version of the user manual is available for download:[User Manual \(PDF\)](#).

© 2023 MASINGO. All rights reserved.


Related Documents - Bicanto C7

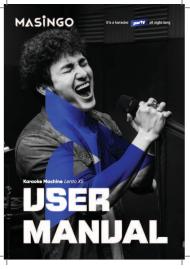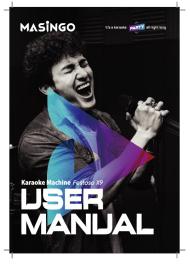	<p>Masingo Lento X5 Karaoke Machine User Manual</p> <p>Comprehensive user manual for the Masingo Lento X5 Karaoke Machine. Learn about setup, operation, features like Bluetooth connectivity, wireless microphones, PA system functionality, LED lights, and troubleshooting for an optimal party experience.</p>
	<p>Masingo Festoso X9 Karaoke Machine User Manual</p> <p>Comprehensive user manual for the Masingo Festoso X9 Karaoke Machine, covering setup, features, operation, troubleshooting, and maintenance.</p>

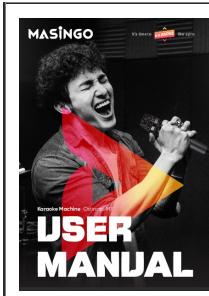


[Masingo Ostinato M7 Karaoke Machine User Manual](#)

Comprehensive user manual for the Masingo Ostinato M7 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting for a superior karaoke experience.

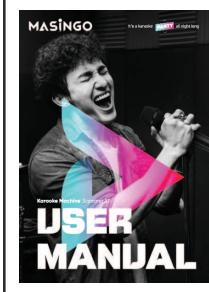


[Masingo Soprano X1 Karaoke Machine User Manual](#)

User manual for the Masingo Soprano X1 Karaoke Machine, detailing its features, setup, operation, maintenance, and troubleshooting. Learn how to connect devices, use microphones, and enjoy your karaoke experience.

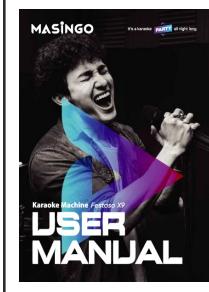

[MASINGO Festoso X9 Karaoke Machine User Manual](#)

Comprehensive user manual for the MASINGO Festoso X9 Karaoke Machine, detailing setup, features, operation, app usage, and troubleshooting.

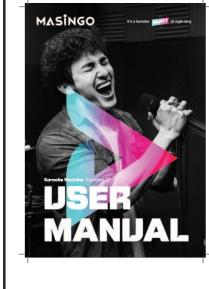

[Masingo Soprano X1 Karaoke Machine User Manual](#)

User manual for the Masingo Soprano X1 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting for this portable PA system with wireless microphones.