

[Manuals.plus](#) /

› [Waterpik](#) /

› Waterpik Ultra Plus and Cordless Pearl Water Flosser Combo Pack User Manual

Waterpik WF-13CD010 / WP-150

Waterpik Ultra Plus and Cordless Pearl Water Flosser Combo Pack User Manual

Brand: Waterpik

Model: WF-13CD010 / WP-150

1. PRODUCT OVERVIEW

The Waterpik Ultra Plus and Cordless Pearl Water Flosser Combo Pack provides next-level oral care for healthier gums and brighter teeth. This combo includes two distinct water flossers designed for both home and travel use, offering comprehensive cleaning and plaque removal.

Key Features:

- Ultra Plus Performance Water Flosser with 10 Pressure Settings
- Cordless Pearl Rechargeable Water Flosser for Small Bathrooms and Travel
- Includes 5 Accessory Tips for various dental needs
- USB Charger and Cordless Pearl Travel Bag included
- American Dental Association (ADA) Seal of Acceptance



Image: The Waterpik Ultra Plus and Cordless Pearl Water Flosser Combo Pack, showcasing both the countertop unit and the portable cordless unit.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions before using this product. When using electrical products, especially when children are present, basic safety precautions should always be followed.

- Always follow the instructions provided in the user manual.
- Keep the device away from water while charging.
- Do not use the device if you have any medical conditions that affect your mouth or gums without first consulting a dental professional.
- Always use the device with the tip provided and do not modify or replace the tip with any other object.

3. SETUP & ASSEMBLY

3.1. Ultra Plus Water Flosser Setup:

1. Assemble the device by ensuring all components are securely connected.
2. Fill the reservoir with water. For best results and to preserve the machine, use filtered water.
3. Select your desired accessory tip and insert it into the handle until it clicks into place.
4. Plug the unit into a suitable electrical outlet.

3.2. Cordless Pearl Water Flosser Setup:

1. Charge the device using the provided USB charger. Ensure the device is dry before charging.

2. Fill the reservoir with water. For best results and to preserve the machine, use filtered water.
3. Select your desired accessory tip and insert it into the handle until it clicks into place.



Image: The product packaging for the Waterpik Ultra Plus and Cordless Pearl Water Flosser Combo Pack, highlighting included accessories and features.

4. OPERATING INSTRUCTIONS

4.1. Using the Ultra Plus Water Flosser:

1. Once assembled and filled, select a pressure setting using the 0-10 pressure dial on the unit. Start with a low setting and gradually increase as comfortable.
2. Place the tip in your mouth, leaning over the sink.
3. Turn on the device using the power switch.
4. Guide the tip along your gumline, pausing briefly between teeth. Allow water to flow into the sink.
5. Continue until all areas have been cleaned.

4.2. Using the Cordless Pearl Water Flosser:

1. With the device charged and filled, select a pressure setting. This model typically has fewer pressure options than the Ultra Plus.
2. Place the tip in your mouth, leaning over the sink.
3. Turn on the device using the power switch.
4. Move the tip along your gumline, ensuring to clean all tooth surfaces and gum areas.
5. Continue until the reservoir is empty or all areas are cleaned.

4.3. Accessory Tips:

The combo pack includes 5 accessory tips, each designed for specific oral care needs:

- **Classic Jet Tips:** For general use.
- **Plaque Seeker™ Tip:** Best for implants, crowns, bridges, and retainers.
- **Pik Pocket™ Tip:** Designed for periodontal pockets and furcations. Use with low pressure.
- **Orthodontic Tip:** Ideal for braces and general use, designed to clean around wires and brackets.

5. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your Waterpik Water Flossers.

1. After each use, empty any remaining water from the reservoir.
2. Clean the tip by rinsing it under warm water.
3. Wipe down the exterior of the unit with a soft, damp cloth.
4. Periodically clean the reservoir with warm, soapy water. For thorough cleaning, you may use a solution of white vinegar and water to descale the unit if mineral buildup occurs.
5. Store the unit and tips in a clean, dry place. The Ultra Plus unit has a convenient tip tray for storage.

6. TROUBLESHOOTING

If you encounter any issues with your Waterpik Water Flosser, please refer to the following general advice. For specific problems not listed here, or if issues persist, contact Waterpik Customer Support.

- **No Water Flow:** Ensure the reservoir is filled, the tip is securely inserted, and the unit is powered on. Check for any kinks in the hose (Ultra Plus).
- **Weak Pressure:** Verify the pressure setting is appropriate. Clean the tip and reservoir for any mineral buildup that might be obstructing flow.
- **Unit Not Charging (Cordless Pearl):** Ensure the USB charger is properly connected to both the unit and a power source. Check the charging indicator light.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	12 x 15 x 20 inches
Item Weight	3.49 pounds
Manufacturer	Waterpik
ASIN	B0CH5HZX62
Item Model Number	WF-13CD010 / WP-150
Power Source	Battery Powered (Cordless Pearl), Corded Electric (Ultra Plus)
Special Feature	Portable, Multiple Tips
Product Benefits	Removes Plaque
Color	White
Certifications	ADA Accepted

8. WARRANTY AND SUPPORT

Waterpik products are manufactured to high-quality standards and are backed by a manufacturer's warranty. For detailed warranty information, product registration, or technical support, please visit the official Waterpik website or contact their customer service directly.

For further assistance, you may also refer to the [product page on Amazon](#).