

Sur La Table B0CH5Z698R

SUR LA TABLE KITCHEN ESSENTIALS Multifunctional Air Fryer Toaster Oven User Manual

Model: Multifunctional Air Fryer Toaster Oven (ASIN: B0CH5Z698R)

Brand: Sur La Table

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs. Always use oven mitts or pot holders when handling hot materials.
- To protect against electrical shock, do not immerse cord, plug, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that can catch fire or melt.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

2. PRODUCT OVERVIEW

The Sur La Table Kitchen Essentials Multifunctional Air Fryer Toaster Oven is designed for versatile cooking, offering 7 preset functions in a compact design.

2.1 Components and Controls



Image: Front view of the Sur La Table Multifunctional Air Fryer Toaster Oven, showcasing its sleek design and control knobs.

- Temperature Control Knob:** Used to set the desired cooking temperature.
- Function/Mode Knob:** Selects the cooking mode (Air Fry, Bake, Roast, Broil, Toast, Keep Warm, Pizza).
- Timer Knob:** Sets the cooking time.
- Large Clear View Window:** Allows monitoring of food without opening the door.
- Innovative Air Circulation System:** Ensures even cooking and crispy results, especially for air frying.

2.2 Included Accessories

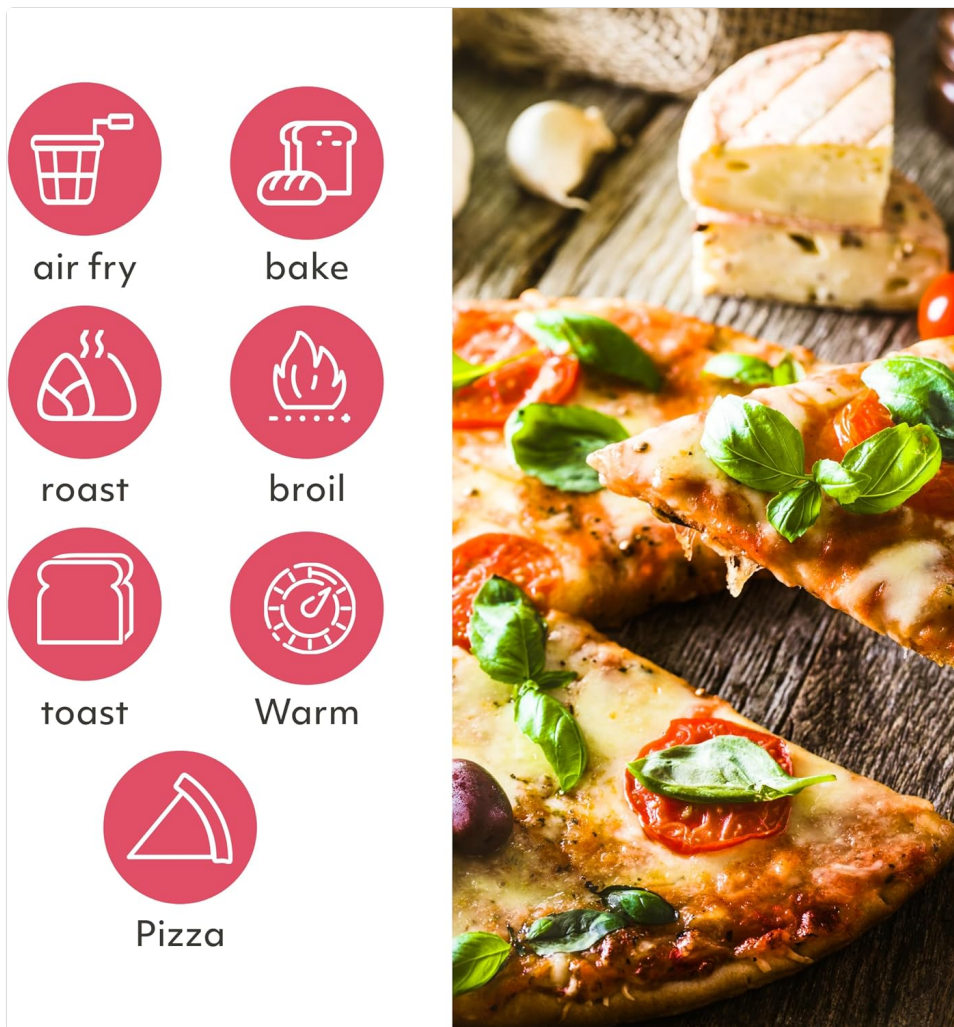


Image: A display of the four main accessories included with the oven: an air fryer basket, a baking tray, an oven rack, and a crumb tray, all designed for easy cleaning.

- **Air Fryer Basket:** Ideal for air frying foods, allowing hot air to circulate evenly. Dishwasher safe.
- **Baking Tray:** Suitable for baking, roasting, and broiling. Dishwasher safe.
- **Oven Rack:** For general baking and toasting, can be placed at different levels. Dishwasher safe.
- **Crumb Tray:** Collects crumbs and drips for easy cleaning. Dishwasher safe.

3. SETUP

3.1 Unpacking and Initial Cleaning

1. Carefully remove the oven and all accessories from the packaging.
2. Remove any packing materials, stickers, or labels from the unit.
3. Wash the Air Fryer Basket, Baking Tray, Oven Rack, and Crumb Tray in warm, soapy water. Rinse and dry thoroughly. These accessories are dishwasher safe.
4. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
5. Ensure the crumb tray is properly inserted at the bottom of the oven.

3.2 Placement

- Place the oven on a stable, level, heat-resistant surface.
- Ensure there is at least 4-6 inches of space on all sides of the oven for proper air circulation. Do not place directly against a wall or under cabinets.

- Do not place the oven near flammable materials such as curtains or drapes.
- Plug the power cord into a standard 120V AC electrical outlet.

4. OPERATING INSTRUCTIONS

This air fryer toaster oven offers 7 versatile cooking functions. Always preheat the oven for optimal results, especially for baking and air frying.

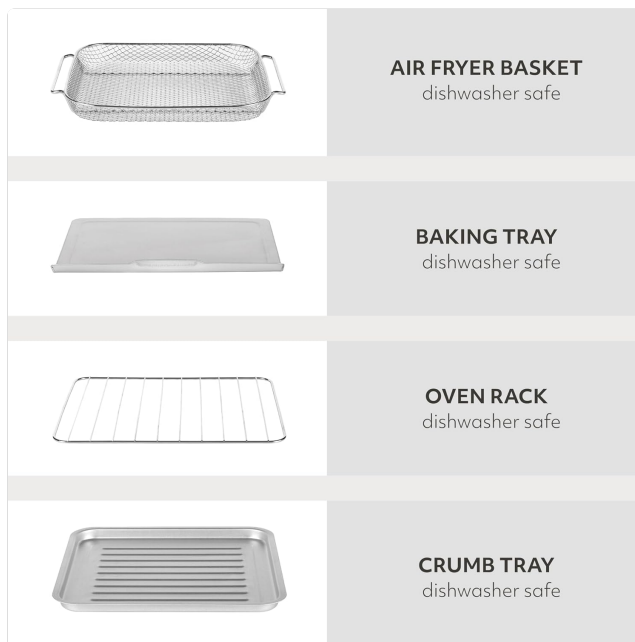


Image: Visual representation of the 7 cooking presets available on the appliance, including Air Fry, Bake, Roast, Broil, Toast, Warm, and Pizza.

4.1 General Operation

1. Place food on the appropriate accessory (baking tray, air fryer basket, or oven rack).
2. Insert the accessory into the desired rack position inside the oven.
3. Close the oven door.
4. Turn the Function/Mode knob to select your desired cooking function.
5. Turn the Temperature Control knob to set the desired temperature.
6. Turn the Timer knob to set the cooking time. The oven will begin heating.
7. A bell will sound when the cooking cycle is complete. Turn all knobs to "OFF" and unplug the unit when finished.

4.2 Specific Cooking Functions

- **Air Fry:** Use the air fryer basket for best results. Ideal for crispy foods like fries, chicken wings, and vegetables. Requires minimal oil.
- **Bake:** Perfect for cakes, cookies, casseroles, and other baked goods. Use the baking tray or an oven-safe dish on the oven rack.
- **Roast:** Suitable for roasting meats, poultry, and vegetables. Use the baking tray.
- **Broil:** For browning the top of dishes, melting cheese, or cooking thin cuts of meat. Place food on the baking tray on the top rack. Monitor closely to prevent burning.
- **Toast:** For toasting bread, bagels, or waffles. Use the oven rack. Adjust time for desired browning.
- **Keep Warm:** Maintains food at a serving temperature without further cooking.
- **Pizza:** Optimized setting for cooking pizzas. Use the baking tray or place pizza directly on the oven rack.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and various cooking functions of the Sur La Table Air Fryer Toaster Oven, including accessory usage

and control settings.

5. COOKING TIPS

- **Preheating:** Always preheat the oven for 5-10 minutes before cooking, especially for baking and air frying, to ensure even cooking and optimal results.
- **Do Not Overcrowd:** For air frying, avoid overcrowding the basket. Cook in smaller batches if necessary to allow hot air to circulate freely, ensuring crispiness.
- **Oil Usage:** For air frying, a light coating of oil (e.g., olive oil spray) can enhance crispiness, but is often not required.
- **Shake/Flip:** For air-fried items, shake the basket or flip food halfway through cooking for more even browning.
- **Check Doneness:** Cooking times may vary. Always use a food thermometer to ensure meats are cooked to a safe internal temperature.
- **Use Appropriate Cookware:** Only use oven-safe cookware made of metal, glass, or ceramic.

6. CLEANING AND MAINTENANCE

Regular cleaning will help maintain the performance and longevity of your air fryer toaster oven.

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Crumb Tray:** Remove the crumb tray and discard accumulated crumbs. Wash the crumb tray in warm, soapy water or place it in the dishwasher.
3. **Accessories:** The Air Fryer Basket, Baking Tray, and Oven Rack are dishwasher safe. For stubborn food residue, soak in warm, soapy water before cleaning.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For baked-on grease, a non-abrasive cleaner can be used. Avoid abrasive sponges or metal scouring pads.
5. **Exterior:** Wipe the exterior of the oven with a damp cloth. Do not use abrasive cleaners or polishes.
6. **Door:** Clean the glass door with a glass cleaner or damp cloth. Do not use abrasive cleaners or metal tools that could scratch the glass.
7. **Storage:** Ensure the oven is clean and dry before storing. Store in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure plug is securely in outlet; check circuit breaker; turn timer past 10 minutes to activate.
Food not cooking evenly.	Oven not preheated; food overcrowded; incorrect rack position.	Preheat oven before cooking; cook in smaller batches; adjust rack position as needed.
Excessive smoke during cooking.	Food residue or grease buildup; high-fat foods.	Clean crumb tray and interior thoroughly; trim excess fat from food; use less oil for air frying.
Food is not crispy when air frying.	Basket overcrowded; insufficient cooking time/temperature; too much moisture in food.	Do not overcrowd basket; increase cooking time or temperature slightly; pat food dry before cooking.

8. SPECIFICATIONS

- **Brand:** Sur La Table
- **Model Name:** Multifunctional Air Fryer Toaster Oven
- **ASIN:** B0CH5Z698R
- **Color:** Gray
- **Product Dimensions:** 16.8"D x 14.7"W x 10.6"H
- **Item Weight:** 17.61 pounds
- **Control Type:** Knob
- **Special Feature:** Programmable (7 Presets)
- **Power Source:** AC adapter or DC power supply (Implies standard wall plug, 1500W as per product title)
- **Door Material Type:** Tempered Glass
- **UPC:** 810115940616



Image: A diagram illustrating the dimensions of the air fryer toaster oven: 16.8 inches in length, 14.7 inches in width, and 10.6 inches in height.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Sur La Table website. Keep your purchase receipt for warranty claims.

For further assistance, you may contact Sur La Table customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question