

iWALK DBL4500NC

iWALK DBL4500NC Portable USB-C Power Bank Instruction Manual

Model: DBL4500NC

INTRODUCTION

Thank you for choosing the iWALK DBL4500NC Portable USB-C Power Bank. This compact and lightweight power bank is designed to provide fast and convenient charging for your compatible devices on the go. Please read this manual carefully to ensure proper usage and to maximize the lifespan of your device.

KEY FEATURES

- **20W Fast Charging:** Delivers rapid power to compatible devices, charging an iPhone 15 Pro from 0% to 50% in approximately 30 minutes.
- **4,500mAh Capacity:** Provides sufficient power for a full charge of many smartphones.
- **Built-in USB-C Connector:** Direct plug-in design eliminates the need for extra cables for compatible devices.
- **18W High-Speed Recharging:** Supports fast recharging of the power bank itself via its dual USB-C port.
- **Pass-Through Technology:** Allows simultaneous charging of the power bank and a connected device.
- **LED Indicator Lights:** Displays the remaining battery level of the power bank.
- **Compact and Lightweight Design:** Easily fits into pockets, purses, or bags for convenient portability.
- **Safety Features:** Incorporates a self-developed safe circuit design to prevent overheating and ensure a secure charging experience.

PACKAGE CONTENTS

- 1x iWALK DBL4500NC Portable USB-C Power Bank (4,500 mAh)
- 1x USB-C to USB-C Cable
- 1x User Manual

SETUP AND RECHARGING THE POWER BANK

Before first use, fully charge your iWALK DBL4500NC Power Bank.

1. **Check Battery Level:** Press the power button on the side of the power bank. The LED indicator lights will illuminate to show the current charge level. Each light typically represents a percentage of charge.
2. **Connect Charging Cable:** Use the provided USB-C to USB-C cable. Insert one end into the USB-C input port on the side of the power bank.
3. **Connect to Power Source:** Plug the other end of the USB-C cable into a compatible USB-C wall adapter (not included) or a computer's USB-C port. For fastest recharging, use an 18W or higher power adapter.
4. **Monitor Charging:** The LED indicator lights will blink during charging and remain solid when fully charged.



Image: The iWALK DBL4500NC Portable USB-C Power Bank in black, showing its compact design.

OPERATING INSTRUCTIONS

To charge your device using the iWALK DBL4500NC Power Bank:

1. **Remove Connector Cap:** Carefully remove the protective cap from the built-in USB-C connector.
2. **Connect to Device:** Plug the built-in USB-C connector directly into your compatible smartphone, tablet, or other device's USB-C charging port.
3. **Initiate Charging:** The power bank should automatically begin charging your device. If not, press the power button on the side of the power bank to activate charging.
4. **Monitor Charging:** Your device's screen will indicate that it is charging. The power bank's LED lights will show its remaining battery level.
5. **Disconnect:** Once your device is charged, or you wish to stop charging, simply unplug the power bank from your device. Replace the protective cap on the USB-C connector.

20W PD
Let's Fast Charge



iPhone 16 Pro



*Data is sourced from lab testing, actual results may vary.

Image: The iWALK power bank connected to and fast charging an iPhone 16 Pro.



iPhone 15 Portable Charger

Small and Lightweight with Fast Charging

Image: The iWALK power bank shown next to a lipstick, illustrating its small and portable size.

COMPATIBILITY

The iWALK DBL4500NC Portable USB-C Power Bank is compatible with a wide range of devices featuring a USB-C charging port. This includes, but is not limited to:

- iPhone 15 Series (iPhone 15, iPhone 15 Plus, iPhone 15 Pro, iPhone 15 Pro Max)
- iPhone 16 Series (iPhone 16, iPhone 16 Plus, iPhone 16 Pro, iPhone 16 Pro Max)
- iPhone 17 Series (iPhone 17, iPhone 17 Plus, iPhone 17 Pro, iPhone 17 Pro Max)
- iPad models with USB-C ports
- AirPods with USB-C charging cases
- Android phones such as Samsung Galaxy S22 Ultra series, S23, S24, S25, Google Pixel, OnePlus, and Huawei devices with USB-C ports.

Note: This power bank is designed for devices with a USB-C port. It is not compatible with older iPhone models that use a Lightning connector.

Built-In USB-C Connector

Not Applicable * iPhone 14/iPhone 13/iPhone 12/iPhone 11
/iPhone XS/iPhone XR/iPhone X/iPhone 8, 7, 6, SE

iPhone 16/15 Series



Type-C / USB-C



iPhone 16 Pro Max / iPhone 16 Pro
iPhone 16 Plus / iPhone 16



iPhone 15 Pro Max / iPhone 15 Pro
iPhone 15 Plus / iPhone 15

SAMSUNG



S23 Ultra/
S23+/S23



S22 Ultra/
S22+/S22



S21/
S20+/S10



S9/S8



Note 10/9



Z Flip/Fold



Pixel8 Pro/8



Pixel7 Pro/7

GOOGLE

iPad Pro/Air



Image: A visual guide detailing the compatibility of the iWALK power bank with various smartphone and tablet models featuring USB-C connectors.

SPECIFICATIONS

| Feature | Detail |
|--------------------|---|
| Model Number | DBL4500NC |
| Battery Capacity | 4500 Milliamp Hours (mAh) |
| Output Power | 20W Fast Charging |
| Input Power | 18W (for recharging the power bank) |
| Connector Type | USB Type C (Built-in) |
| Product Dimensions | 0.39 x 0.39 x 0.39 inches |
| Item Weight | 6.3 ounces |
| Special Features | Fast Charging, LED Indicator Lights, Lightweight, Pocket Size, Short Circuit Protection |

TROUBLESHOOTING

- **Device not charging:**

- Ensure the power bank is sufficiently charged. Press the power button to check LED indicators.
- Verify the USB-C connector is fully inserted into your device's charging port.
- Press the power button on the power bank to initiate charging if it doesn't start automatically.
- Check if your device is compatible with a USB-C connector.

- **Power bank not recharging:**

- Ensure the USB-C to USB-C cable is securely connected to both the power bank and the power adapter/source.
- Verify the wall adapter or USB-C port is functional. Try a different adapter or port.

- **Slow charging:**

- Ensure your device supports 20W fast charging.
- When recharging the power bank, use an 18W or higher power adapter for optimal speed.
- Avoid using your device extensively while charging, as this can slow down the charging process.

- **Overheating:**

- It is normal for the power bank to become slightly warm during use.
- If it becomes excessively hot, disconnect it immediately from both the power source and your device. Allow it to cool down before further use.

MAINTENANCE AND CARE

- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** Use a soft, dry cloth to clean the exterior of the power bank. Do not use liquid cleaners or aerosols.
- **Avoid Drops:** Protect the device from drops and impacts, which can damage internal components.
- **Water Exposure:** Keep the power bank away from water and moisture.
- **Regular Use:** For optimal battery health, use and recharge the power bank regularly. Avoid leaving it fully discharged or fully charged for extended periods.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official iWALK website. Keep your purchase receipt for warranty claims.

If you have questions or require assistance, please contact iWALK customer service.