

U-SIM 4GPro Unlock SIM-Card

MobilePhone USIM Unlocking Card User Manual

Model: U-SIM 4GPro Unlock SIM-Card

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your MobilePhone USIM Unlocking Card. This product is designed to facilitate the unlocking of specific Phone models, allowing them to be used with different mobile carriers. Please read this manual thoroughly before attempting to use the device.

PRODUCT OVERVIEW

The MobilePhone USIM Unlocking Card is an ultra-thin smart-decodable chip designed to work in conjunction with your existing SIM card to unlock carrier-locked Phone devices. It is compatible with Phone 11, 12, 13, Pro Max, and XR models.



Image: The MobilePhone USIM Unlocking Card shown alongside its retail packaging, which features a phone screen graphic and the text "Rantim www.usimlte.com". The image also shows the unlocking chip itself, indicating it can be used either as a standalone chip or integrated into a card.



Image: A close-up view of the USIM Unlocking Card chip positioned within a standard SIM card tray, alongside a regular SIM card. This illustrates how the unlocking chip is intended to be placed with the user's SIM card.

IMPORTANT CONSIDERATIONS BEFORE USE

- **Carrier Knowledge:** It is crucial to know your phone's original carrier before attempting to use this unlocking card. The product may not function correctly if the carrier information is unknown.
- **Compatibility:** This product is specifically designed for Phone 11, 12, 13, Pro Max, and XR models. Ensure your device is one of these compatible models.
- **Purpose:** This product is solely for SIM-Card unlocking purposes. It does not address other phone-related issues.

SETUP INSTRUCTIONS

1. **Prepare Your Phone:** Ensure your Phone is powered off before beginning the installation process.

2. **Locate SIM Tray:** Use a SIM ejector tool to open the SIM card tray on your Phone.
3. **Insert Unlocking Card:** Carefully place the MobilePhone USIM Unlocking Card into the SIM tray. It is designed to fit alongside your existing SIM card.



Image: A detailed view showing the USIM Unlocking Card being carefully placed into the SIM card tray of a mobile phone. This demonstrates the correct orientation and positioning for installation.

4. **Insert SIM Card:** Place your mobile SIM card on top of or next to the unlocking card within the SIM tray, ensuring both are correctly seated.

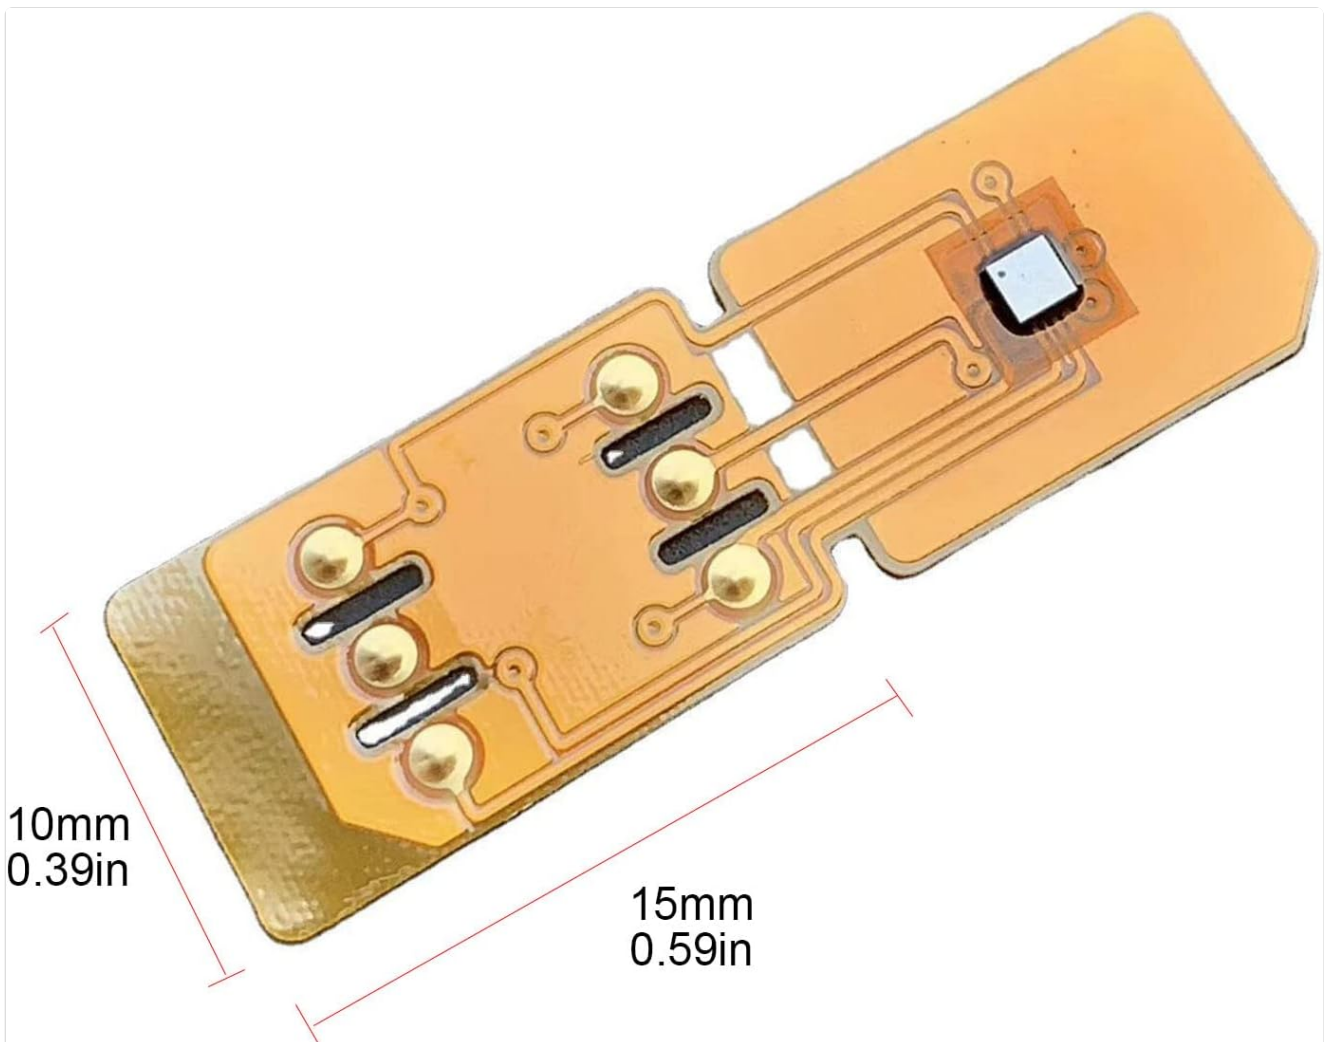


Image: The USIM Unlocking Card and a standard SIM card are shown fully inserted into a mobile phone's SIM tray, ready for insertion into the phone. This illustrates the combined setup.

5. **Reinsert SIM Tray:** Gently slide the SIM tray back into your Phone until it is fully closed.
6. **Power On:** Power on your Phone.

OPERATING INSTRUCTIONS

After inserting the unlocking card and your SIM, the phone should attempt to unlock directly. Follow any on-screen prompts that may appear.

- **Initial Unlock Attempt:** The device is designed for "Plug-unlock directly." This means upon powering on, the phone should recognize the unlocking card and attempt to bypass the carrier lock.
- **ICCID Update (If Needed):** If the initial unlock attempt is unsuccessful, you may need to update the ICCID number. This process typically involves navigating through specific menus that appear on your phone after inserting the unlocking card. Refer to online resources or support forums for detailed steps on updating ICCID for your specific Phone model and carrier.

TROUBLESHOOTING

- **"No Service" or "Invalid SIM" Error:**
 - Ensure the unlocking card and your SIM card are correctly seated in the SIM tray.
 - Restart your Phone.
 - Verify that you know your phone's original carrier. Incorrect carrier information can prevent unlocking.

- Attempt to update the ICCID number as described in the Operating Instructions.
- **Phone Not Recognizing Unlocking Card:**
 - Check for any physical damage to the unlocking card.
 - Ensure the SIM tray is fully and correctly inserted into the phone.
- **Unlocking Process Fails Repeatedly:**
 - Confirm your Phone model is listed as compatible (Phone 11/12/13/ProMax/XR).
 - Seek assistance from online communities or the seller if the issue persists.

MAINTENANCE

The MobilePhone USIM Unlocking Card requires minimal maintenance. Follow these guidelines to ensure its longevity:

- **Handling:** Handle the unlocking card carefully by its edges to avoid touching the gold contacts or the chip itself.
- **Storage:** When not in use, store the card in a clean, dry, and static-free environment, preferably in its original packaging or a protective case.
- **Cleaning:** If necessary, gently wipe the gold contacts with a clean, dry, lint-free cloth. Do not use liquids or abrasive materials.
- **Avoid Bending:** Do not bend or apply excessive force to the card, as this can damage the internal circuitry.

SPECIFICATIONS

Product Specifications

Feature	Detail
Product Type	USIM Unlocking Card
Compatibility	Phone 11, 12, 13, Pro Max, XR models
Material	Metal
Function	SIM-Card Carrier Unlock
Dimensions (Approximate)	15mm (0.59in) length, 10mm (0.39in) width

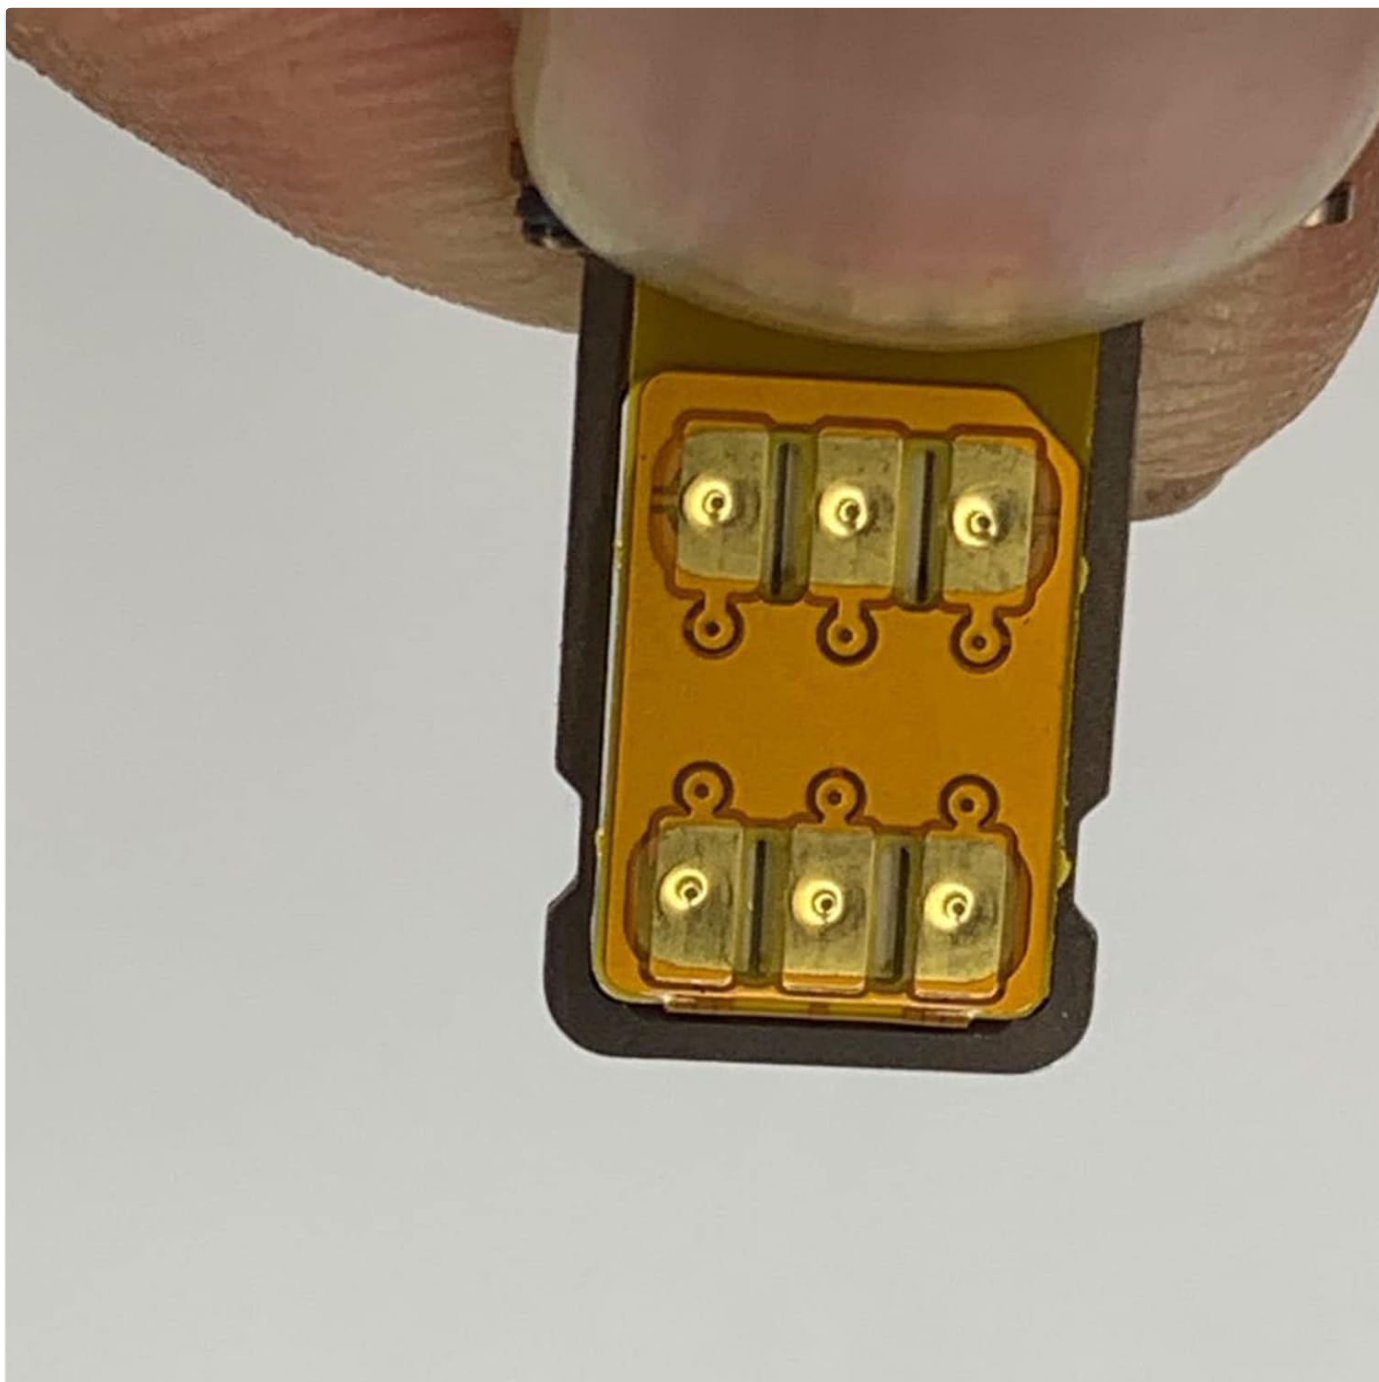


Image: A close-up view of the USIM Unlocking Card with measurements indicating its approximate length (15mm or 0.59in) and width (10mm or 0.39in).

WARRANTY AND SUPPORT

As this product is listed under a "Generic" brand, specific warranty information may not be readily available. For support regarding this MobilePhone USIM Unlocking Card, please refer to the seller from whom you purchased the product. They can provide assistance with troubleshooting and any product-related inquiries.

For general information or common issues, online forums and communities dedicated to phone unlocking may offer valuable insights and solutions.

