

[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Elegant Electric Rice Cooker (Model 33957) User Manual

AGARO 33957

AGARO Elegant Electric Rice Cooker User Manual

Model: 33957

PRODUCT OVERVIEW

The AGARO Elegant Electric Rice Cooker is designed for efficient and convenient cooking of rice and steaming of various foods. With a 1-liter capacity, it can cook up to 700 grams (approximately 5 cups) of raw rice, making it suitable for small to medium-sized households. This 400W appliance features an automatic boiler, a dedicated steamer pot, a removable aluminum cooking pot, a stainless steel lid, and a 'Keep Warm' function to maintain food temperature after cooking. It also includes auto cut-off and dry boiling protection for safety.

1 L capacity
aluminium inner pot

Cooks up to 700 gms
(approx. 5 cups) of
raw rice



Image: The AGARO Elegant Electric Rice Cooker in red, showcasing its compact design and a serving of freshly cooked rice.

AGARO

Rice Cooker Model: Elegant

- 1L Capacity
- Cooks up to 700 gms (approx. 5 cups) of raw rice
- Aluminum pot & Steamer



Image: Overview of the AGARO Elegant Rice Cooker highlighting its 1L capacity and included aluminum pot and steamer.

WHAT'S IN THE BOX

Upon unpacking, please ensure all the following components are present:

- Main Unit (Rice Cooker Base)
- Cooking Pot (1L Aluminium Anodised)
- Steamer Pot
- Spatula
- Measuring Cup
- Trivet Plate
- Detachable Power Cord

In the box



Image: All included components of the rice cooker, including the main unit, cooking pot, steamer, lid, measuring cup, and spatula.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the cooking pot, steamer pot, lid, spatula, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the unit.
4. **Connect Power:** Insert the detachable power cord into the power inlet on the main unit, then plug the other end into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Cooking Rice

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of raw rice.
2. **Wash Rice:** Rinse the rice thoroughly under running water until the water runs clear.
3. **Add to Pot:** Place the washed rice into the aluminum cooking pot.
4. **Add Water:** Add the appropriate amount of water. A common ratio is 1 cup of rice to 1.5-2 cups of water, but adjust according to rice type and desired consistency. The cooking pot has a water level indicator for guidance.
5. **Place Pot:** Place the cooking pot into the main unit, ensuring it sits correctly on the heating element.
6. **Cover:** Place the stainless steel lid securely on the cooking pot.
7. **Start Cooking:** Press the 'Cook' switch down. The red 'Cook' indicator light will illuminate.
8. **Automatic Switch-off:** Once the rice is cooked, the cooker will automatically switch to the 'Keep Warm' function, and the orange 'Warm' indicator light will illuminate.
9. **Serve:** Allow the rice to rest for 5-10 minutes in 'Keep Warm' mode before serving for best results. Use the provided spatula to fluff and serve.



Cook and keep warm function

Red- Cooking

Orange- Keep Warm. Once the food is cooked, keep warm function will get activated

Image: The control panel showing the 'Cook' (red) and 'Warm' (orange) indicator lights.

Steaming Food

The included steamer pot allows for simultaneous steaming of vegetables, fish, or other items while rice is cooking below.

1. **Prepare Rice:** Follow steps 1-5 for cooking rice.
2. **Place Steamer:** Place the steamer pot on top of the cooking pot containing rice and water.
3. **Add Food:** Place your desired food items (e.g., vegetables, dumplings) into the steamer pot.
4. **Cover:** Place the stainless steel lid securely over the steamer pot.
5. **Start Cooking:** Press the 'Cook' switch down. The steam generated from the cooking rice will cook the food in the steamer.
6. **Monitor:** Cooking times for steamed food vary. Monitor the food and remove it once done.

0.5L Steamer pot

Steams veggies, fish & meat effortlessly



Image: The rice cooker with the steamer pot in place, ready for steaming vegetables.

Watch these official videos for a visual guide on using your AGARO Elegant Electric Rice Cooker. Please note: Video embedding is based on available seller-provided content. If a video is a 'preview' and less than 7 seconds, it is only included if genuinely useful.

Video: A detailed demonstration of the AGARO Elegant Electric Rice Cooker, highlighting its features and ease of use.

Your browser does not support the video tag.

Video: A quick guide on how to cook rice and steam momos using the AGARO Elegant Electric Rice Cooker.

CARE AND MAINTENANCE

Proper care ensures the longevity and optimal performance of your rice cooker.

- **Cleaning the Cooking Pot and Steamer:** The aluminum cooking pot and steamer pot are removable and should be hand washed with warm, soapy water after each use. Avoid abrasive cleaners or scouring pads that can damage the non-stick surface.
- **Cleaning the Lid:** The stainless steel lid can be hand washed. Ensure the steam vent is clear of any food residue.
- **Cleaning the Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid. Ensure the power cord is unplugged before cleaning.
- **Storage:** Ensure all parts are completely dry before storing. Store the rice cooker in a cool, dry place.



Image: The close-fit stainless steel lid, designed to prevent steam leakage and overflow.

Aluminum trivet

Prevents sticking & burning
of rice at bottom



Image: The cool-touch handle, allowing for safe handling even when the cooker is hot.

TROUBLESHOOTING

If you encounter any issues with your AGARO Elegant Electric Rice Cooker, please refer to the following common solutions:

- **Cooker not turning on:** Ensure the power cord is securely plugged into both the cooker and the wall outlet. Check if the outlet is functioning correctly.
- **Rice not cooking properly:** Verify that the correct rice-to-water ratio is used. Ensure the lid is properly sealed.
- **Rice sticking to the bottom:** Ensure the cooking pot is clean and free from previous residue. The included trivet plate can help prevent sticking.
- **Water overflowing:** Do not overfill the cooking pot beyond its maximum capacity. Ensure the lid is properly placed.

For persistent issues or concerns not addressed here, please contact AGARO customer support.



Detachable power cord

The detachable power cord makes the cooker portable & convenient to use.

Image: The aluminum trivet, which helps prevent rice from sticking or burning at the bottom of the pot.

SPECIFICATIONS

Feature	Detail
Brand	AGARO
Model Name	33957
Capacity	1 Litre (cooks up to 700 gms / approx. 5 cups raw rice)
Wattage	400 Watts
Voltage	230 Volts
Product Dimensions	28D x 23W x 28H Centimeters
Item Weight	1500 Grams (1 kg 500 g)
Material	Aluminium (Cooking Pot), Stainless Steel (Lid)
Special Feature	Automatic Shut Off, Keep Warm Function
Power Source	Corded Electric (Detachable Power Cord)
Product Care Instructions	Hand Wash

Close fit stainless lid

Prevents from steam leakage,
lathering and overflow of rice.



Image: The detachable power cord, enhancing portability and ease of use.

WARRANTY AND SUPPORT

The AGARO Elegant Electric Rice Cooker comes with a **2-year warranty** from the date of purchase, covering manufacturing defects. Please retain your purchase receipt for warranty claims.

For technical assistance, warranty service, or any product-related inquiries, please contact AGARO customer support through their official website or the contact information provided in your product packaging.

© 2026 AGARO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question