



Manuals.plus /

- › MINISO /
- › MINISO Disney 100 Celebration 9-inch Wall Clock User Manual

## MINISO Disney 100 Celebration 9-inch Wall Clock (B0CH9NKP35)

# MINISO Disney 100 Celebration 9-inch Wall Clock User Manual

Model: Disney 100 Celebration 9-inch Wall Clock (B0CH9NKP35)

## 1. INTRODUCTION

---

This manual provides instructions for the setup, operation, and maintenance of your MINISO Disney 100 Celebration 9-inch Wall Clock. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: Front view of the MINISO Disney 100 Celebration Wall Clock, highlighting its colorful character design and clear analog display.

## 2. SAFETY INFORMATION

---

- Keep out of reach of small children to prevent choking hazards from small parts or batteries.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Use only the specified battery type (1 AA battery).
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Do not attempt to disassemble or repair the clock yourself. Contact customer support if issues arise.

## 3. PACKAGE CONTENTS

---

Please check that all items are present and in good condition:

- MINISO Disney 100 Celebration 9-inch Wall Clock (x1)

- User Manual (x1)

*Note: 1 AA battery is required and not included in the package.*

## 4. SETUP

---

### 4.1 Installing the Battery

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.



Image 4.1: Rear view of the clock, illustrating the battery compartment and wall mounting hook.

### 4.2 Mounting the Clock

1. Choose a suitable location on a wall for the clock. Ensure it is a stable surface and away from direct heat or

moisture.

2. Use a nail or screw (not included) appropriate for your wall type. Ensure it is securely fastened.
3. Hang the clock using the integrated hanging slot on the back of the clock, ensuring it is level and stable.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Setting the Time

1. After installing the battery, locate the time setting knob on the back of the clock, usually a small wheel or dial.
2. Gently turn the knob in either direction to move the clock hands to the correct time.
3. Avoid forcing the hands directly, as this may damage the clock mechanism.



Image 5.1: Detail of the clock face and hands, illustrating the analog time display.

## 6. MAINTENANCE

---

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the AA battery annually or when the clock starts losing time.
- **Storage:** If storing the clock for an extended period, remove the battery to prevent corrosion.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Battery is dead or incorrectly installed.	Replace the battery with a new AA battery, ensuring correct polarity.
Clock runs slow or fast	Battery is low.	Replace the battery with a new AA battery.
Hands are stuck	Obstruction or internal mechanism issue.	Gently check if anything is obstructing the hands. If not, contact customer support. Do not force the hands.

## 8. SPECIFICATIONS

**Brand:** MINISO

**Model:** Disney 100 Celebration 9-inch Wall Clock

**Color:** White

**Display Type:** Analog

**Movement:** Quartz

**Power Source:** 1 x AA Battery (not included)

**Product Dimensions:** Approximately 8.74"W x 8.74"H (9-inch diameter)

**Item Weight:** 0.62 Pounds

**Mounting Type:** Wall Mount

**Indoor/Outdoor Usage:** Indoor only

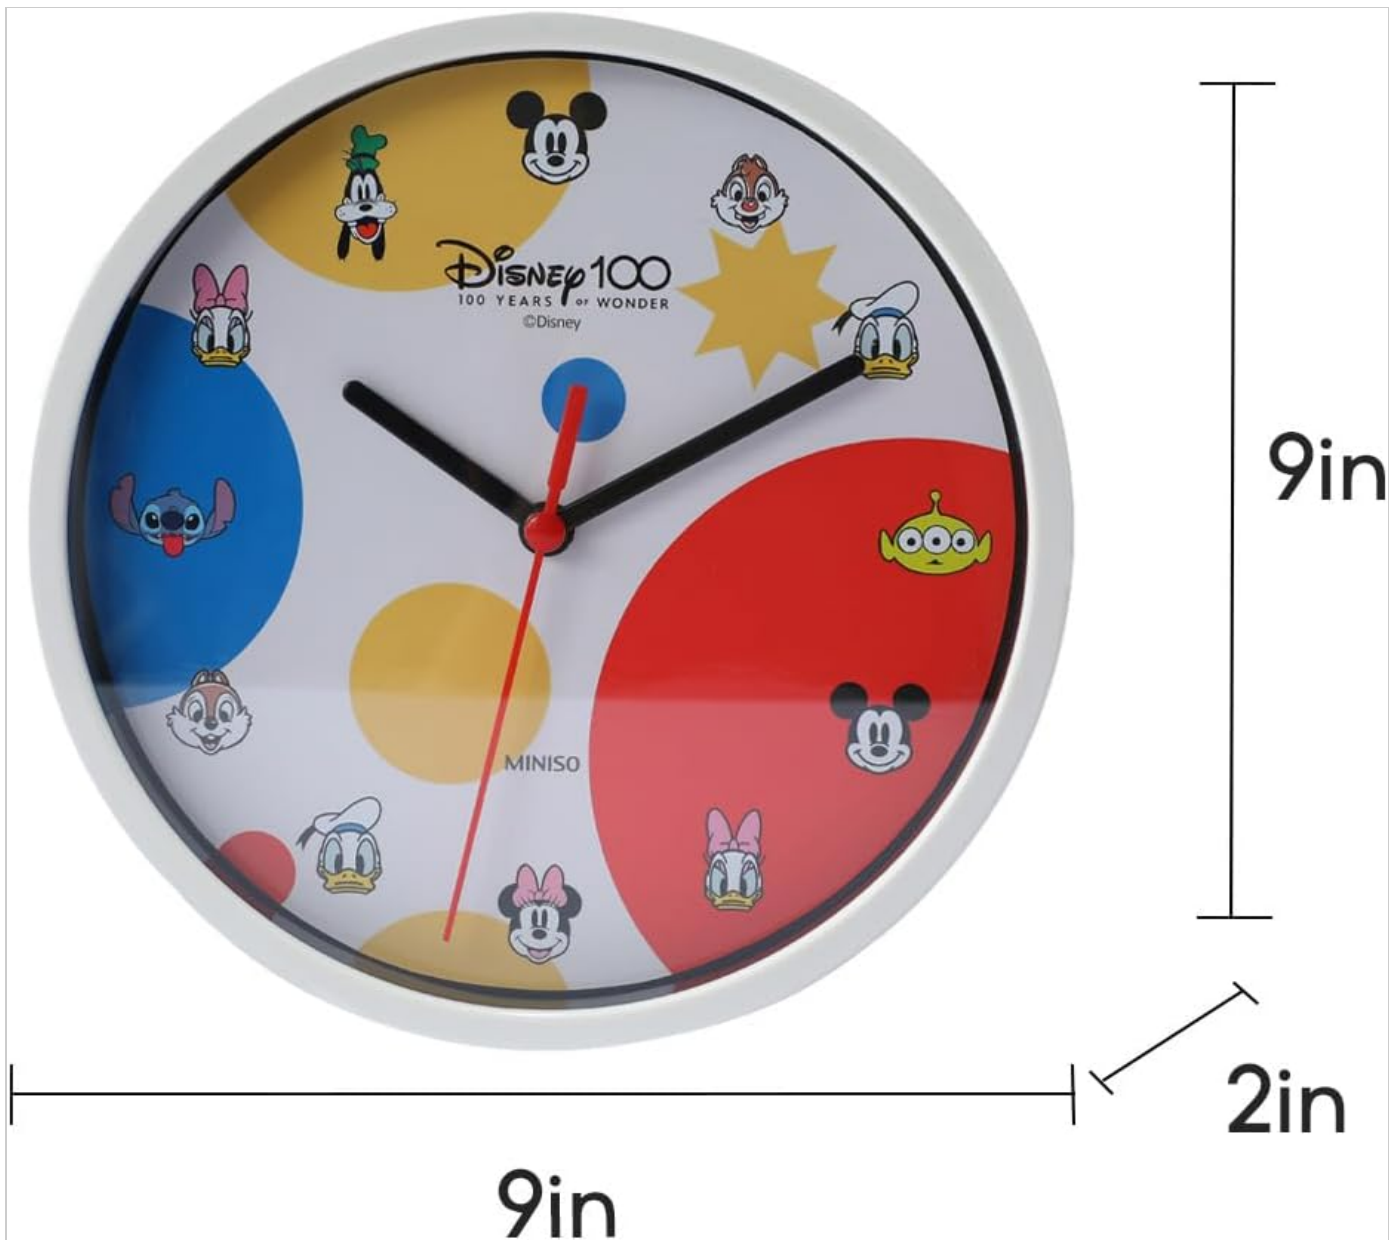


Image 8.1: Clock dimensions for reference.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's return policy or contact MINISO customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, visit the official MINISO website or contact their customer support channels.

